

REVIT PURE LIVE #036

Mastering Revit Dimensions



DIMENSION PACKAGE

 
- eBook + DYNAMO SCRIPTS + SAMPLE

-AVAILABLE NOW

- ORDER AT:

learn.revitpure.com/dimensions

revitpure.com/bundle

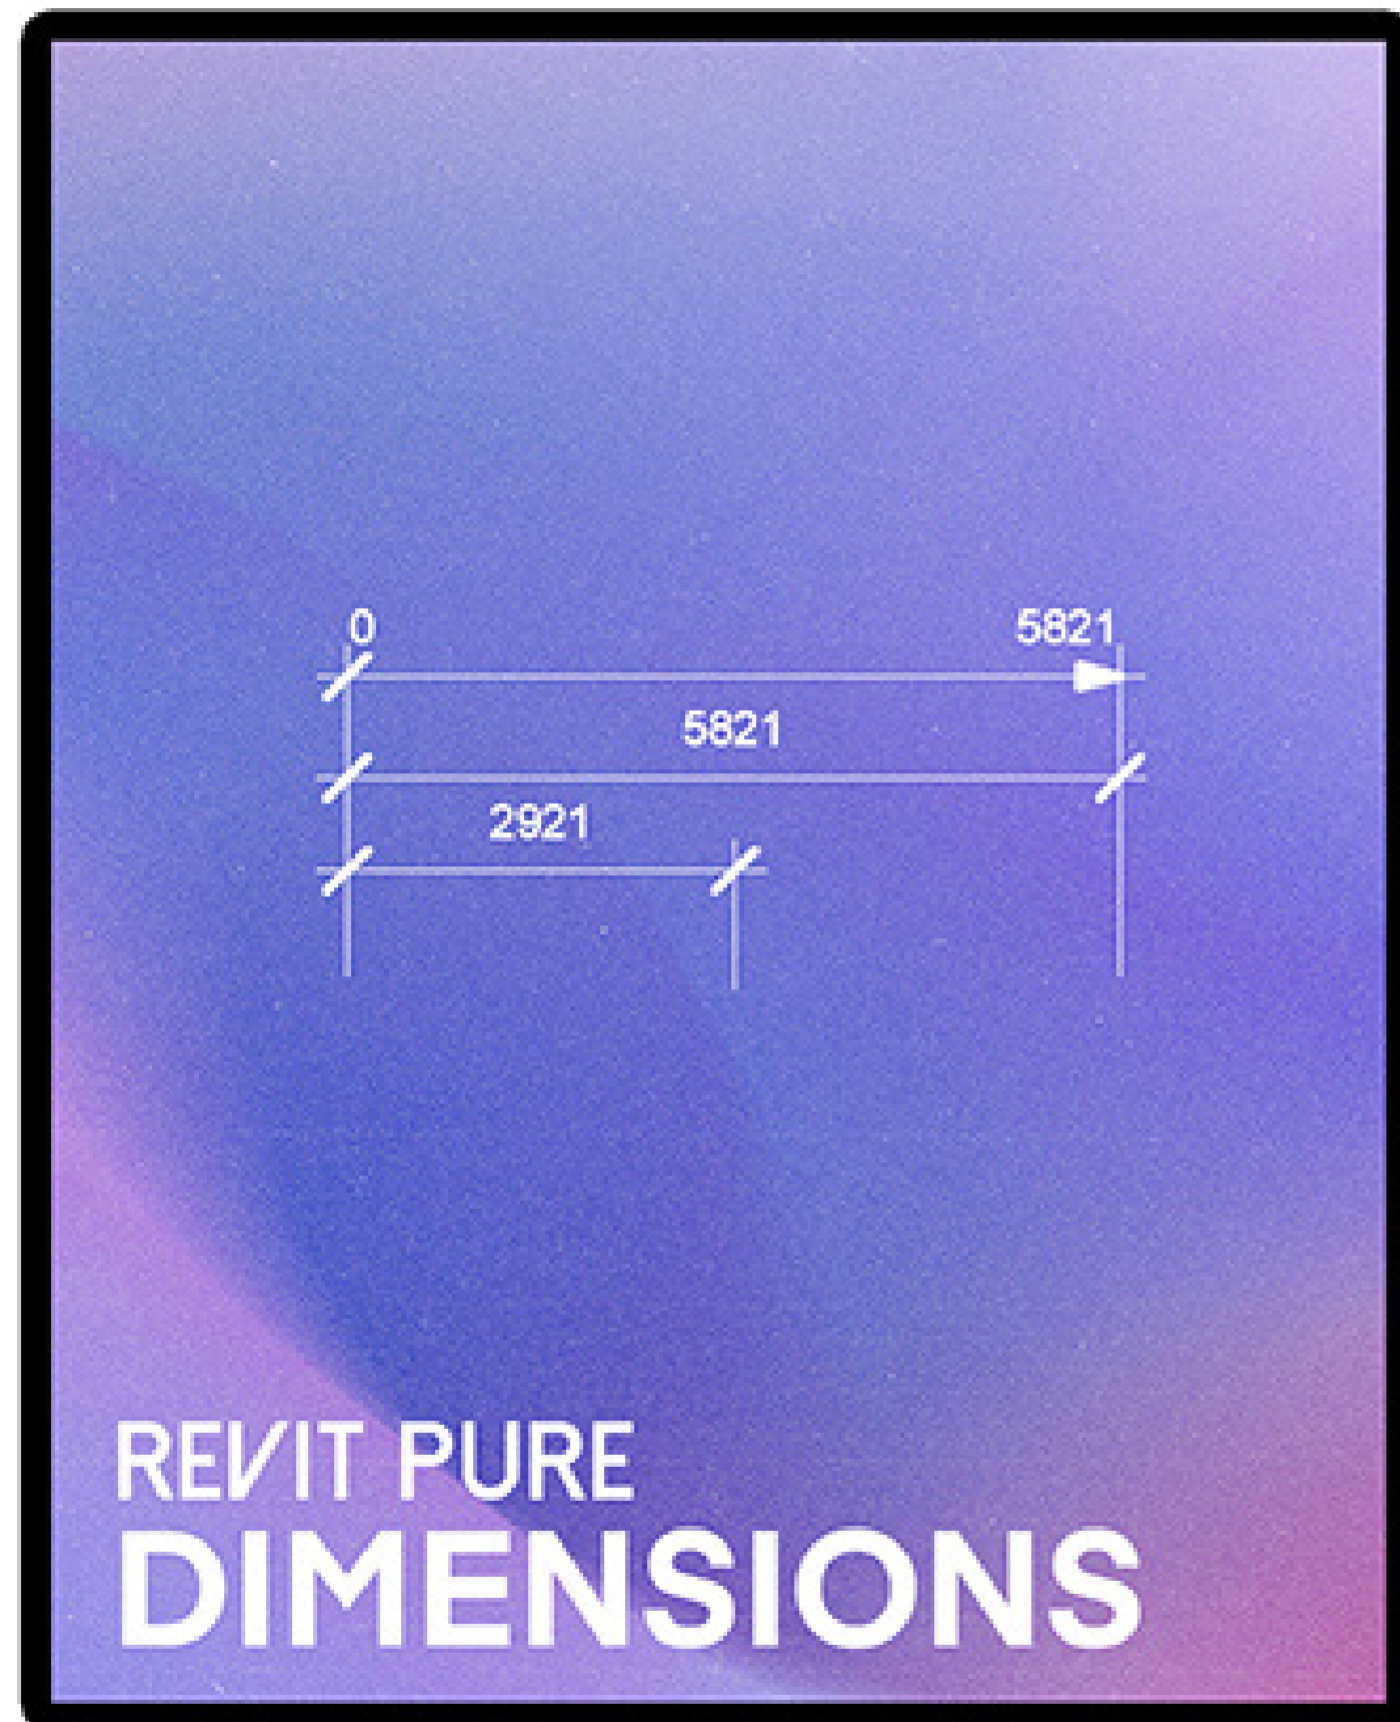


REVIT PURE LIVE #036
NICOLAS CATELLIER

LEARNING PACKAGES FOR REVIT


25% OFF + BONUS
UNTIL JUNE 6TH



 
BASICS

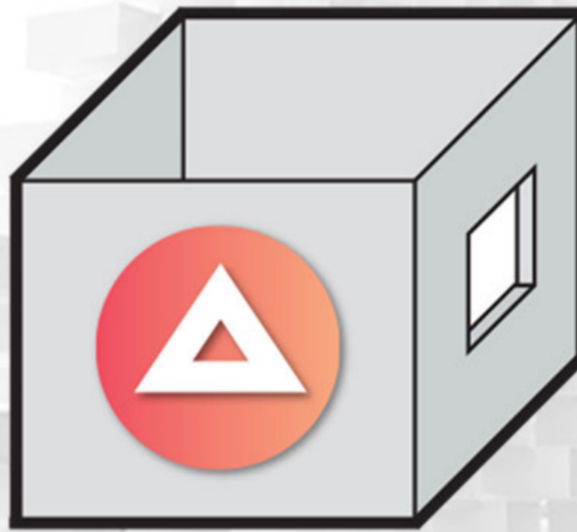

DESIGN

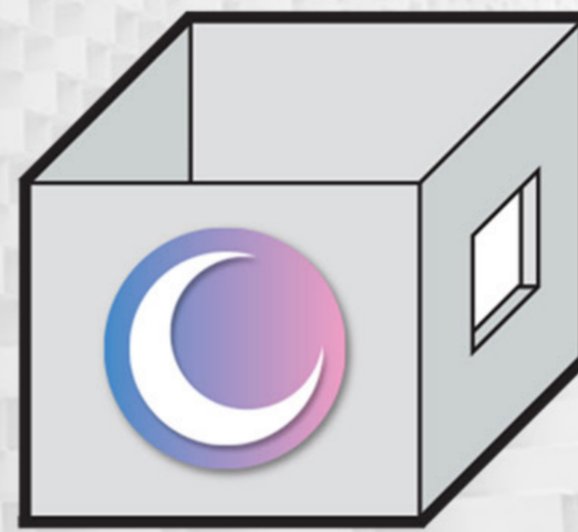 

MANAGE

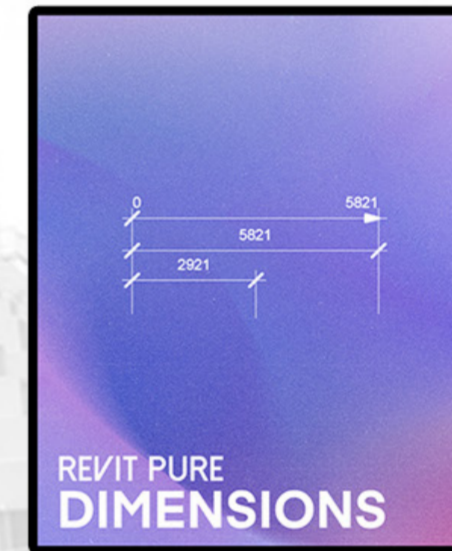 





BONUS:
DIMENSION

revitpure.com/bundle




REVIT PURE LIVE #036
NICOLAS CATELLIER

    BASIC FEATURES

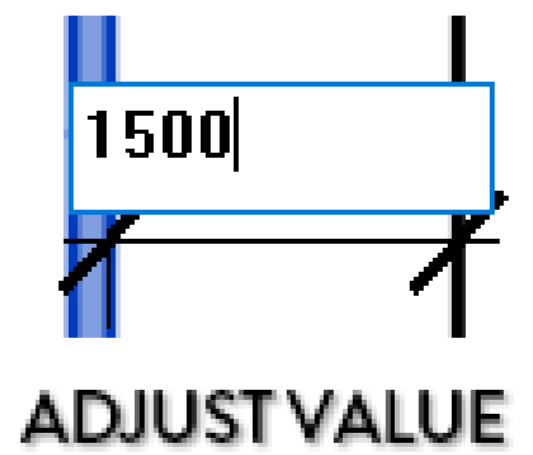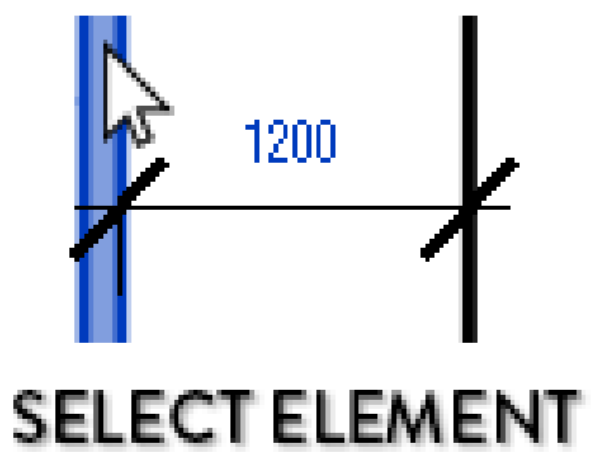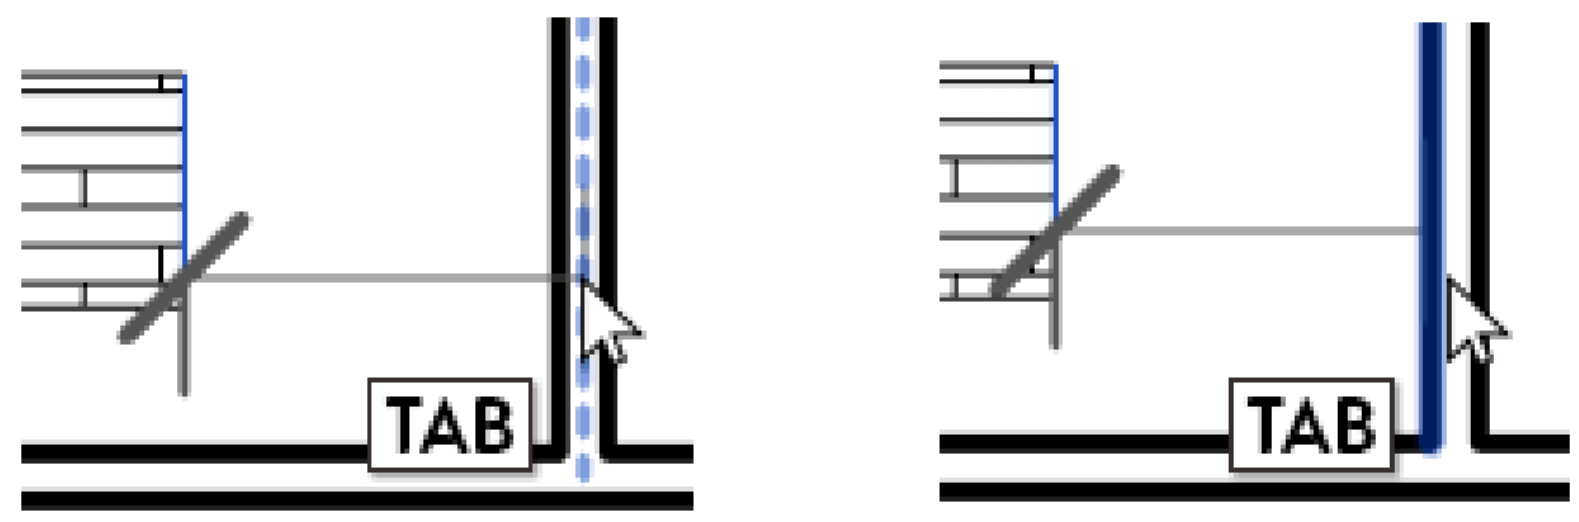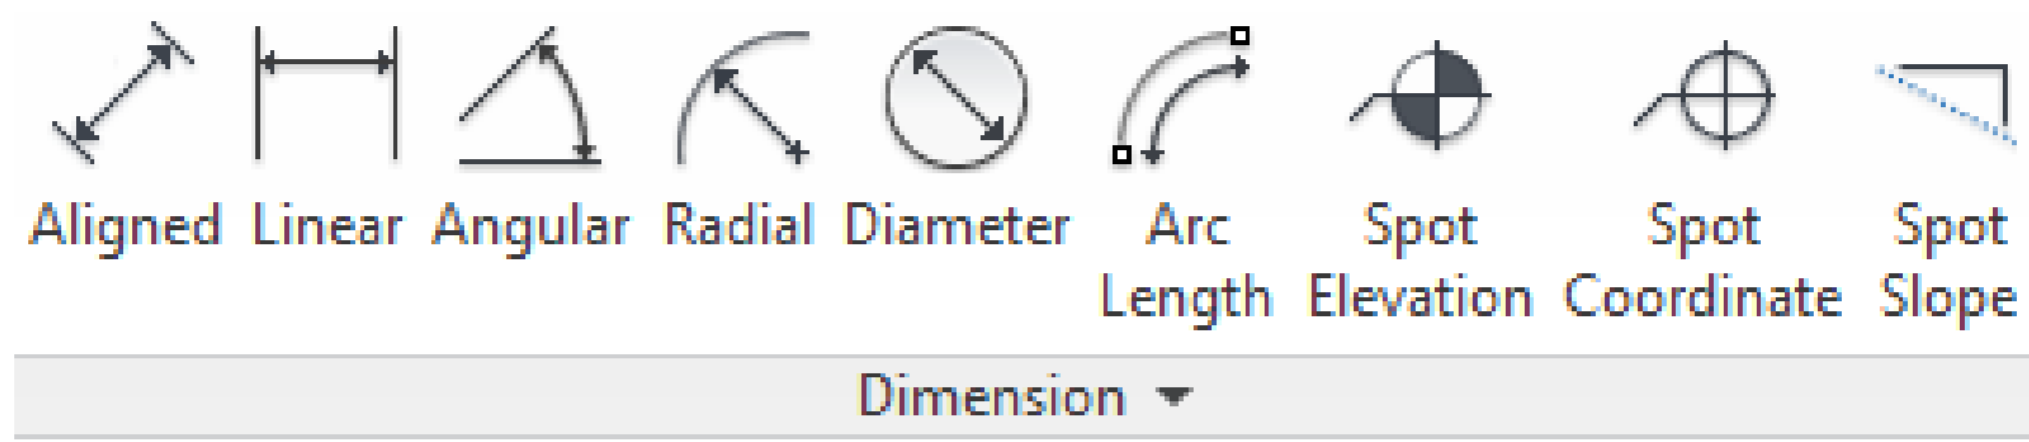


EDIT WITNESS LINES

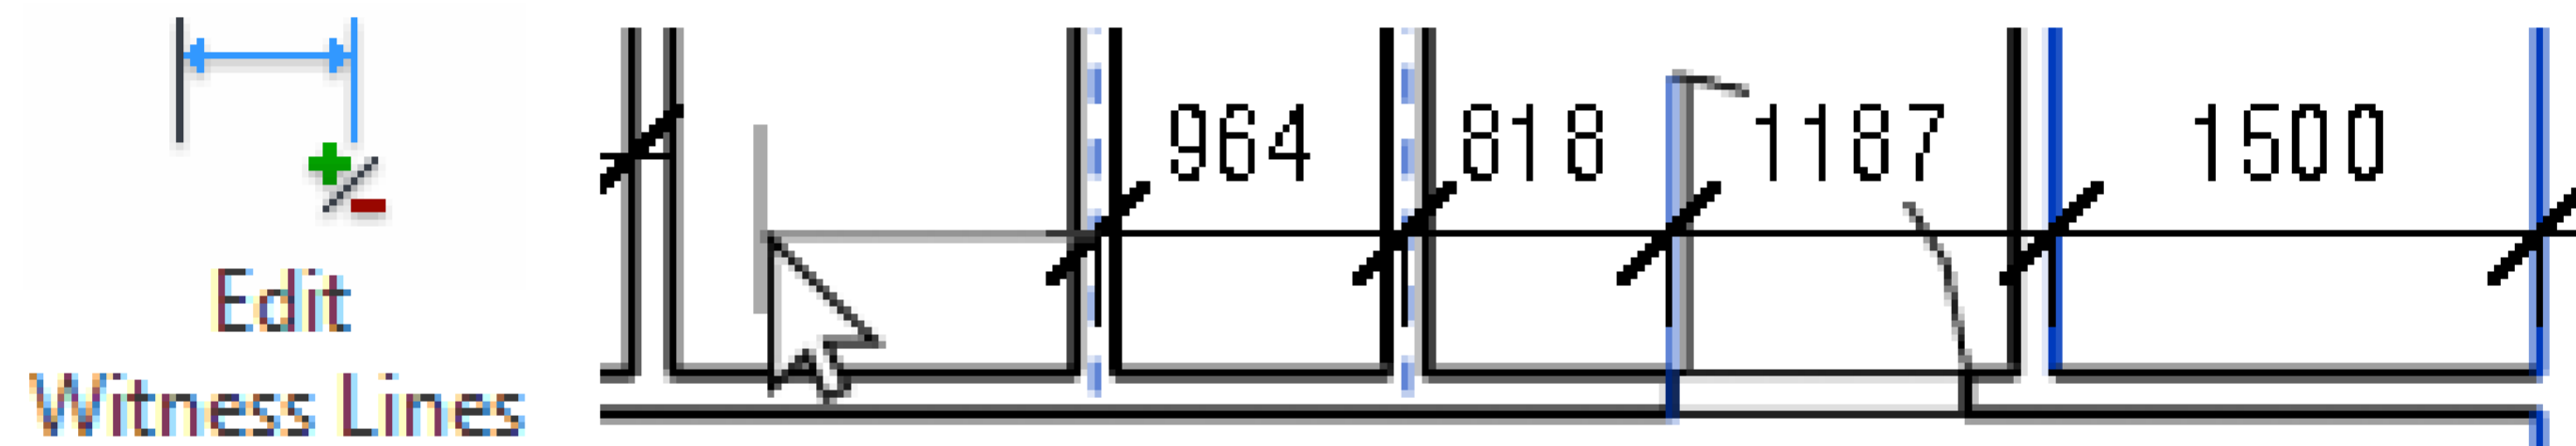 


REVIT PURE LIVE #036
NICOLAS CATELLIER

 
CONTINUOUS VS BASELINE VS ORDINATE

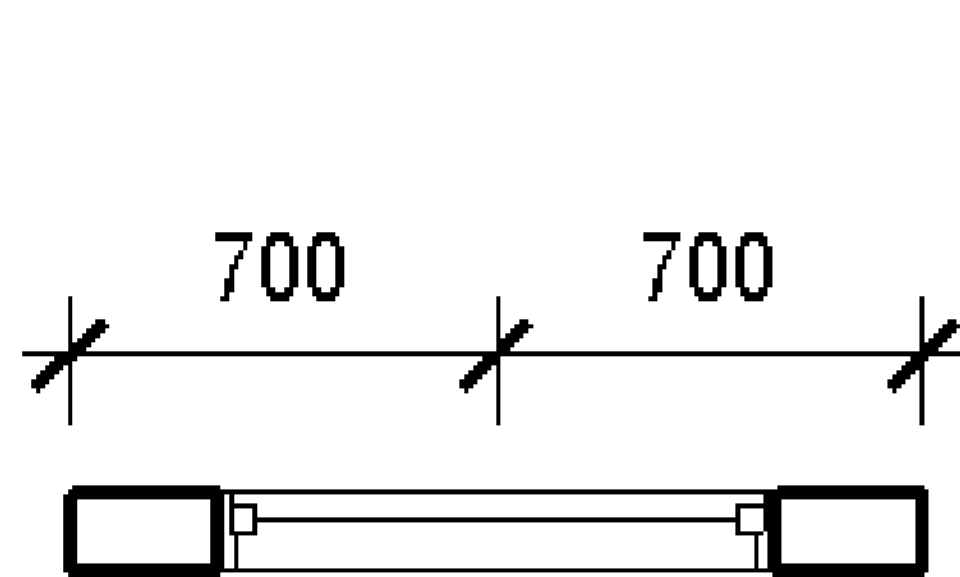


CONTINUOUS

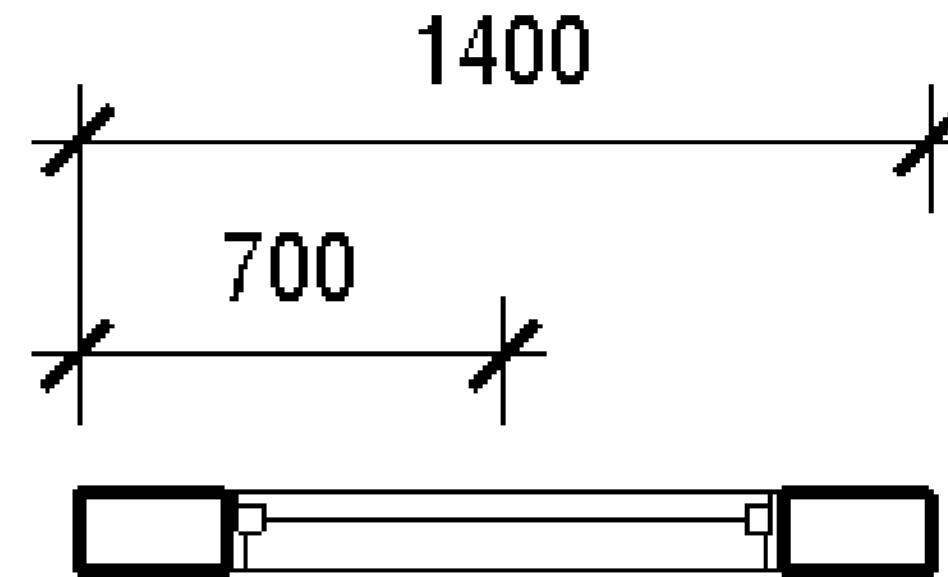 


BASELINE

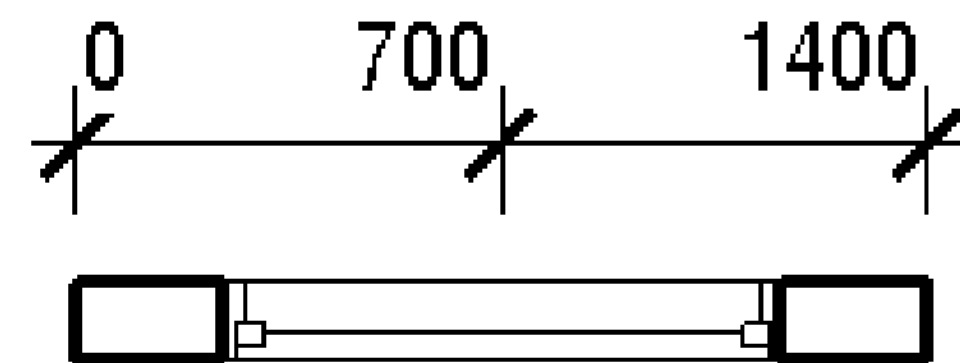 



ORDINATE

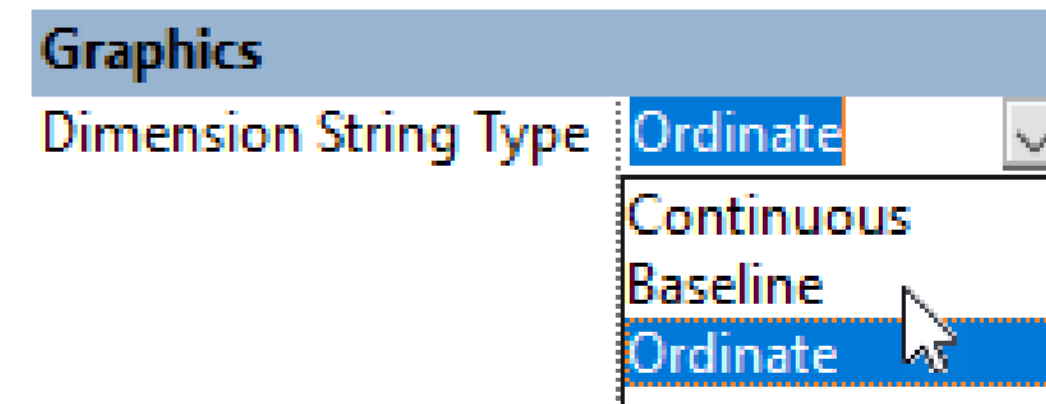 


WITNESS & DIMENSION LINES OPTIONS

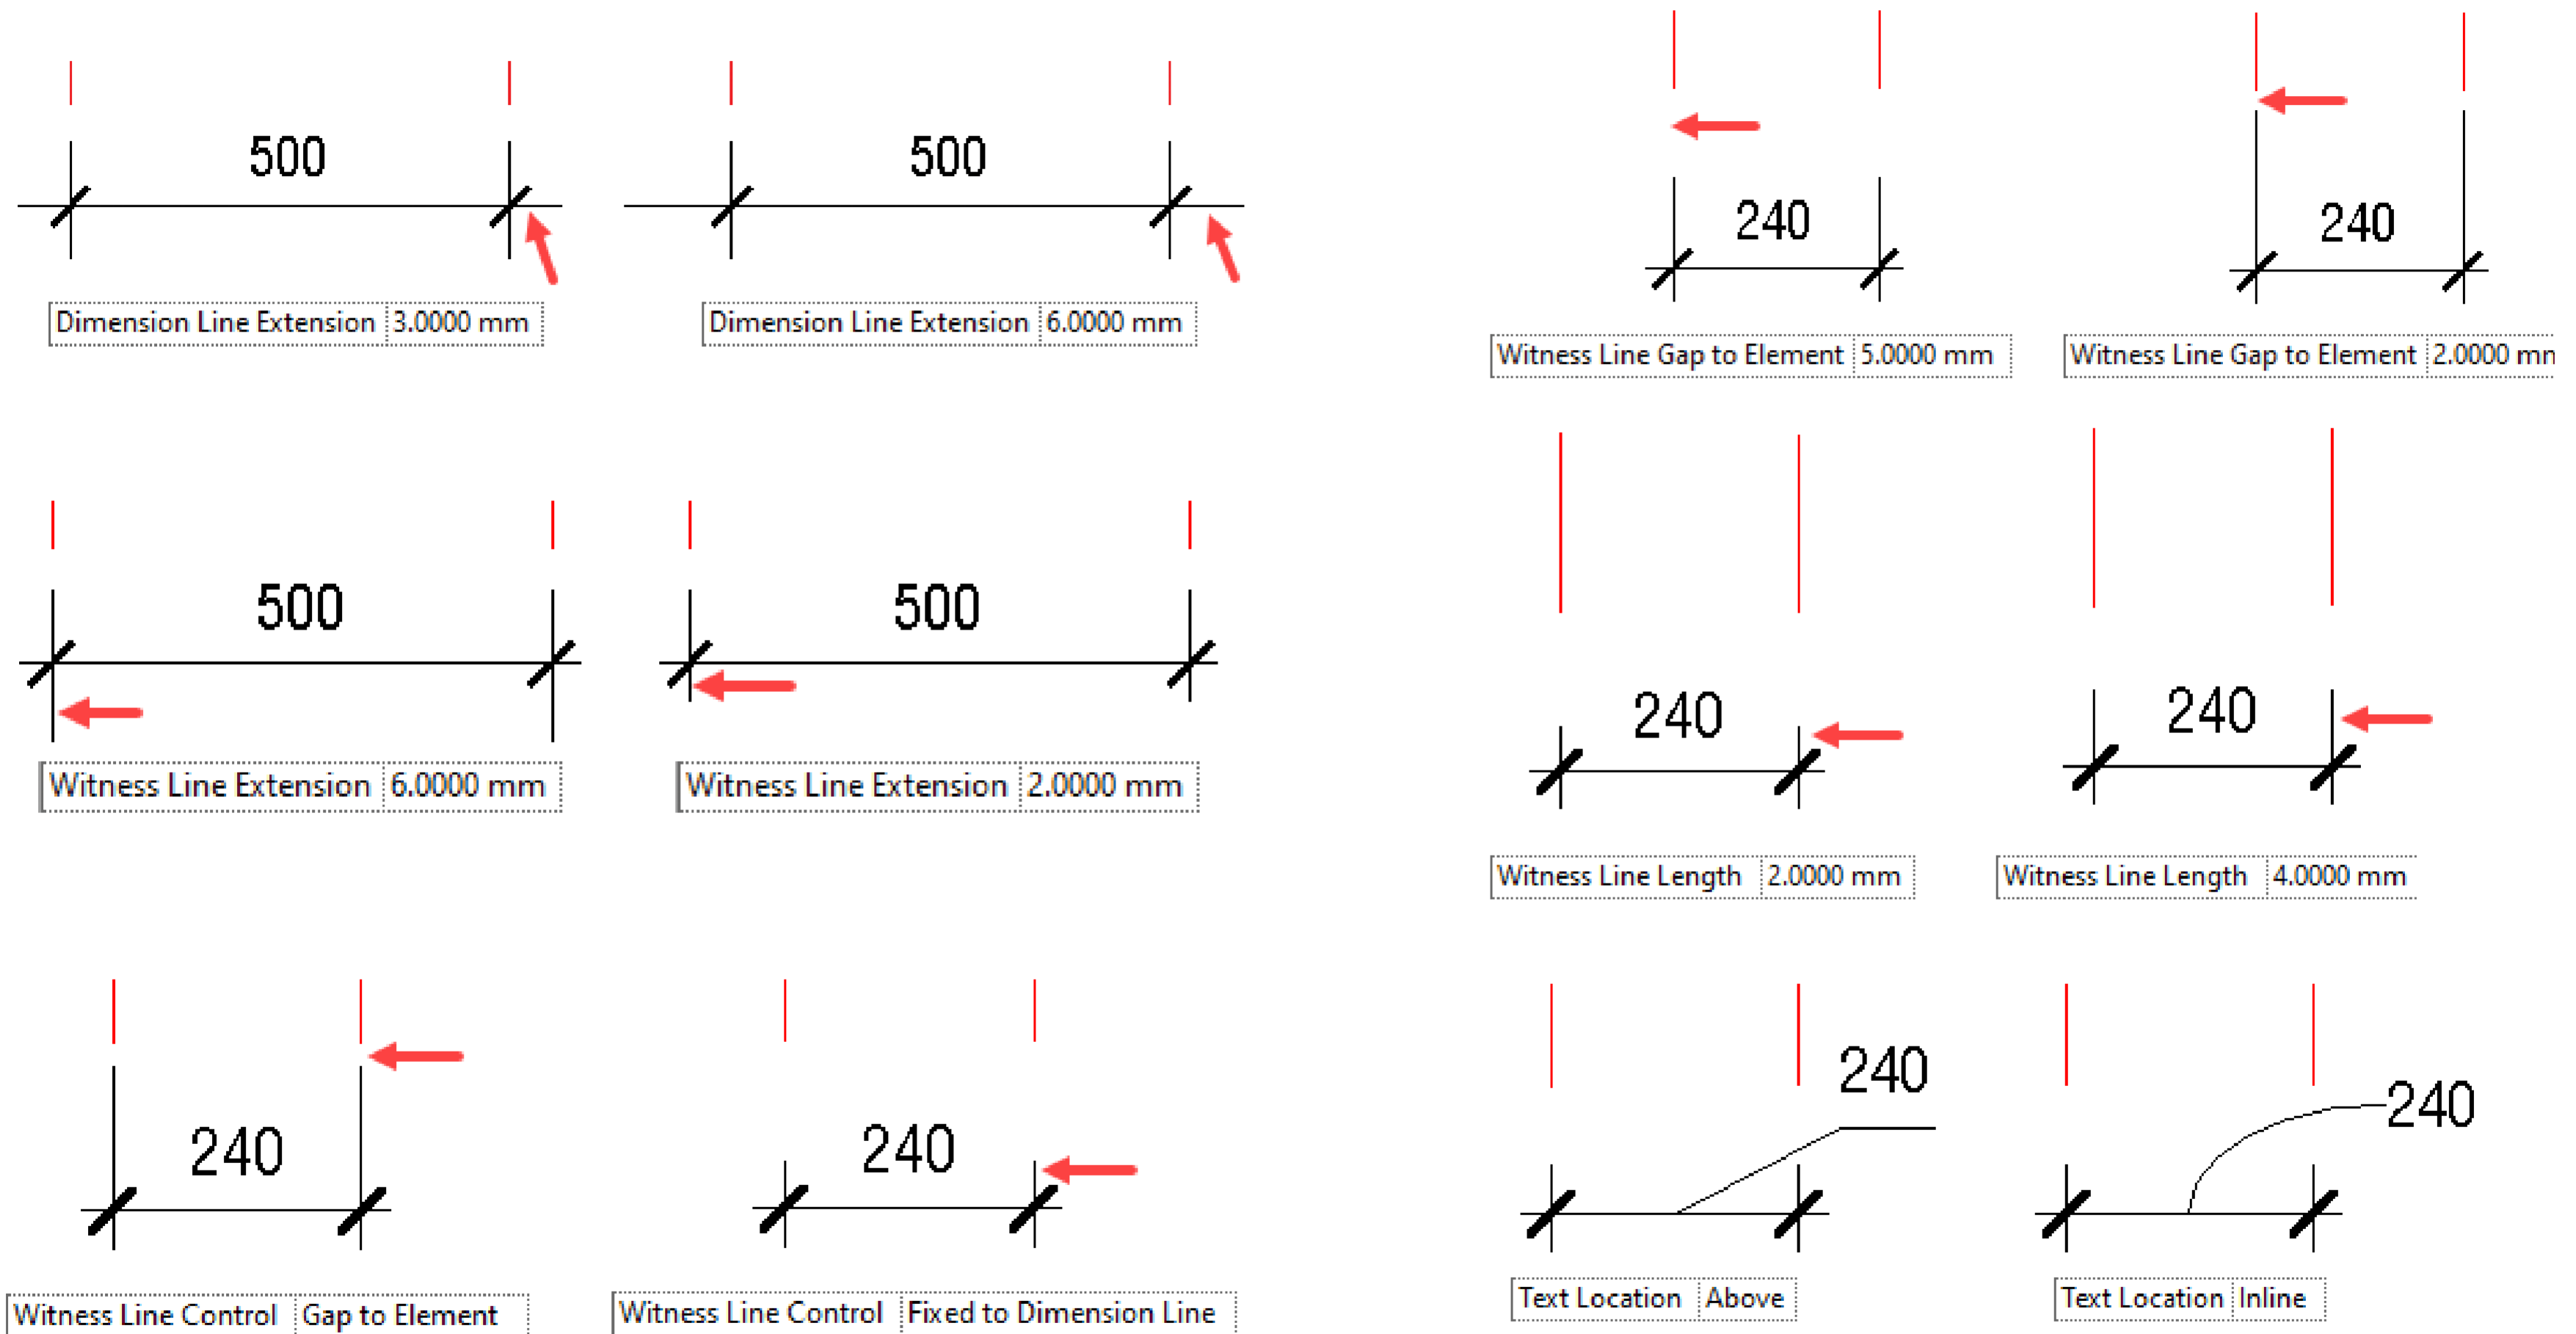 


TICK MARK STYLES

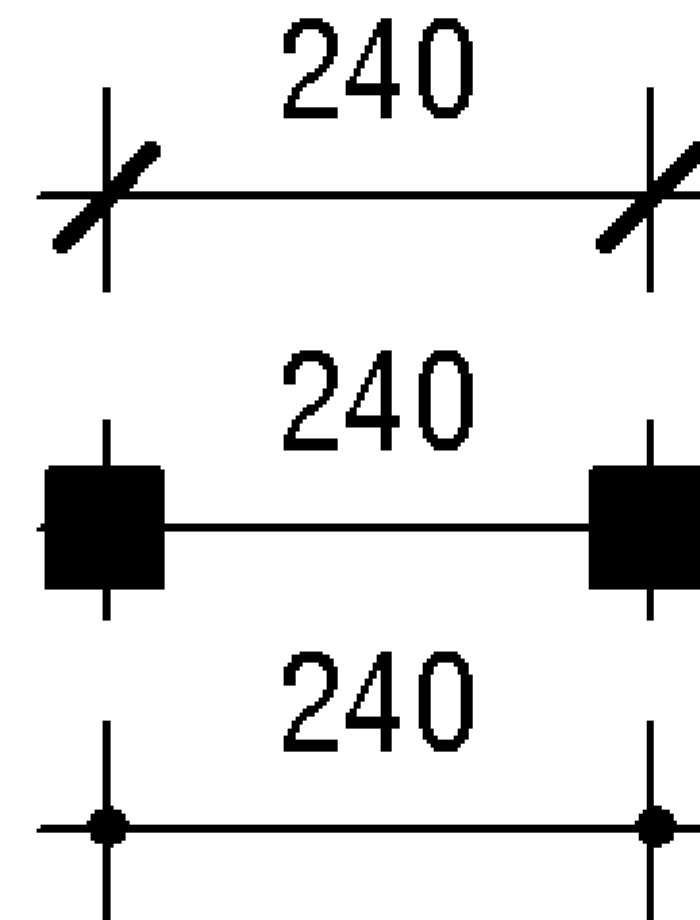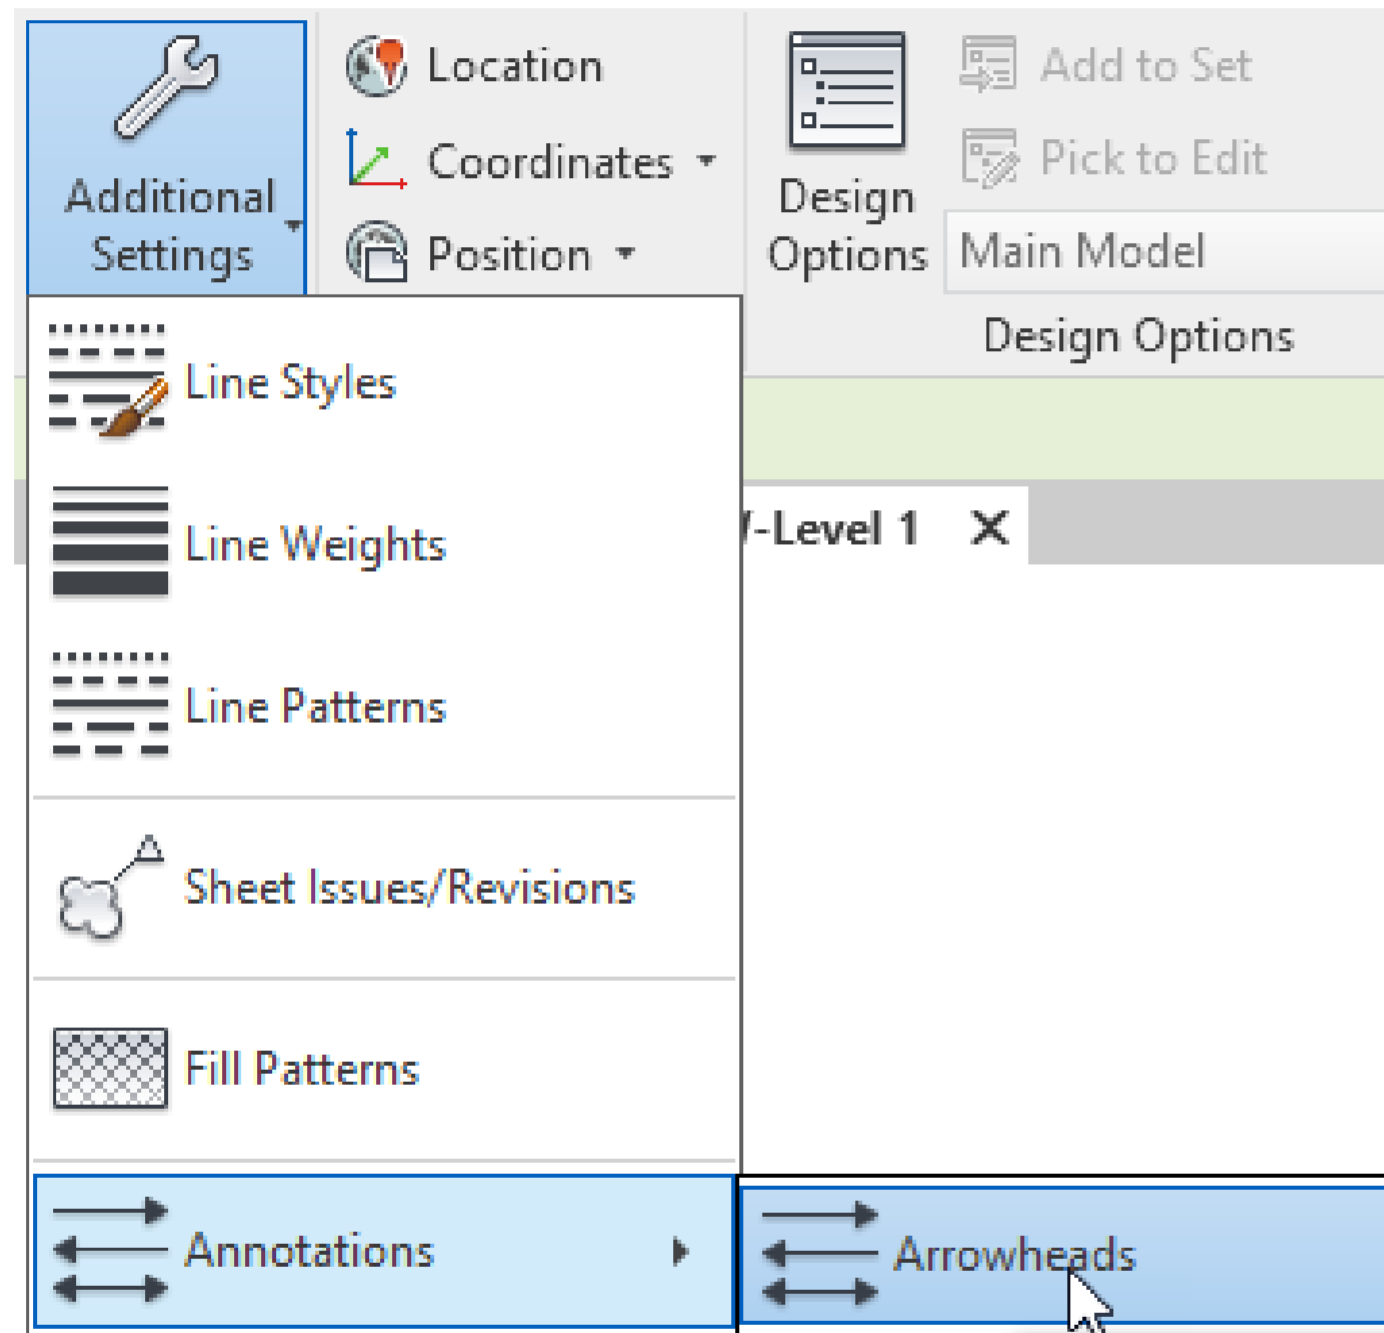  

SET TICK MARKS

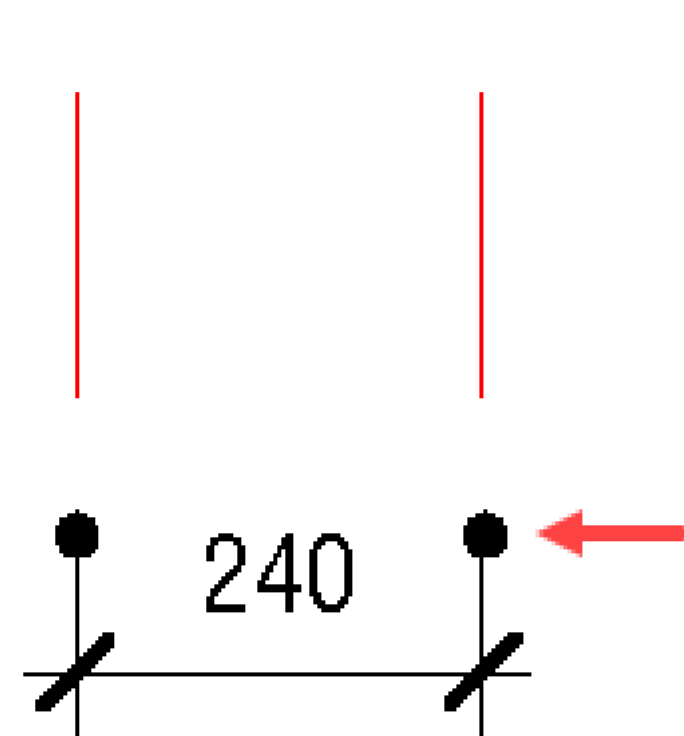 


Witness Line Tick Mark Filled Dot 0.5mm

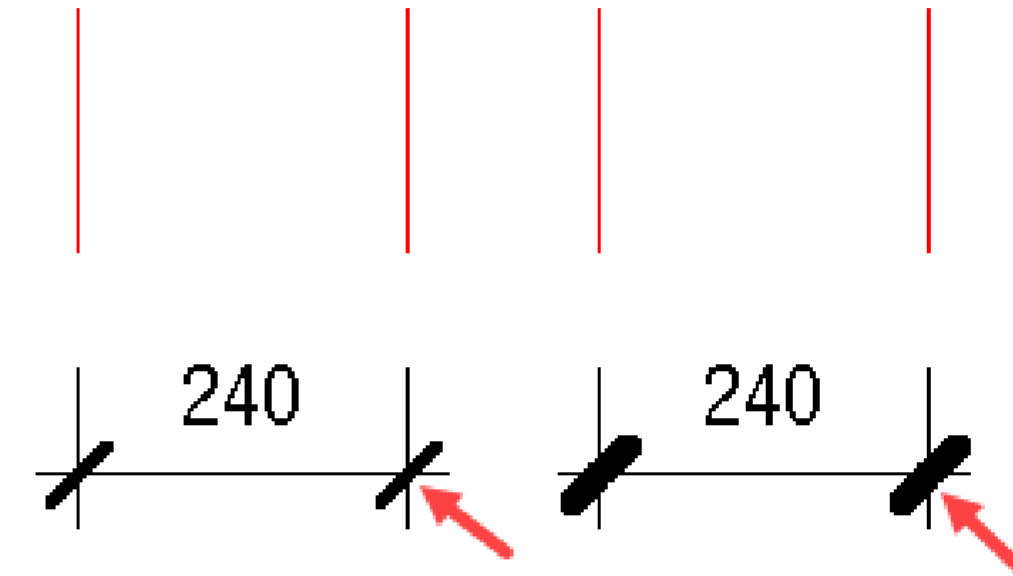 


Tick Mark Line Weight 4

 
Tick Mark Line Weight 6

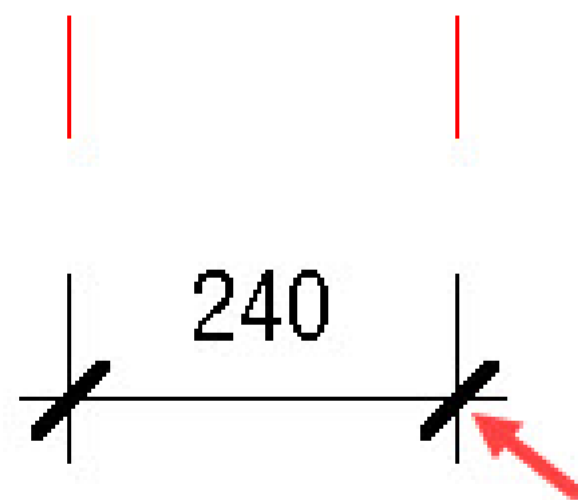

Tick Mark Diagonal 2mm

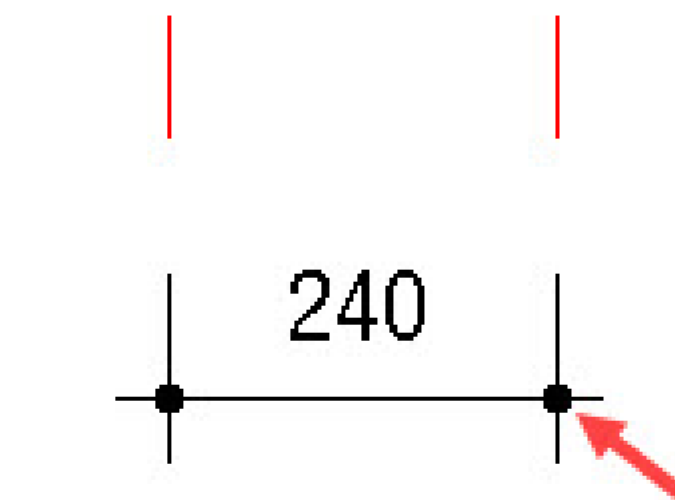 



Tick Mark Filled Dot 0.5mm

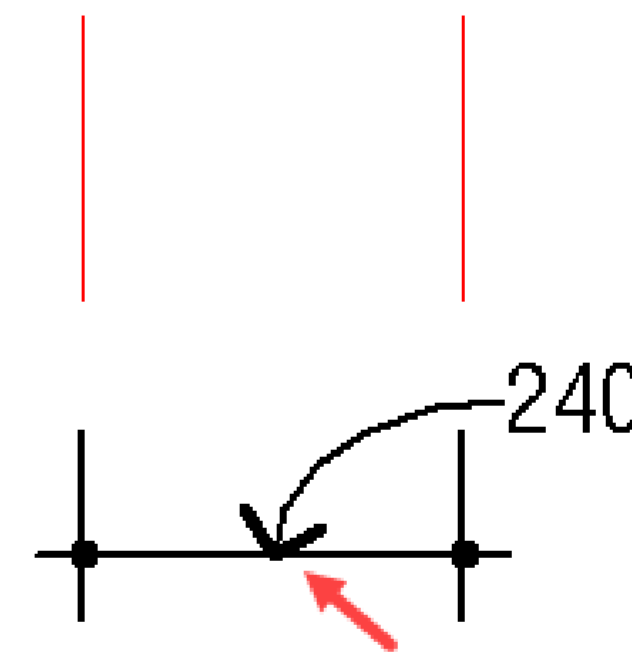 

Leader Tick Mark Arrow Open 90 Degree 1.25mm



  SET CENTERLINE OPTIONS



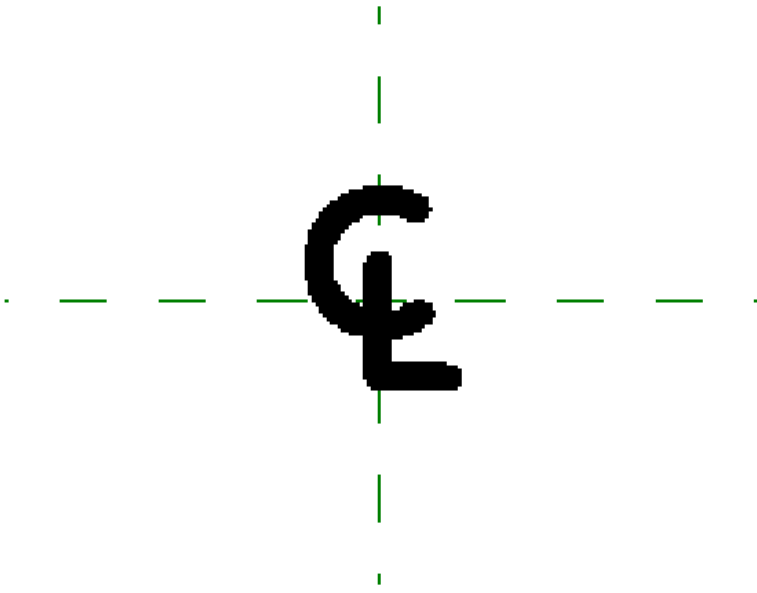
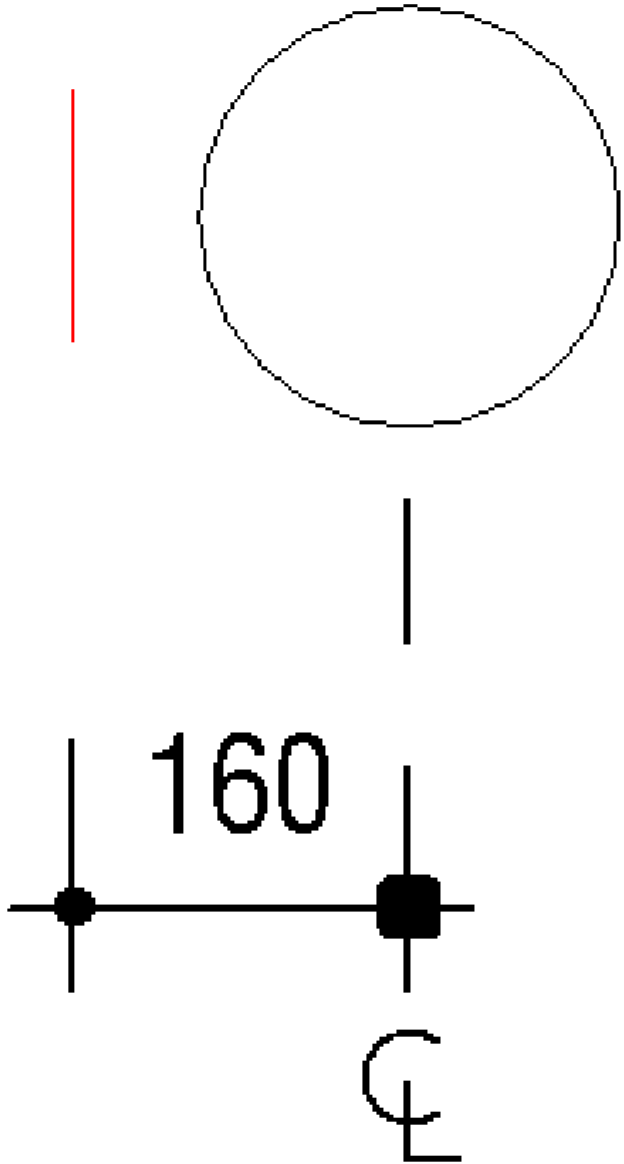


Centerline Symbol	RP_ANN_Centerline : RP_Centerline
Centerline Pattern	Dash
Centerline Tick Mark	Filled Box 1mm





REVIT PURE LIVE #036
NICOLAS CATELLIER

    
INTERIOR TICK LINES

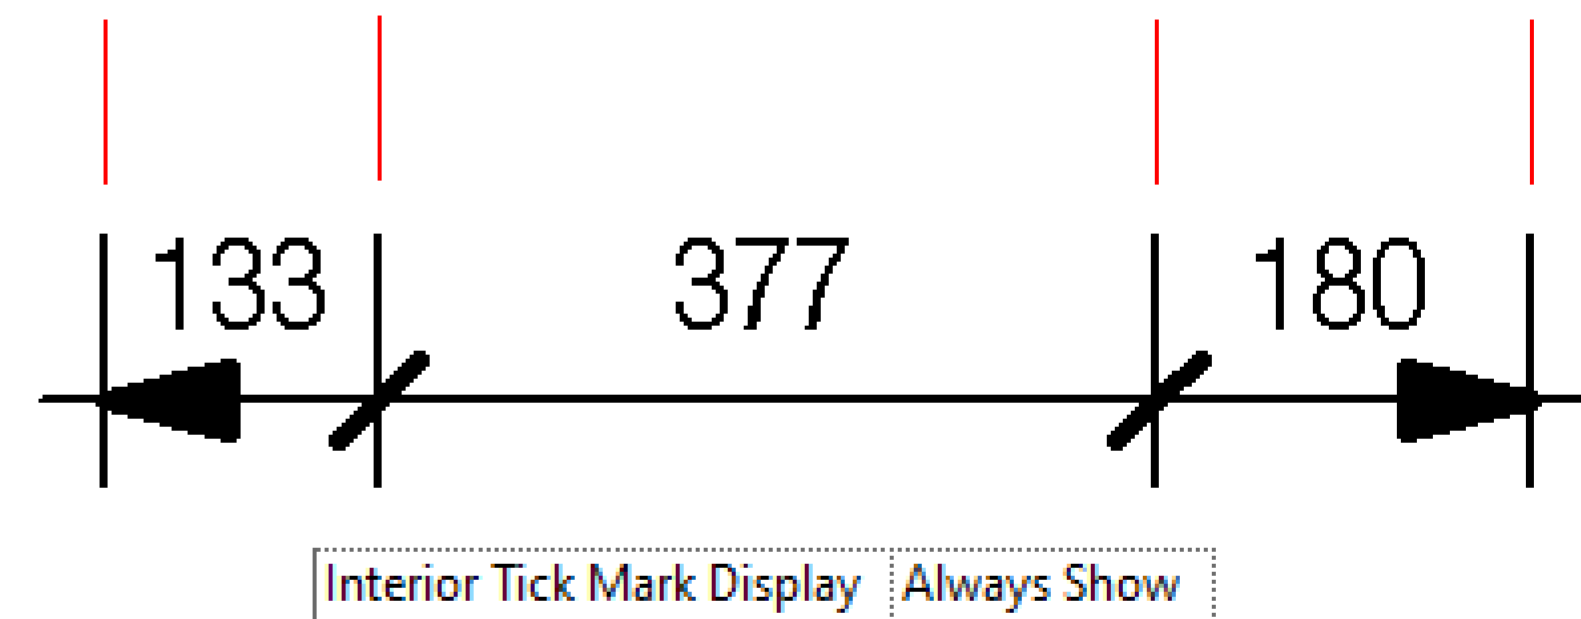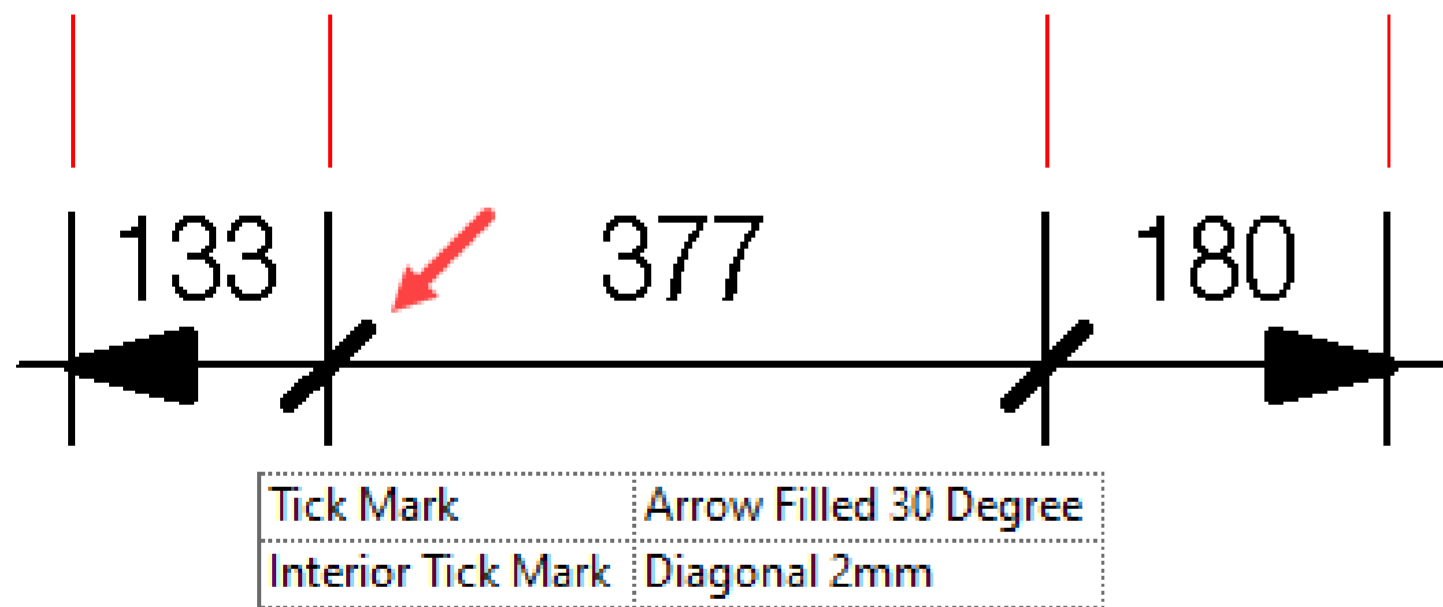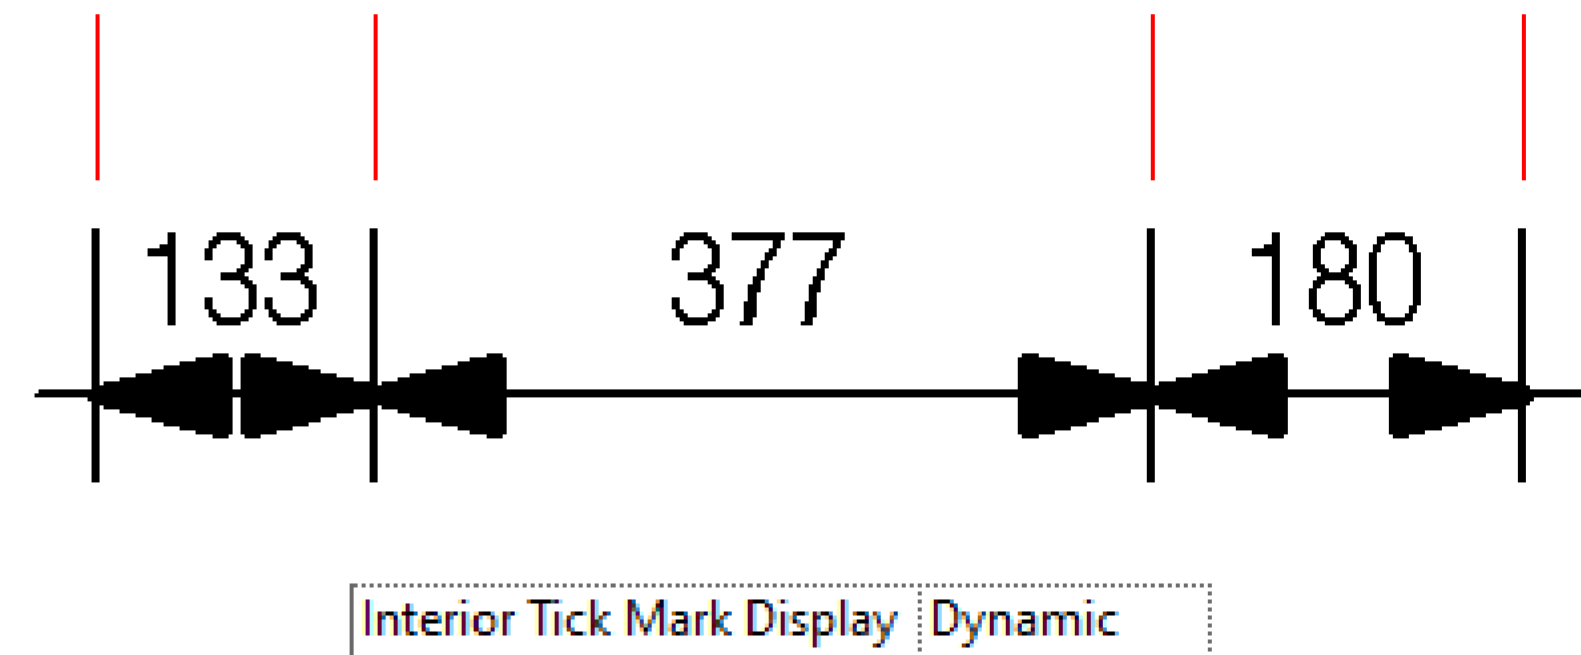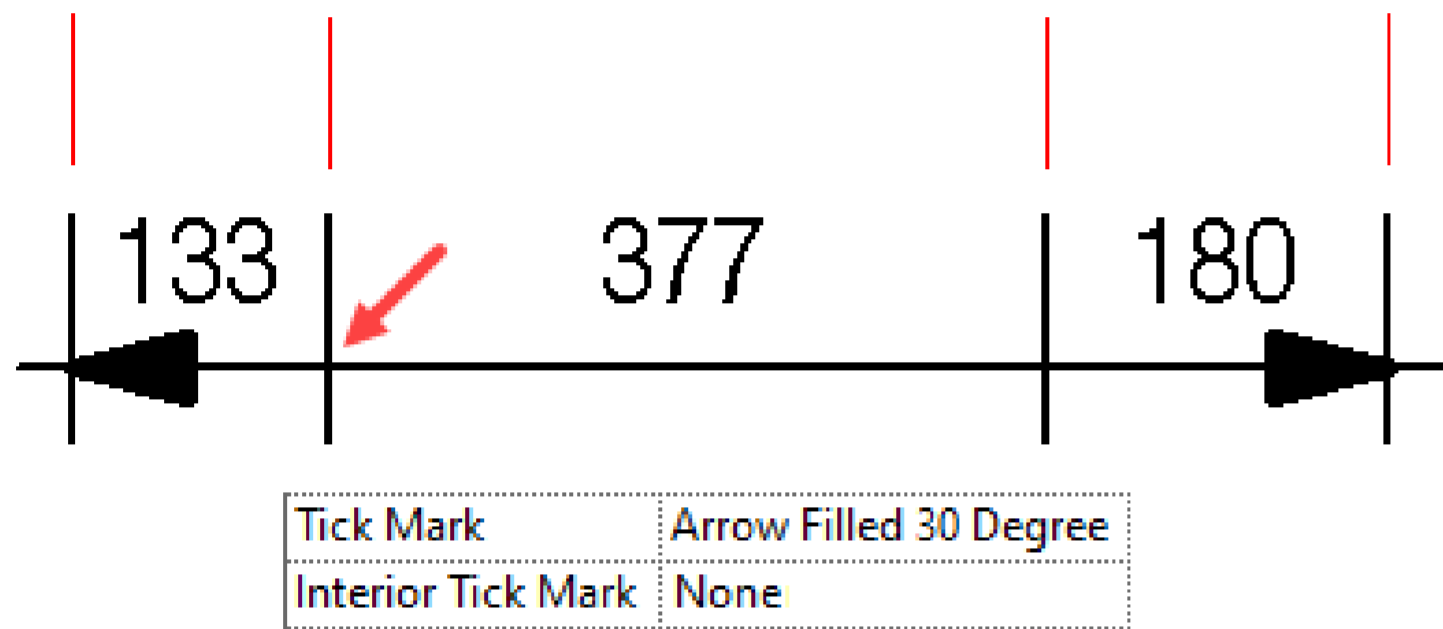

REVERSING ARROW

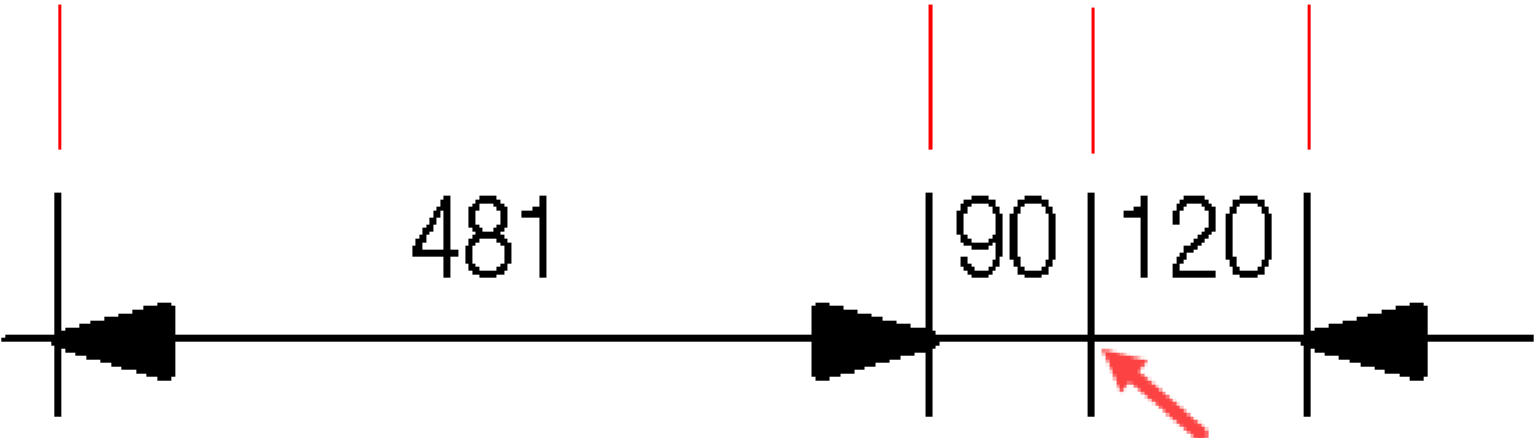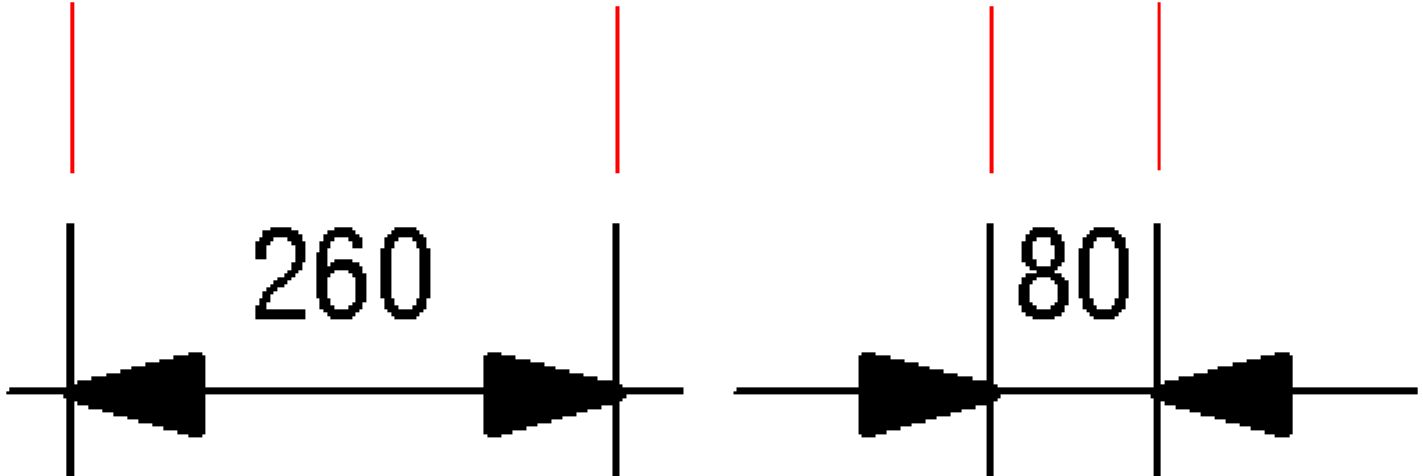  


DIMENSION COLORS

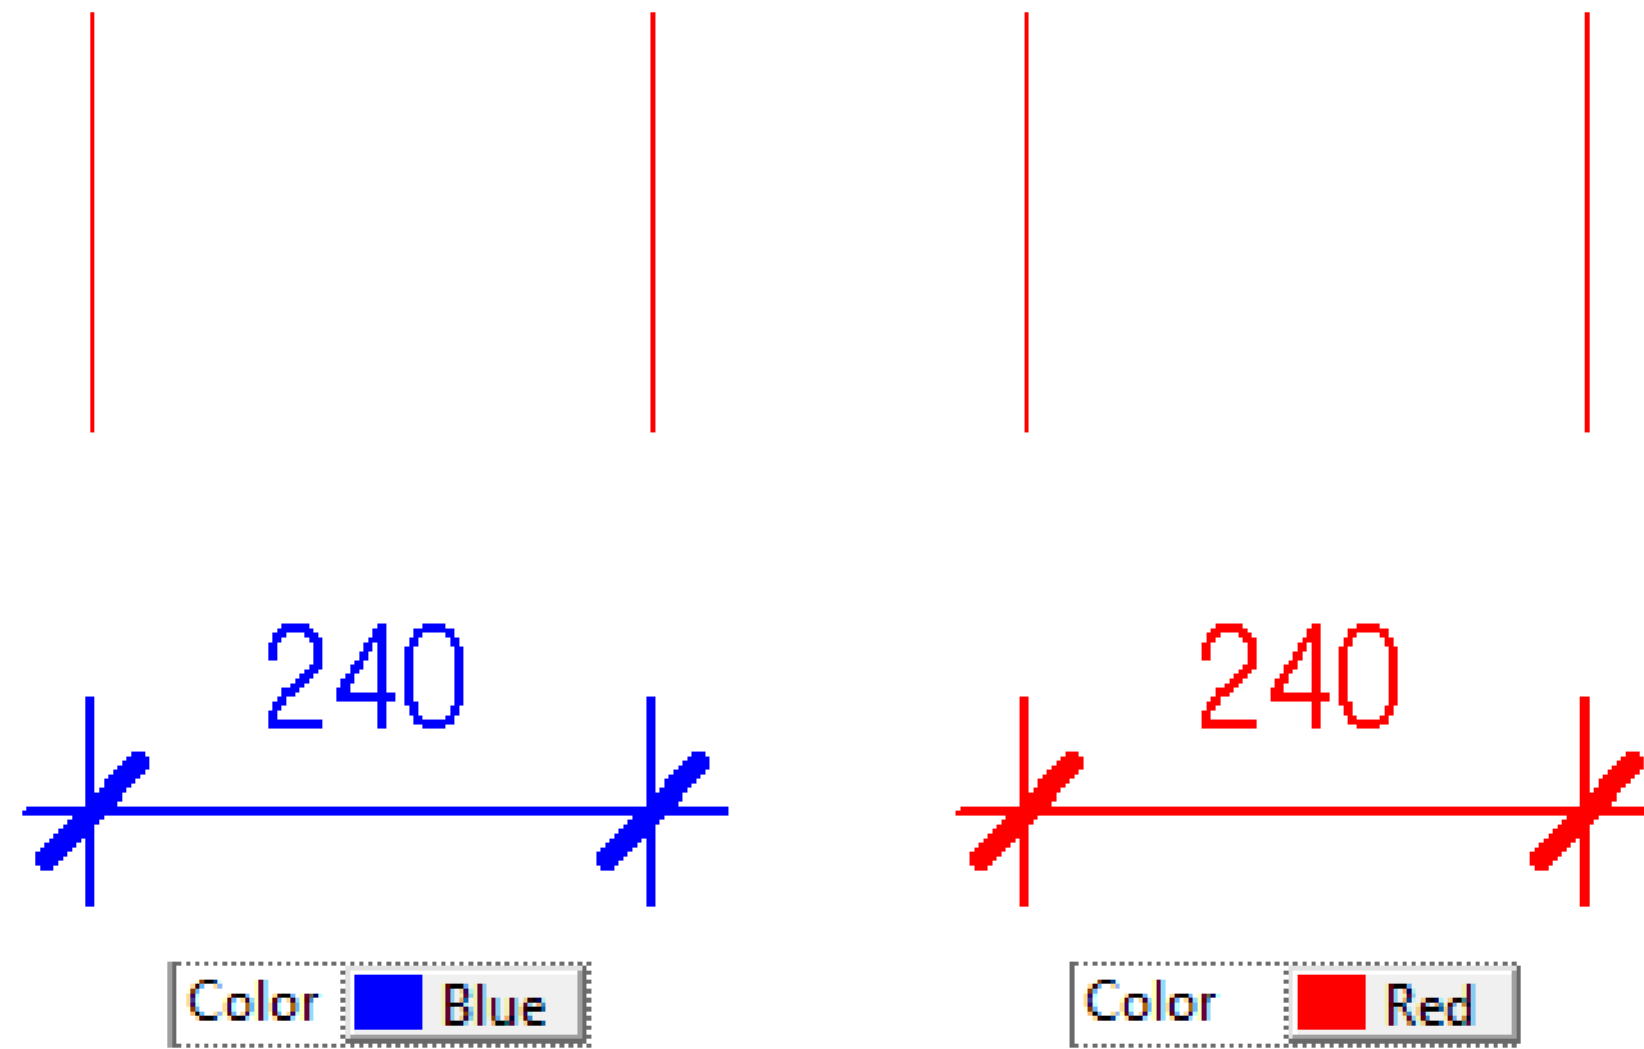 


REVIT PURE LIVE #036
NICOLAS CATELLIER

 DIMENSION SNAP LINE DISTANCE

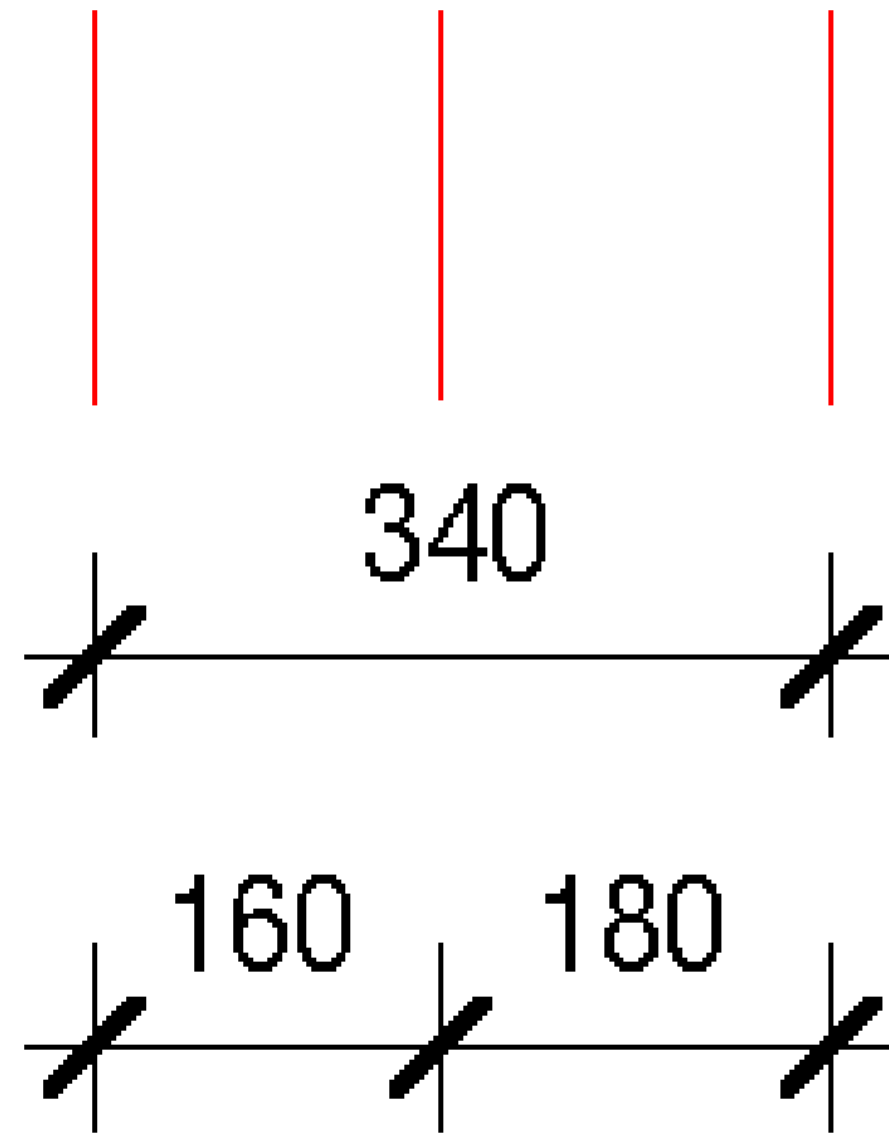

Dimension Line Snap Distance 15.0000 mm

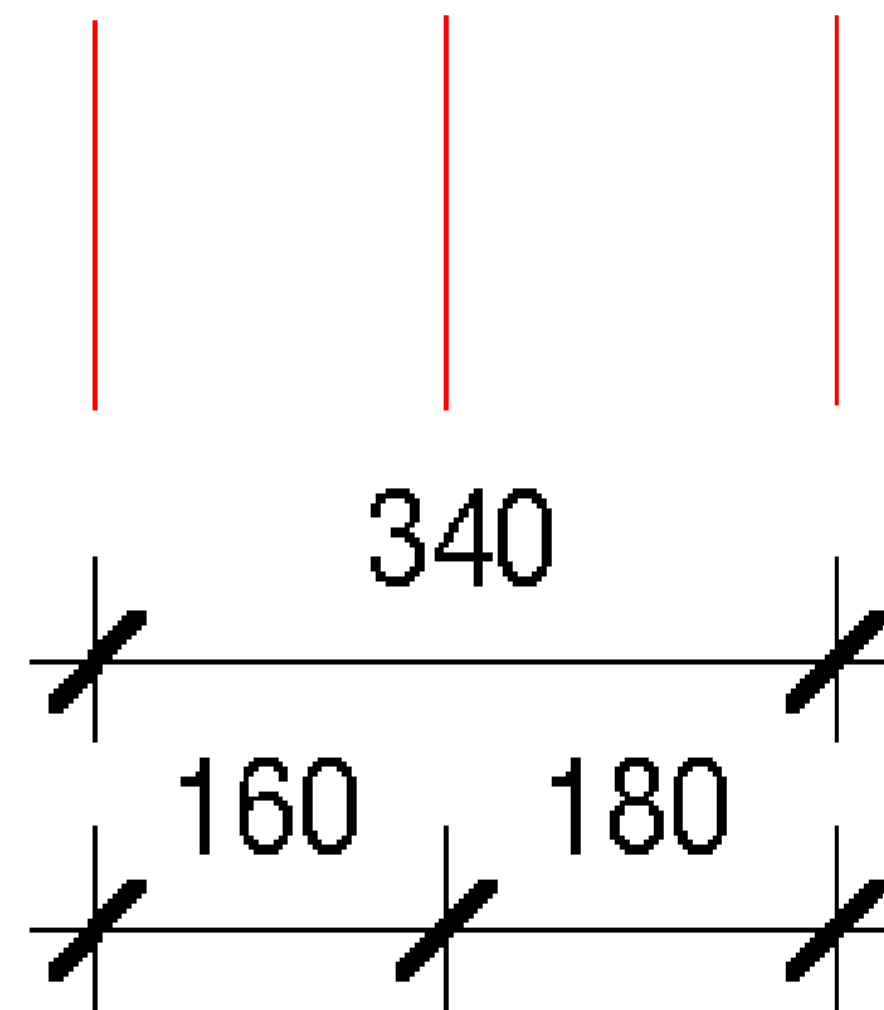 








Dimension Line Snap Distance 9.0000 mm



REVIT PURE LIVE #036
NICOLAS CATELLIER

TEXT OPTIONS


Text	
Width Factor	1.000000
Underline	<input type="checkbox"/>
Italic	<input type="checkbox"/>
Bold	<input type="checkbox"/>
Text Size	2.2500 mm
Text Offset	1.0000 mm
Read Convention	Up, then Left
Text Font	Swis721 Cn BT
Text Background	Opaque
Show Opening Height	<input type="checkbox"/>
Text Location	Inline
Suppress Spaces	<input type="checkbox"/>

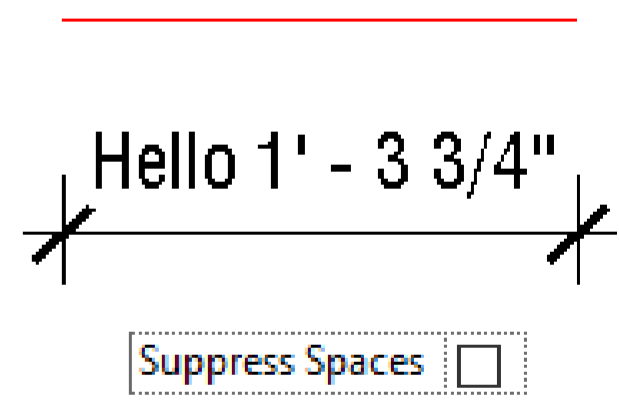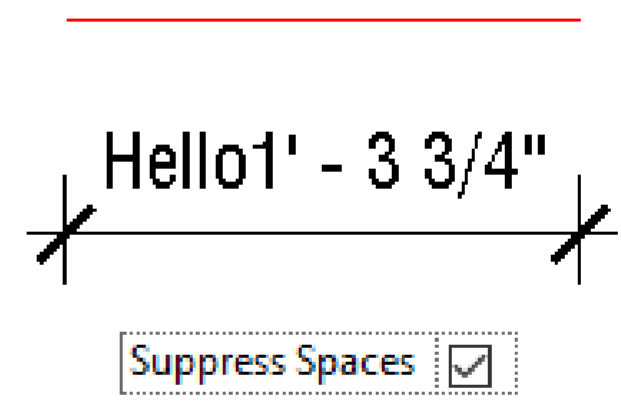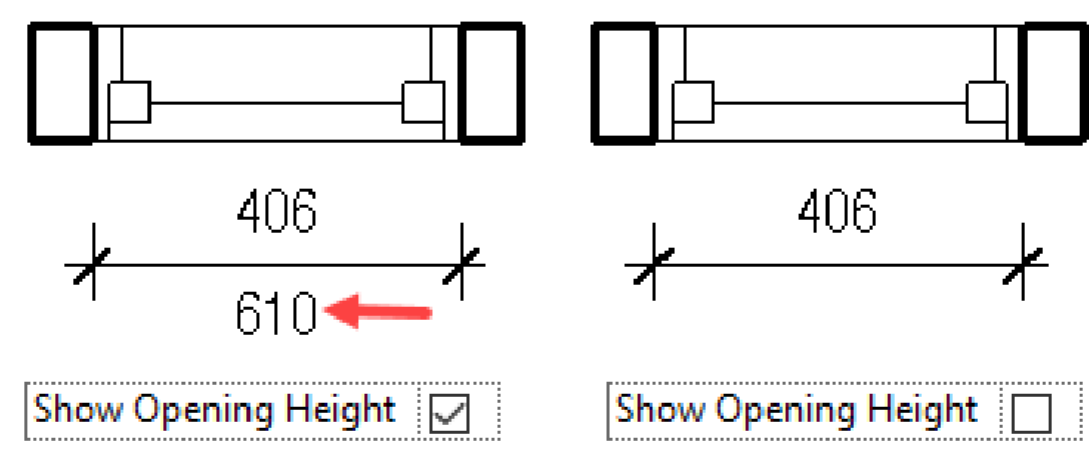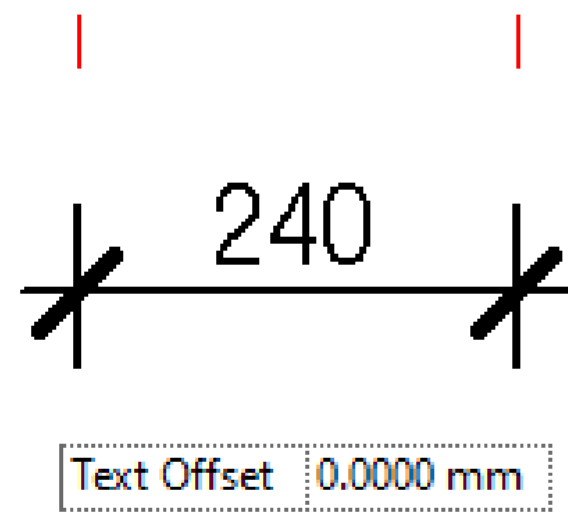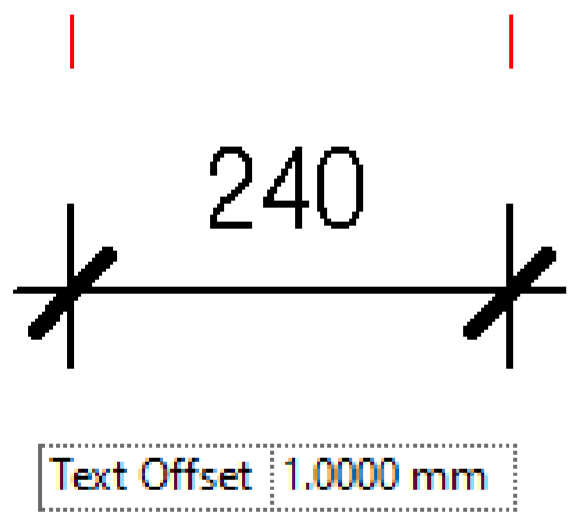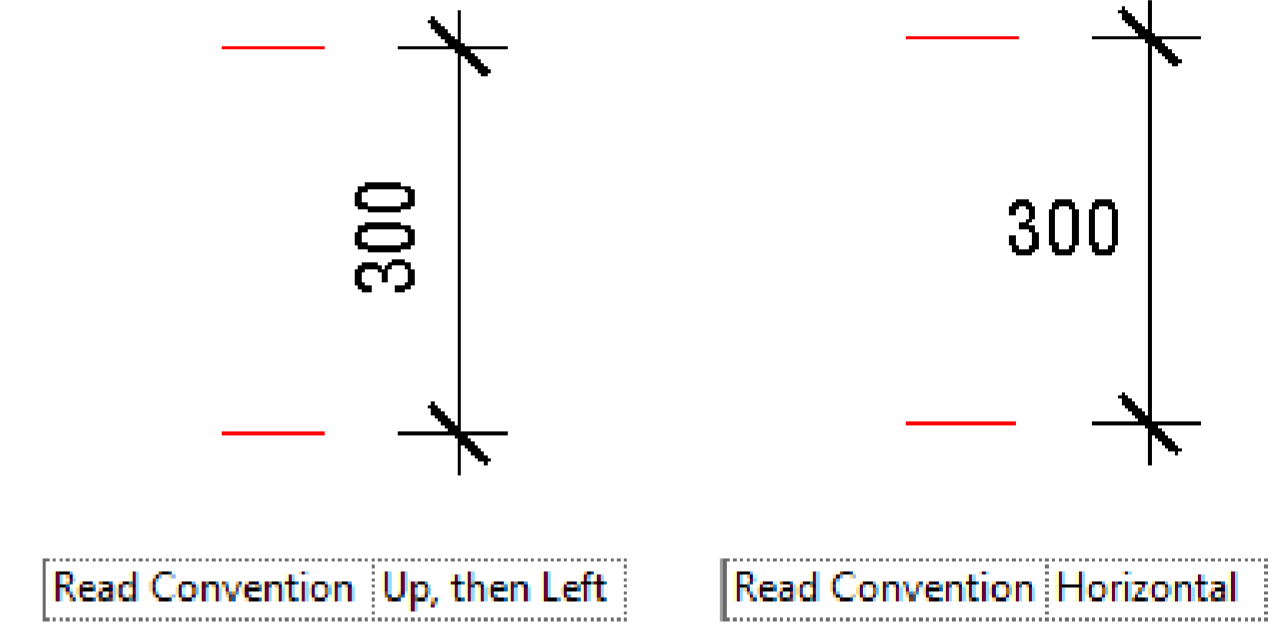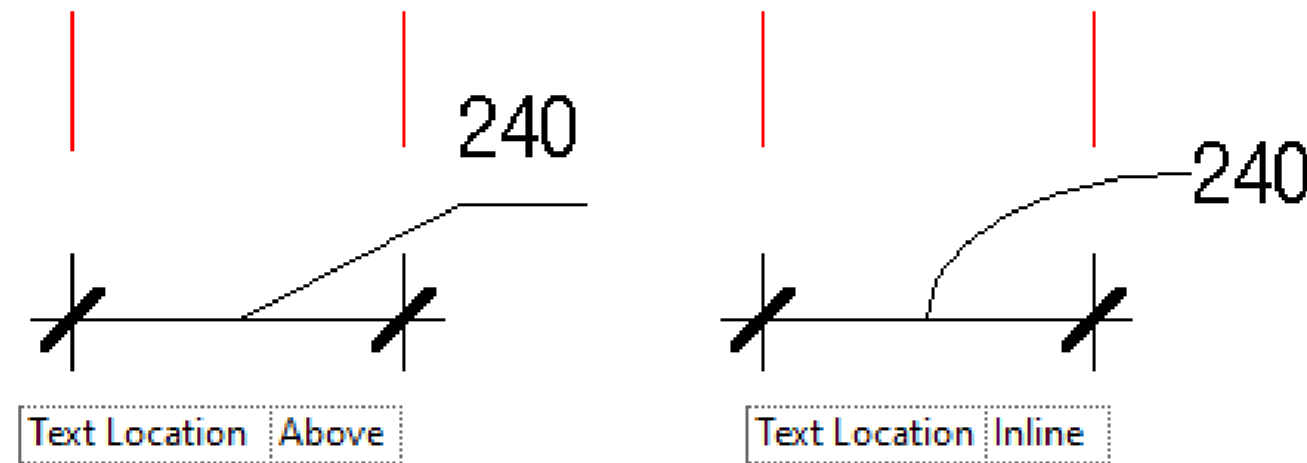       

PRIMARY & ALTERNATE UNITS

Primary Units	
Units Format	1235 [mm] (Default)
Dimension Prefix	
Dimension Suffix	
Alternate Units	
Alternate Units	None
Alternate Units Format	1235 [mm]
Alternate Units Prefix	
Alternate Units Suffix	

Primary Units	
Units Format	1235 [mm]
Dimension Prefix	±
Dimension Suffix	

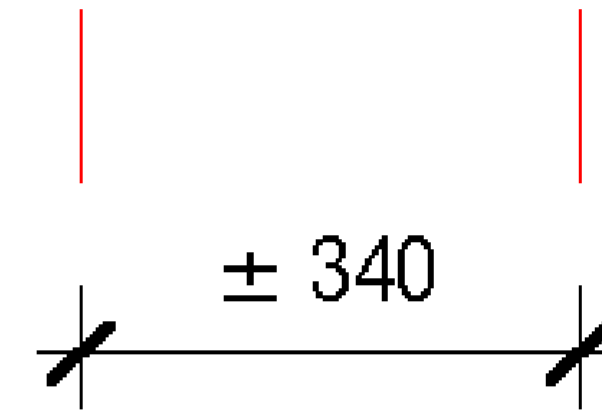 


Format ×

Use project settings


Units: Millimeters

Rounding: 2 decimal places Rounding increment: 0.01



 
Unit symbol: mm

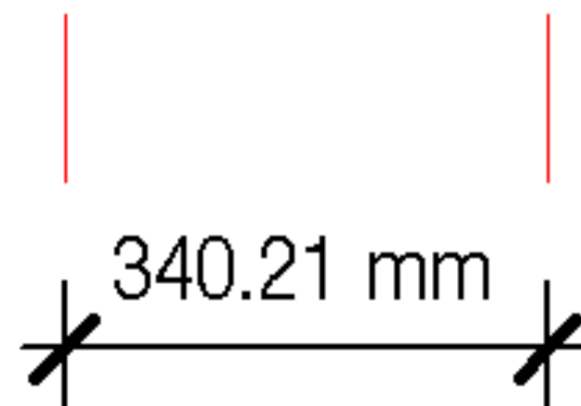

Alternate Units	
Alternate Units	Below
Alternate Units Format	17 3/8"
Alternate Units Prefix	[
Alternate Units Suffix]

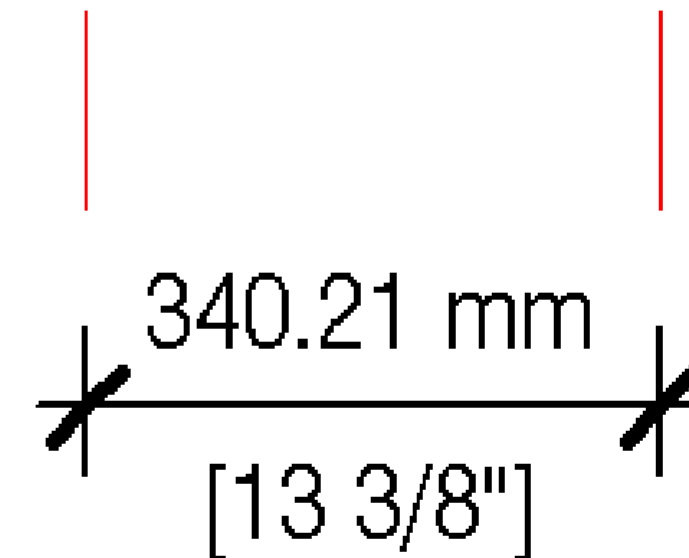 

EQUALITY VALUES

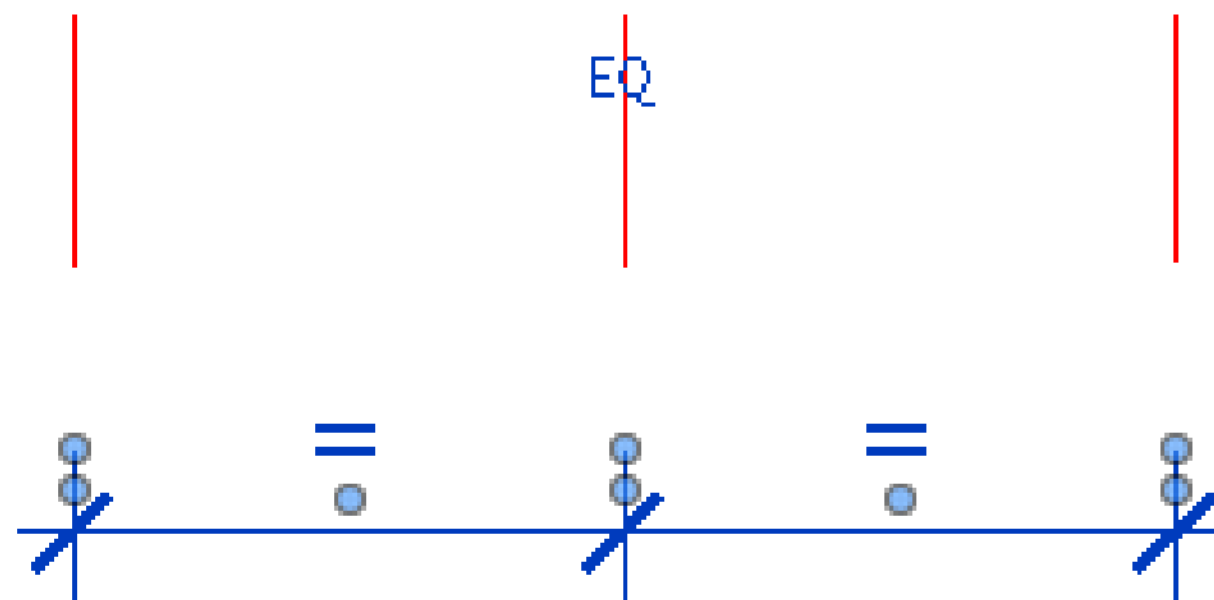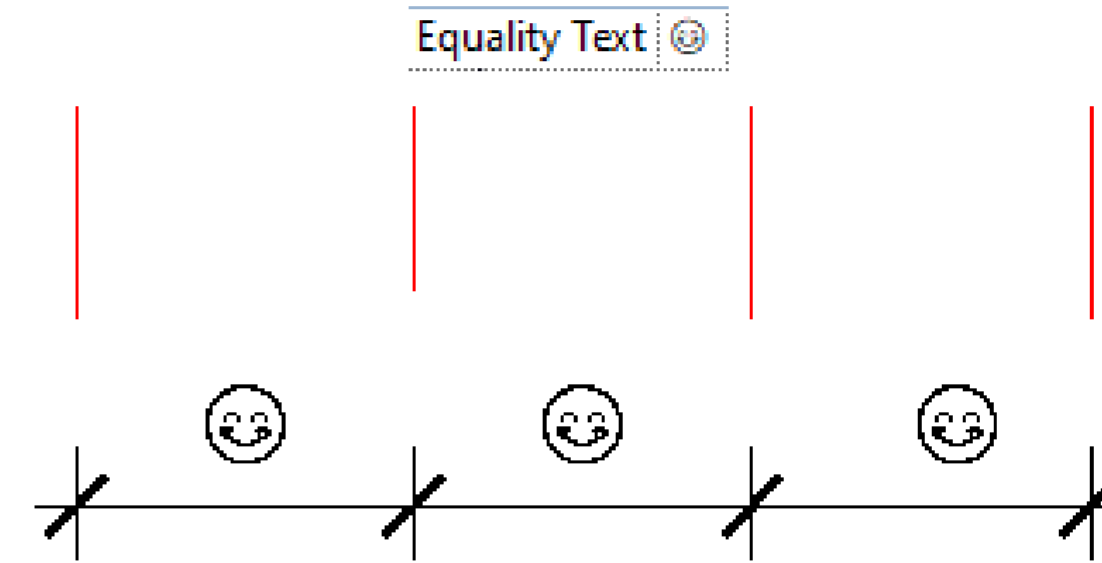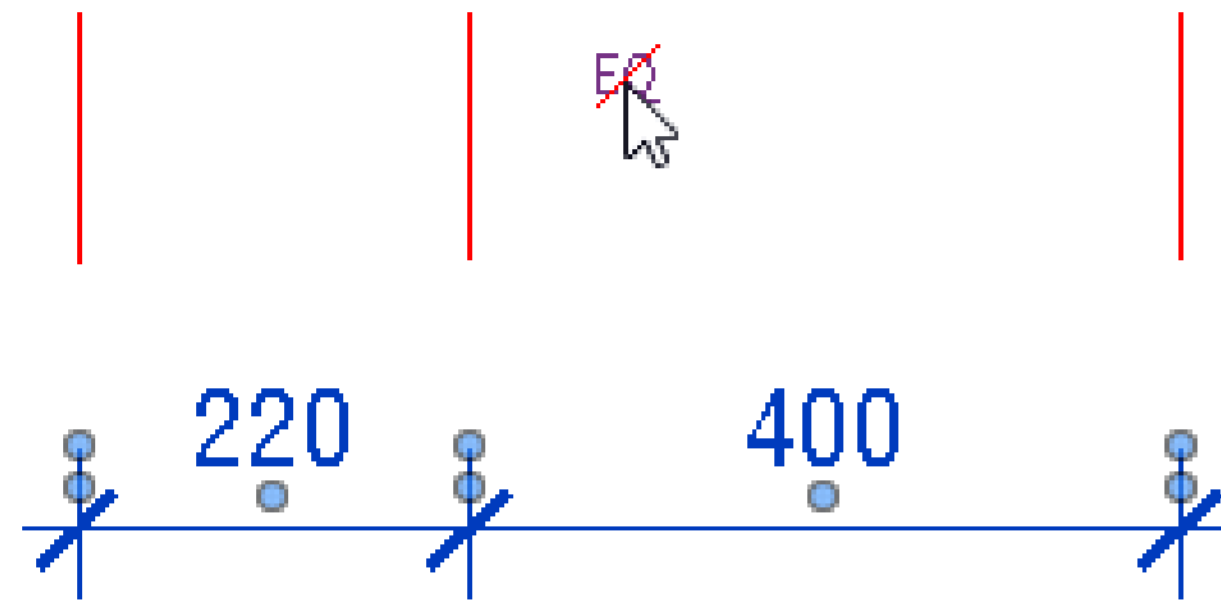   

Label Parameters

	Parameter Name	Spaces	Prefix	Suffix
1	Length of Segment	1	SEG:[]-
2	Total Length	1	TOT:[]



TEXT OVERRIDE

Text Fields

Above:
Wow

Prefix: This Value: 2887 Suffix: Is

 
Below:
Awesome






Dimension Value

Use Actual Value 2887

Replace With Text OMG



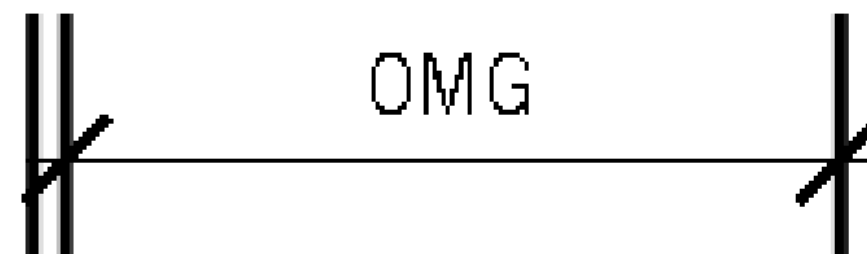


AUTO-DIMENSION WALLS

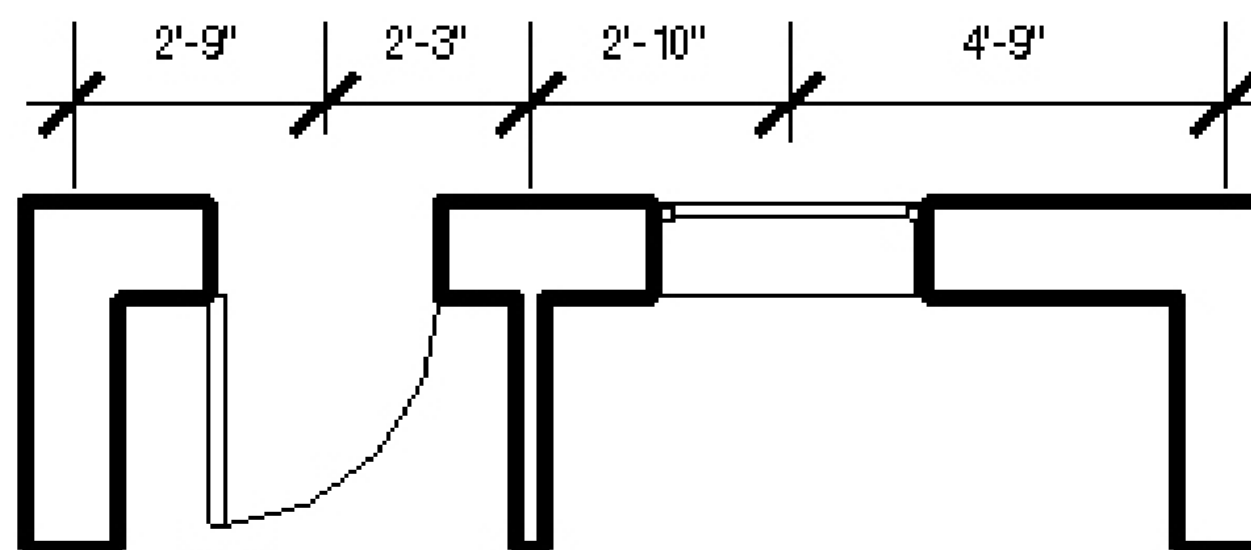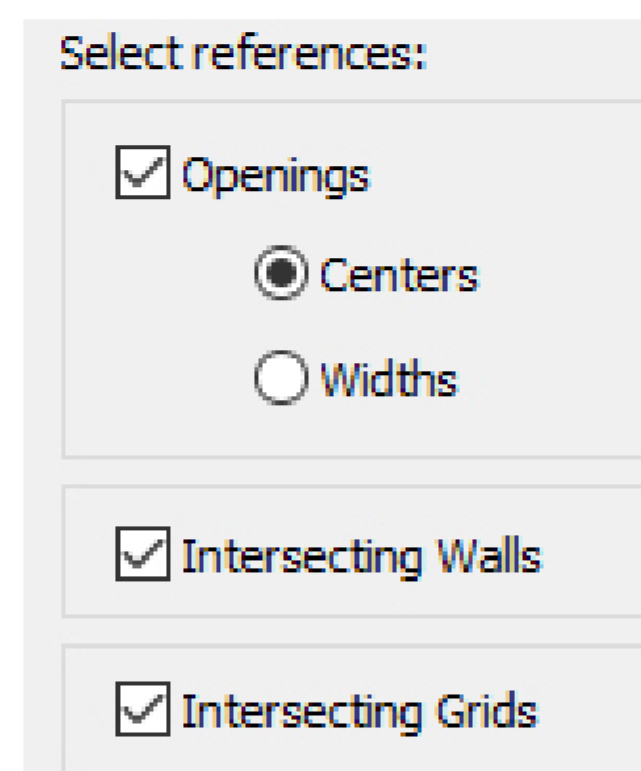  
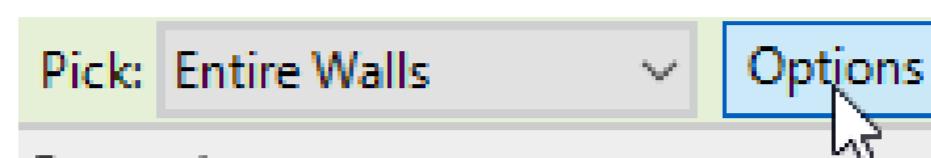 


REVIT PURE LIVE #036
NICOLAS CATELLIER

  
 
CONSTRAINT & LABEL ELEMENTS

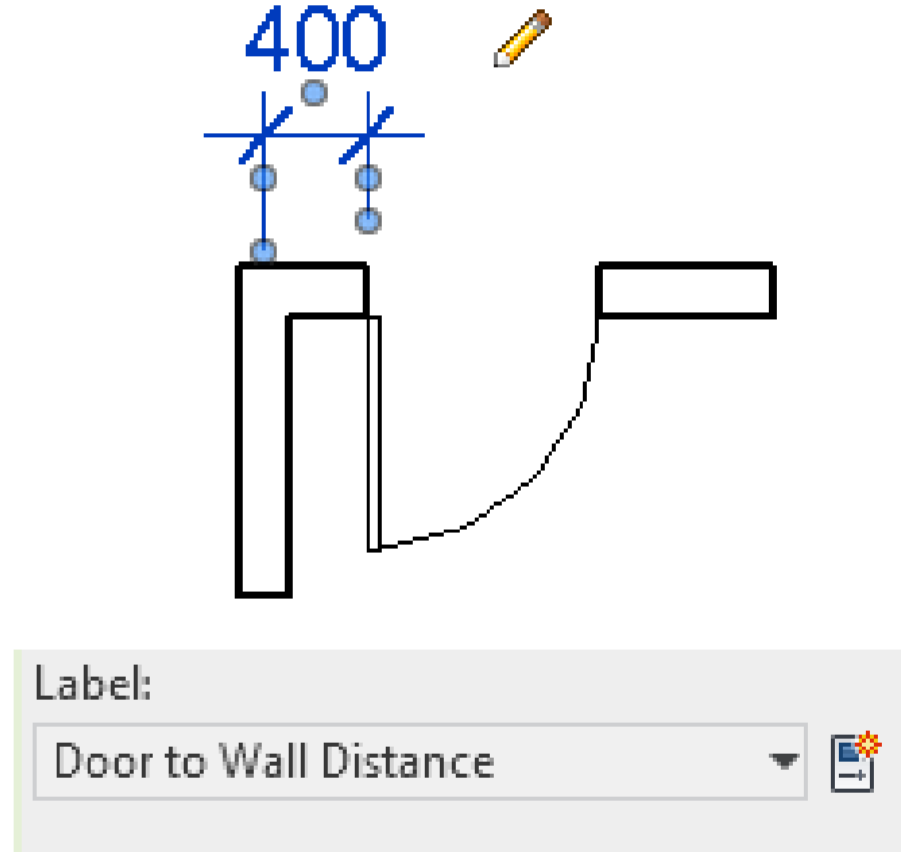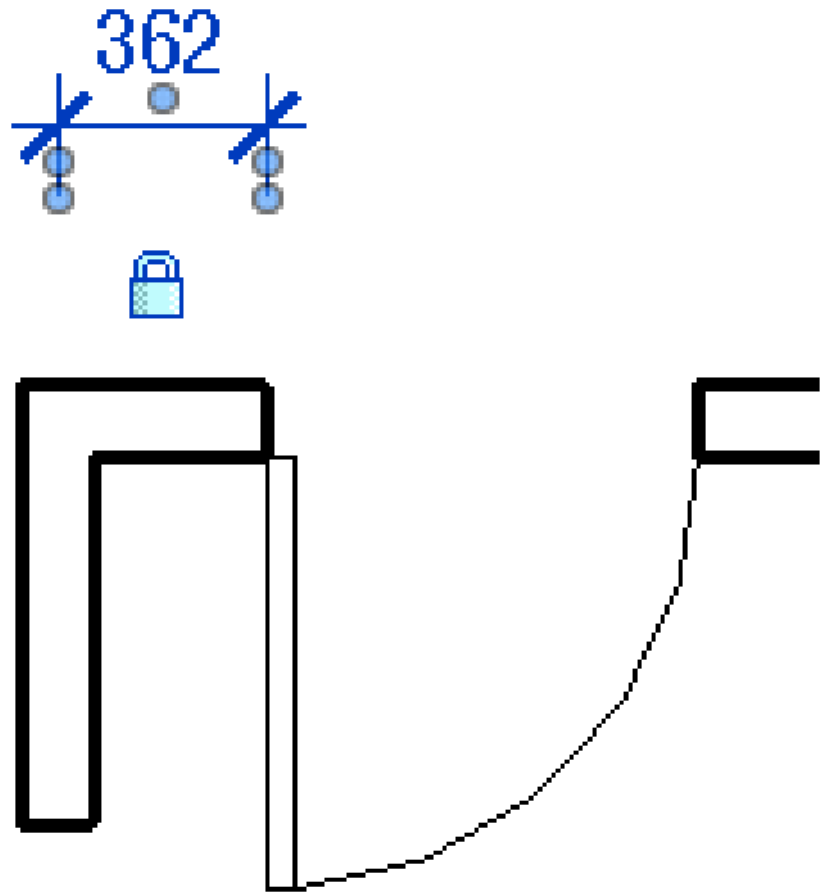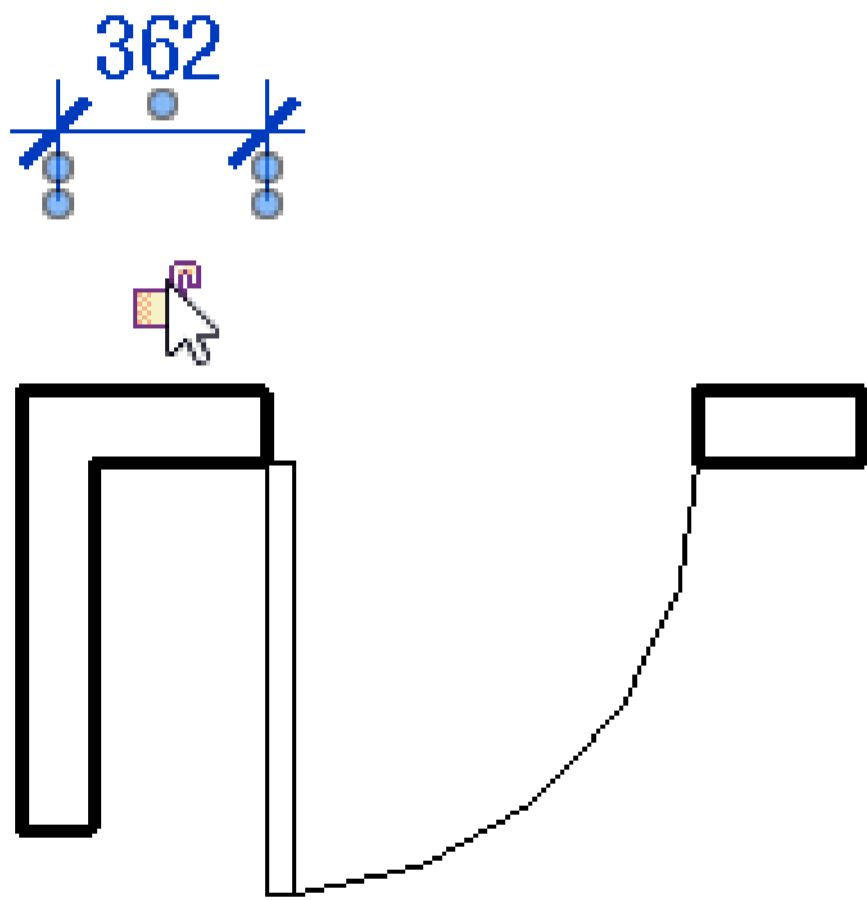




BASELINE DIMENSION

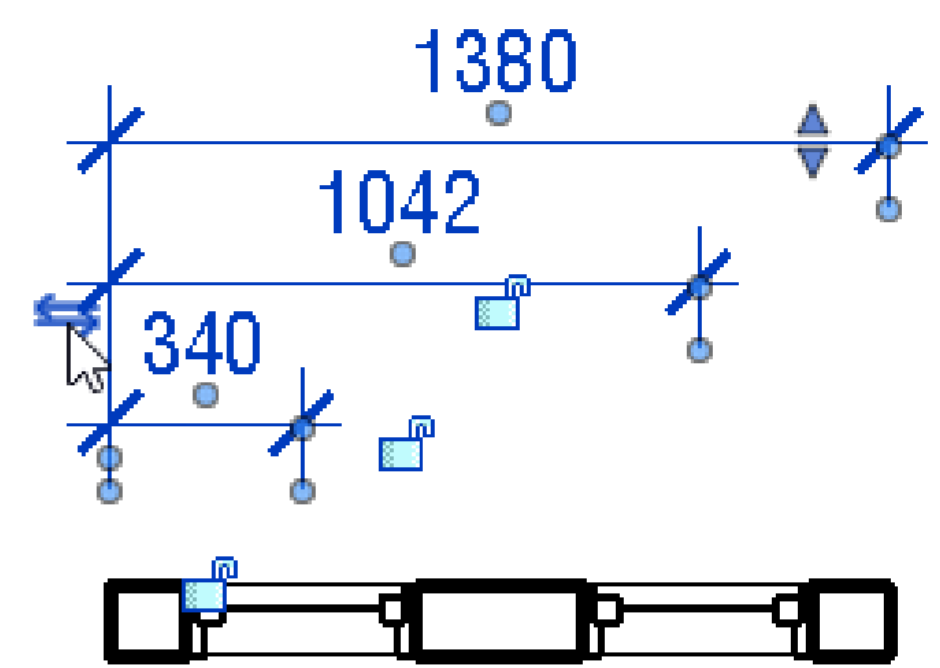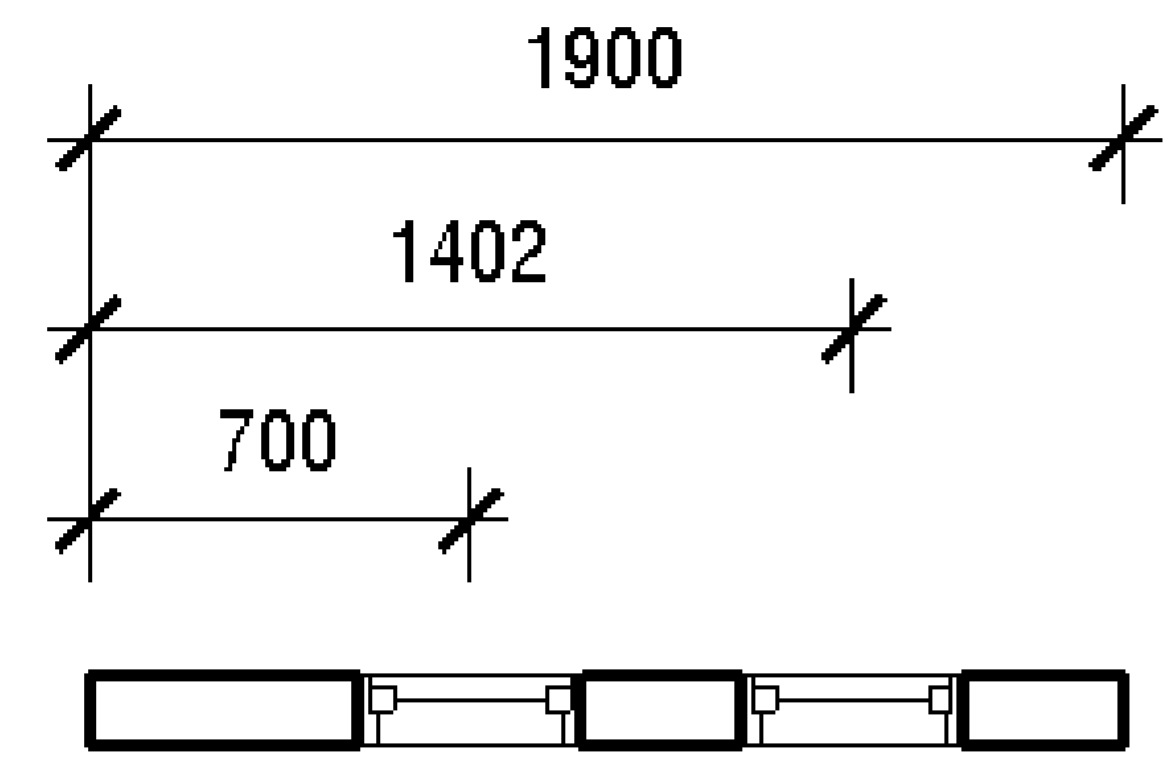  

↔ FLIP DIMENSION

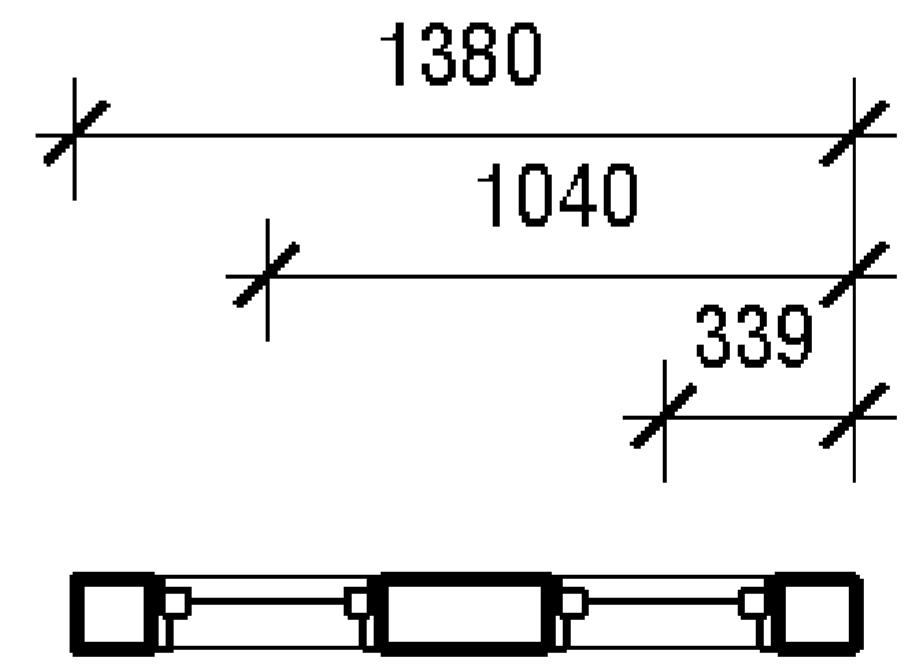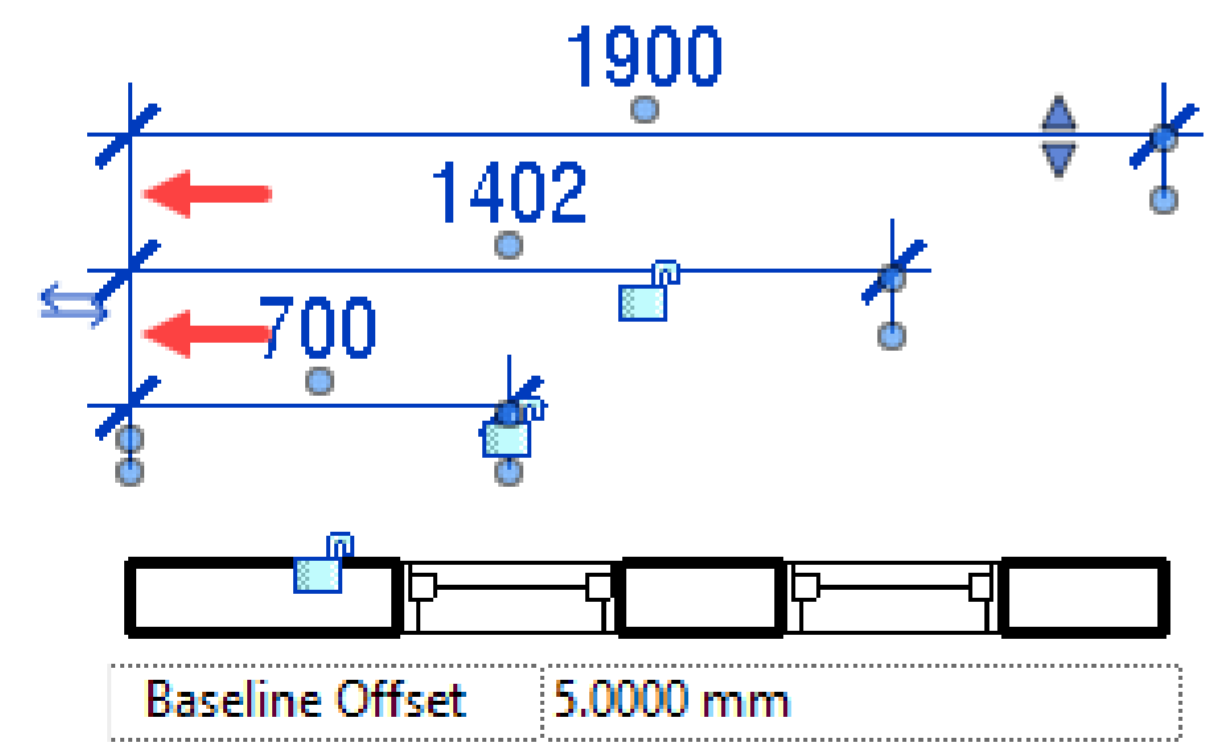  

ORDINATE DIMENSION

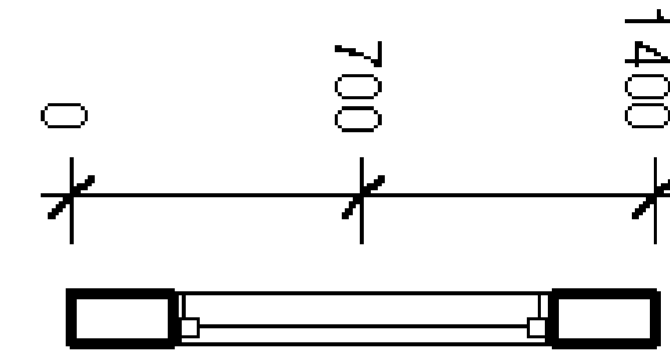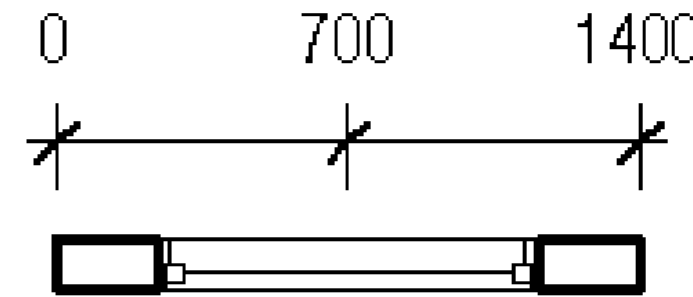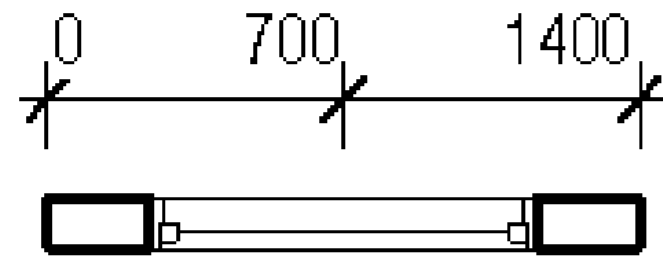   

Ordinate Dimension Settings Edit...

Text Orientation

Parallel to Dimension Line

Parallel to Witness Line

Text Orientation

Parallel to Dimension Line

Parallel to Witness Line

Ordinate Dimension Settings ? X

Text Orientation

Parallel to Dimension Line

Parallel to Witness Line

Text Position

End of Witness Line

Next to Witness Line

Origin Visibility:

Witness Line with Text

Origin Tick Mark:

Diagonal 2mm

 
 
Dimension Line Style:

Segmented

Length of Segments:

25 mm

OK Cancel

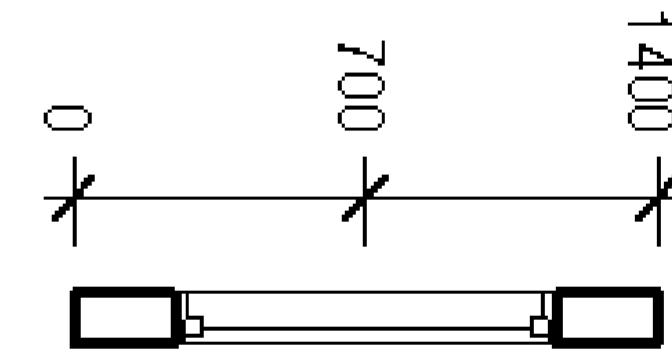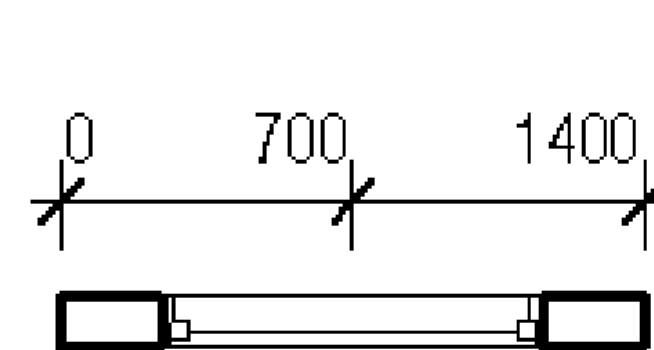

Text Position

End of Witness Line

Next to Witness Line

 
Text Position

End of Witness Line

Next to Witness Line




ORDINATE DIMENSION

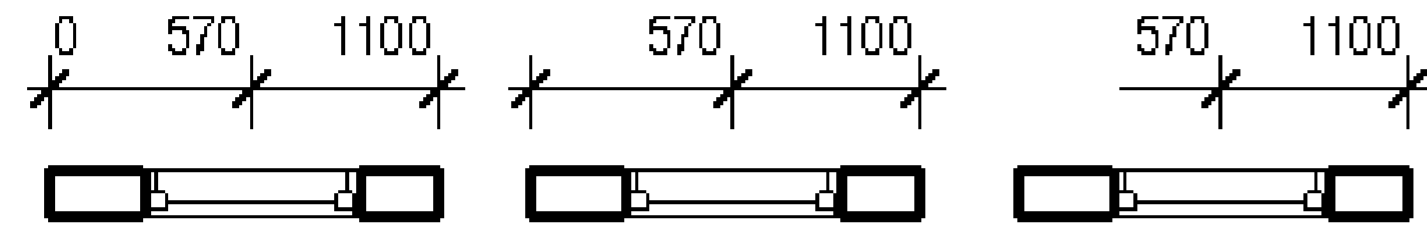

Origin Visibility:
Witness Line with Text


Origin Visibility:
Witness Line only

 Origin Visibility:
None

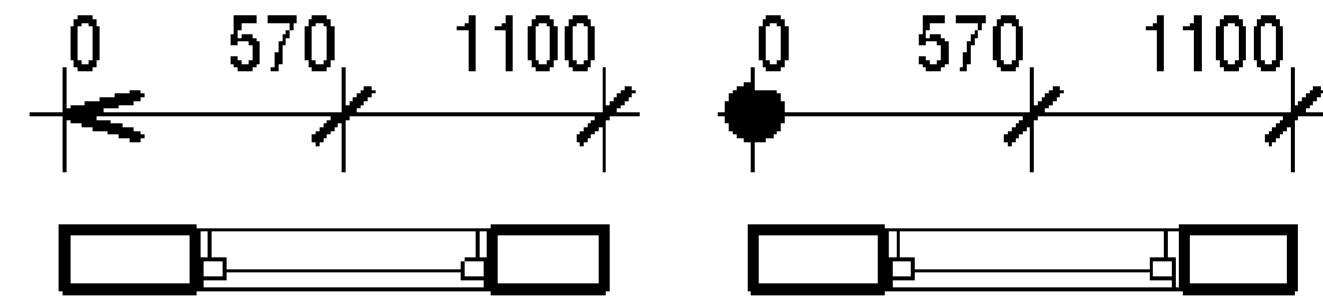

Origin Tick Mark:
Arrow 30 Degree

 
Origin Tick Mark:
Filled Dot 2mm

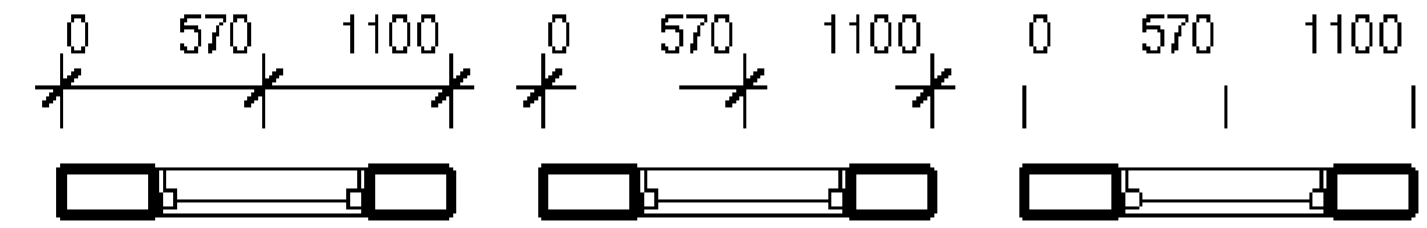


Dimension Line Style:
Continuous

Dimension Line Style:
Segmented

 Dimension Line Style:
None

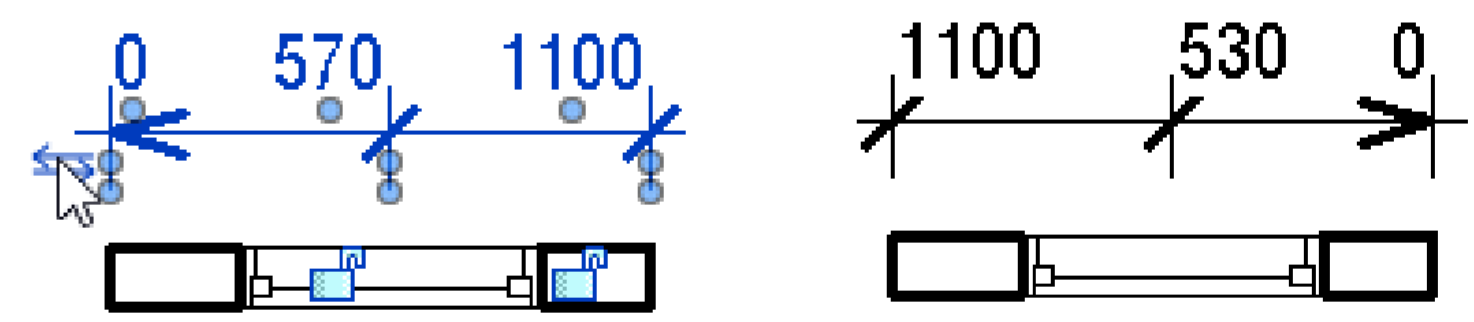



↔ FLIP THE ORIGIN

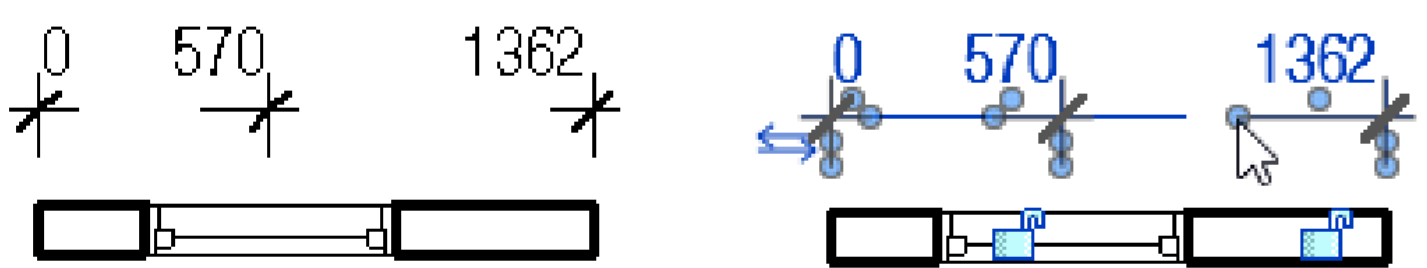 



Length of Segments:
10 mm



  DYNAMO SCRIPT: LINES & REFERENCES

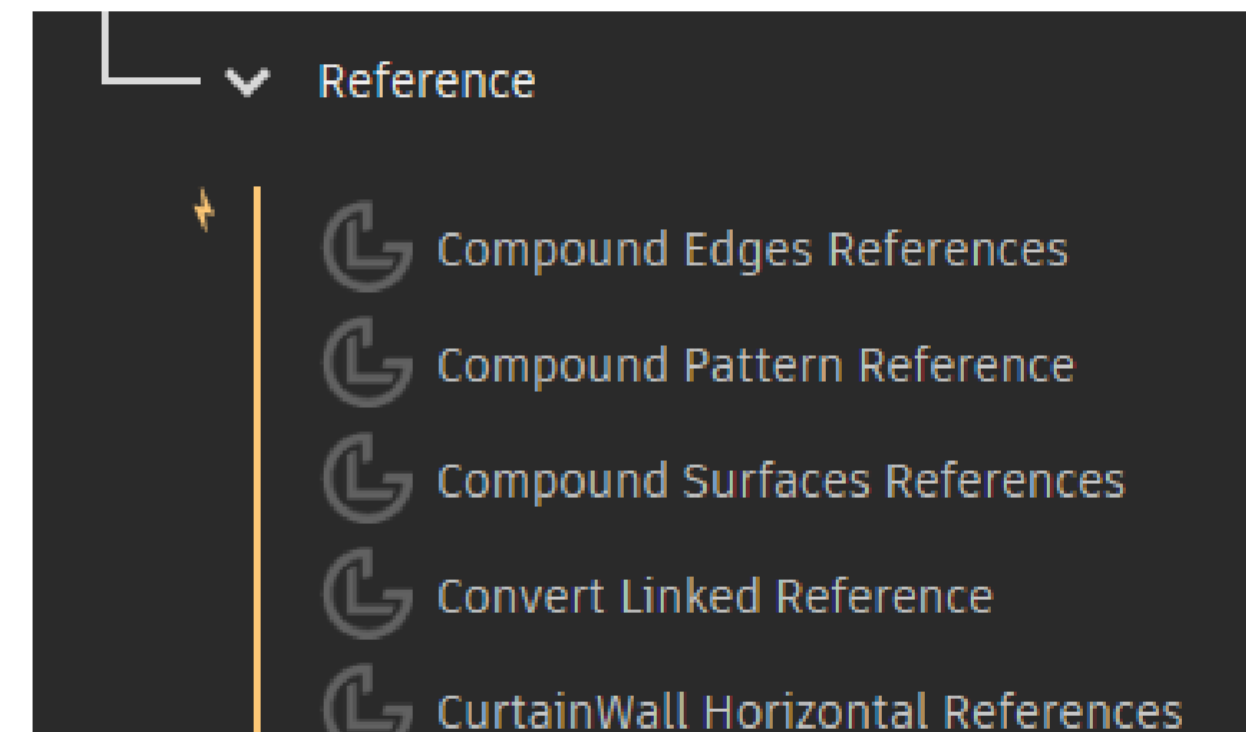
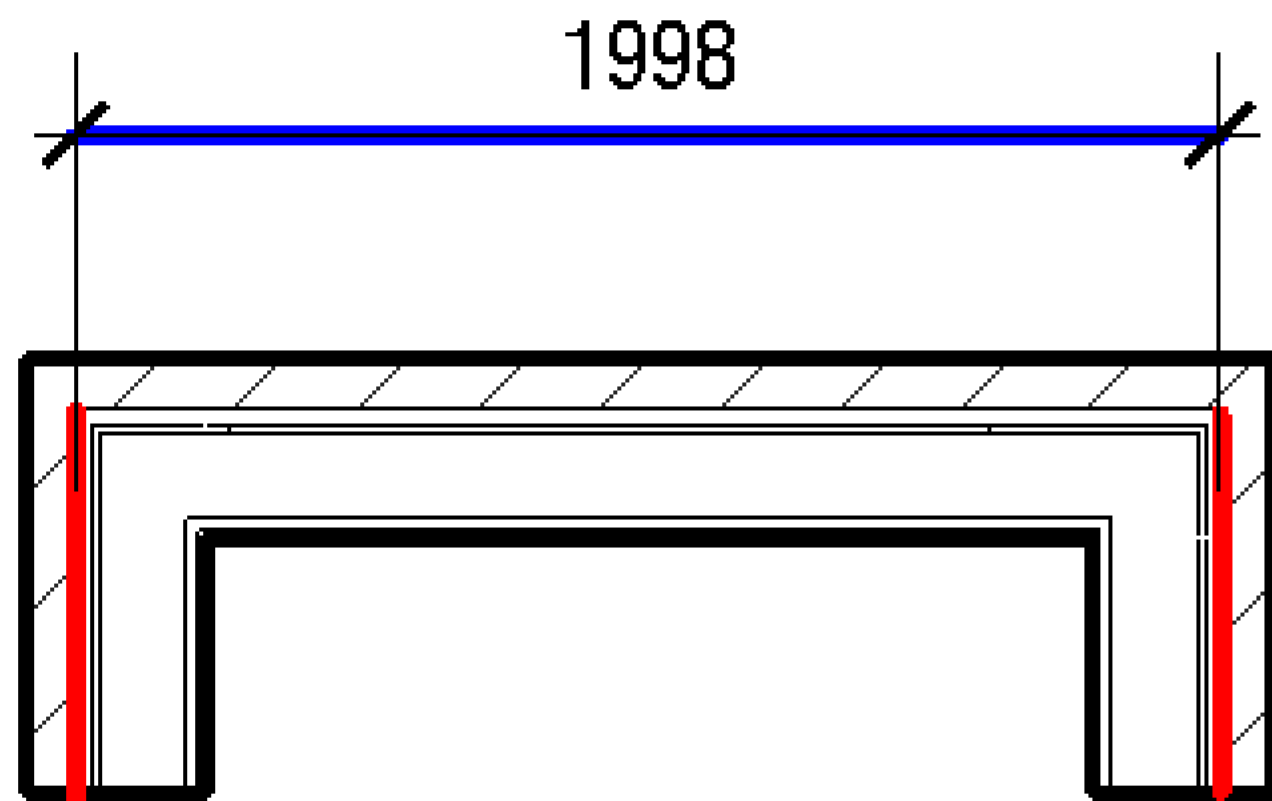


SIMPLE REFERENCES

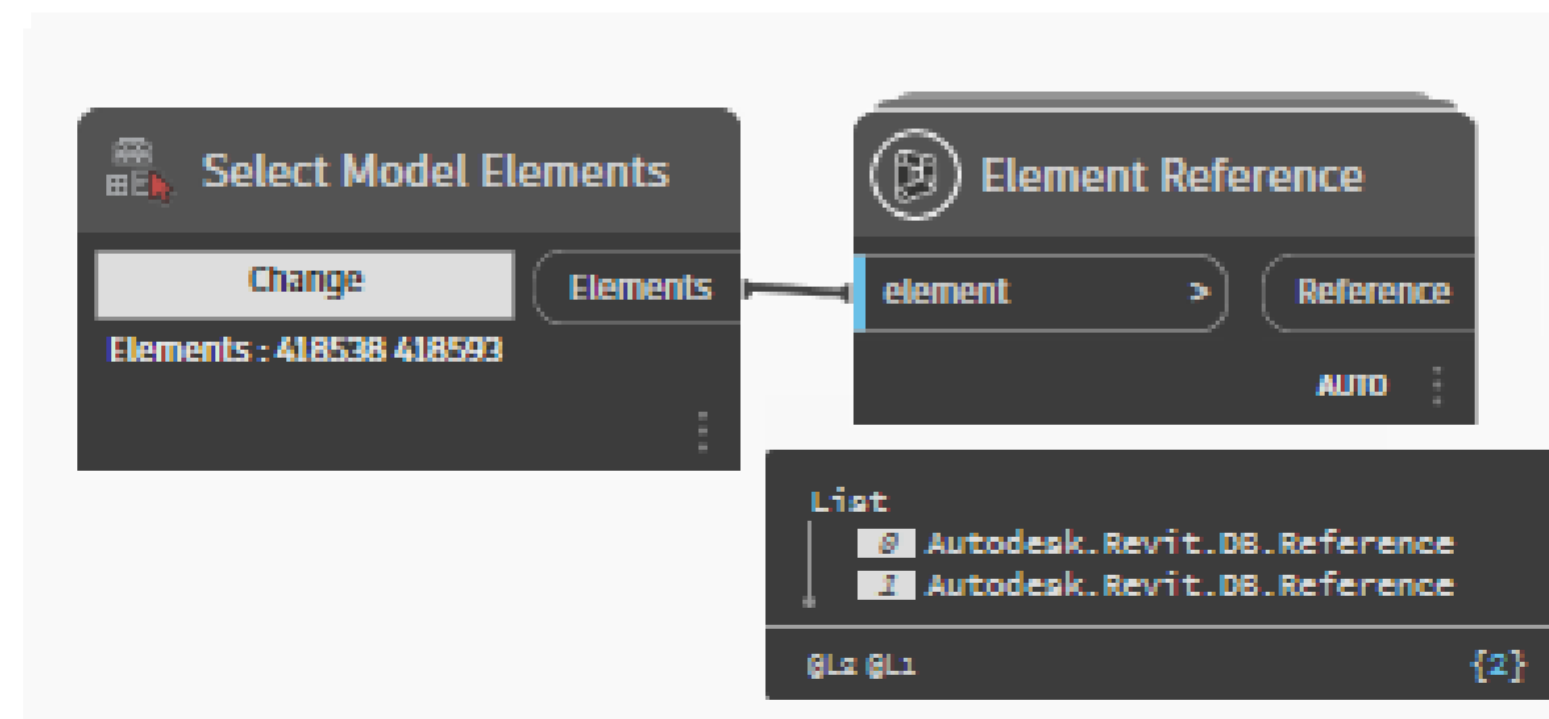 
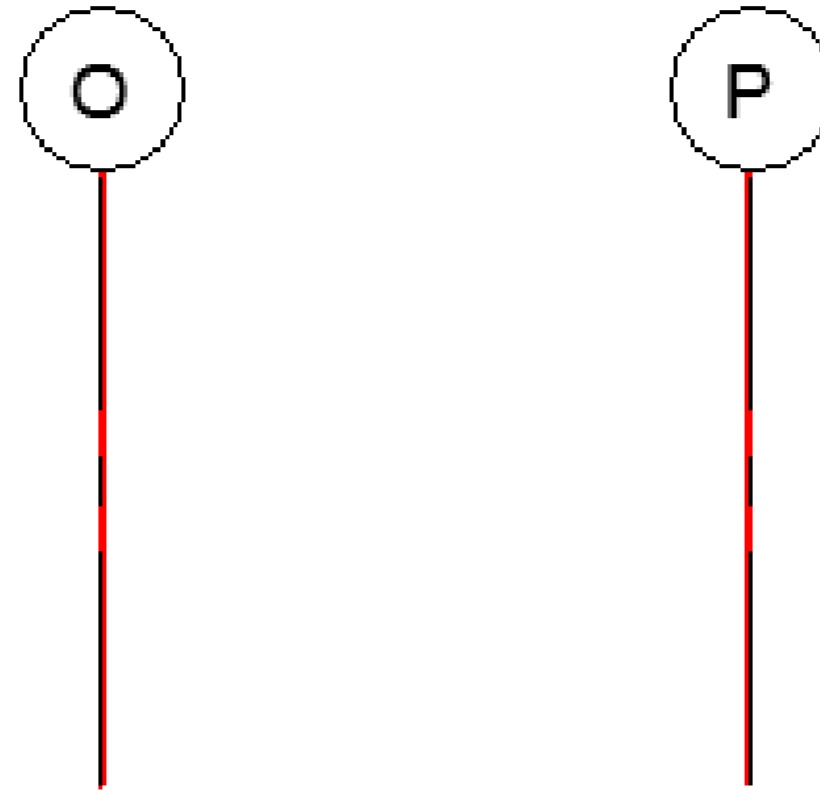 


REVIT PURE LIVE #036
NICOLAS CATELLIER

  CREATE LINE: GET THE POINTS

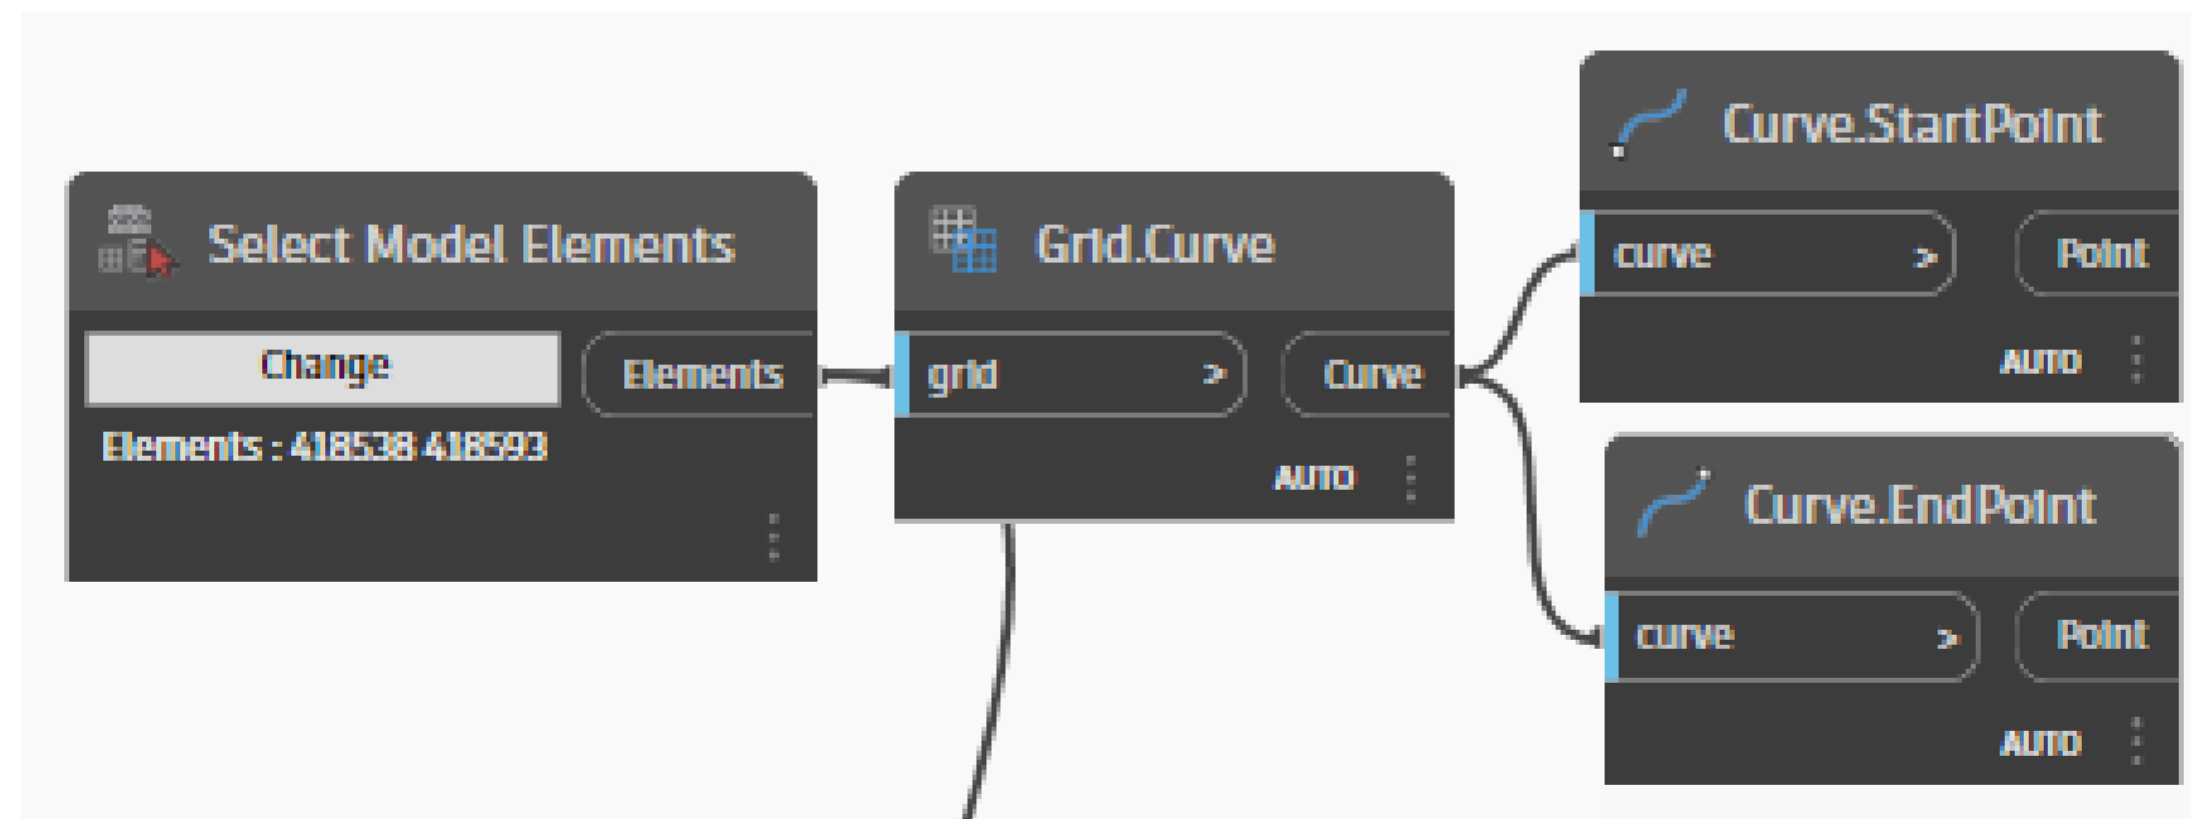
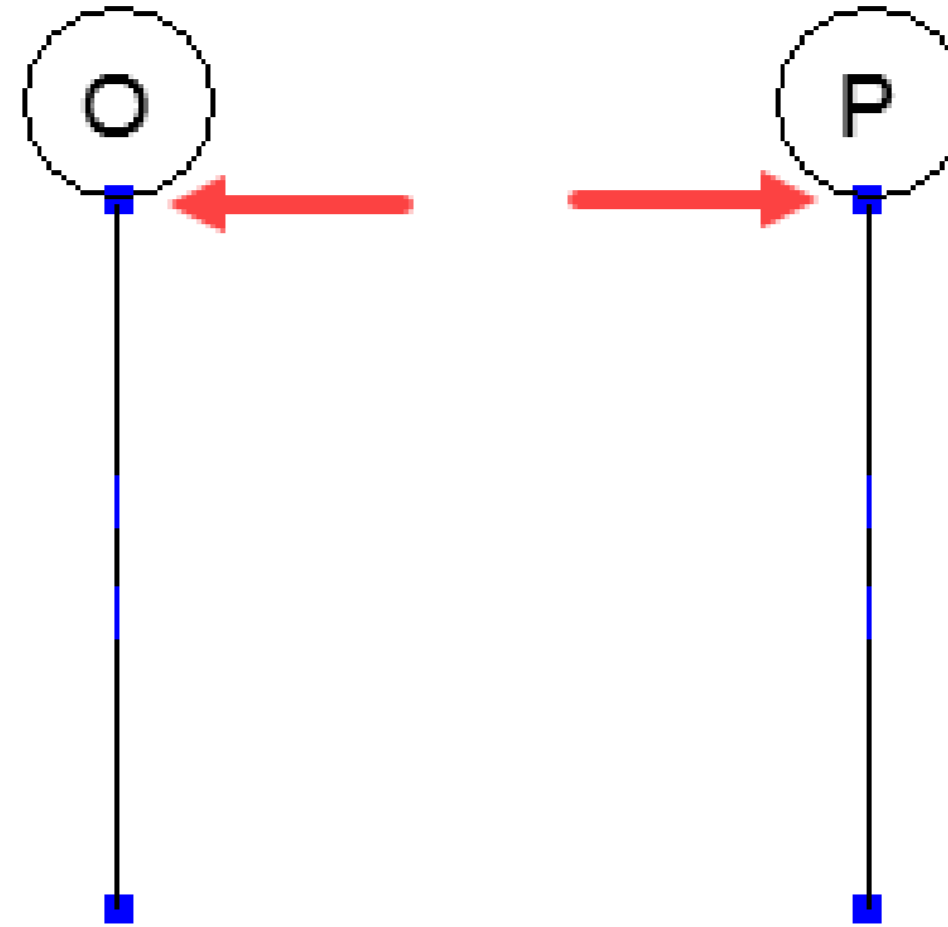


CREATE LINE: LINK THE POINTS

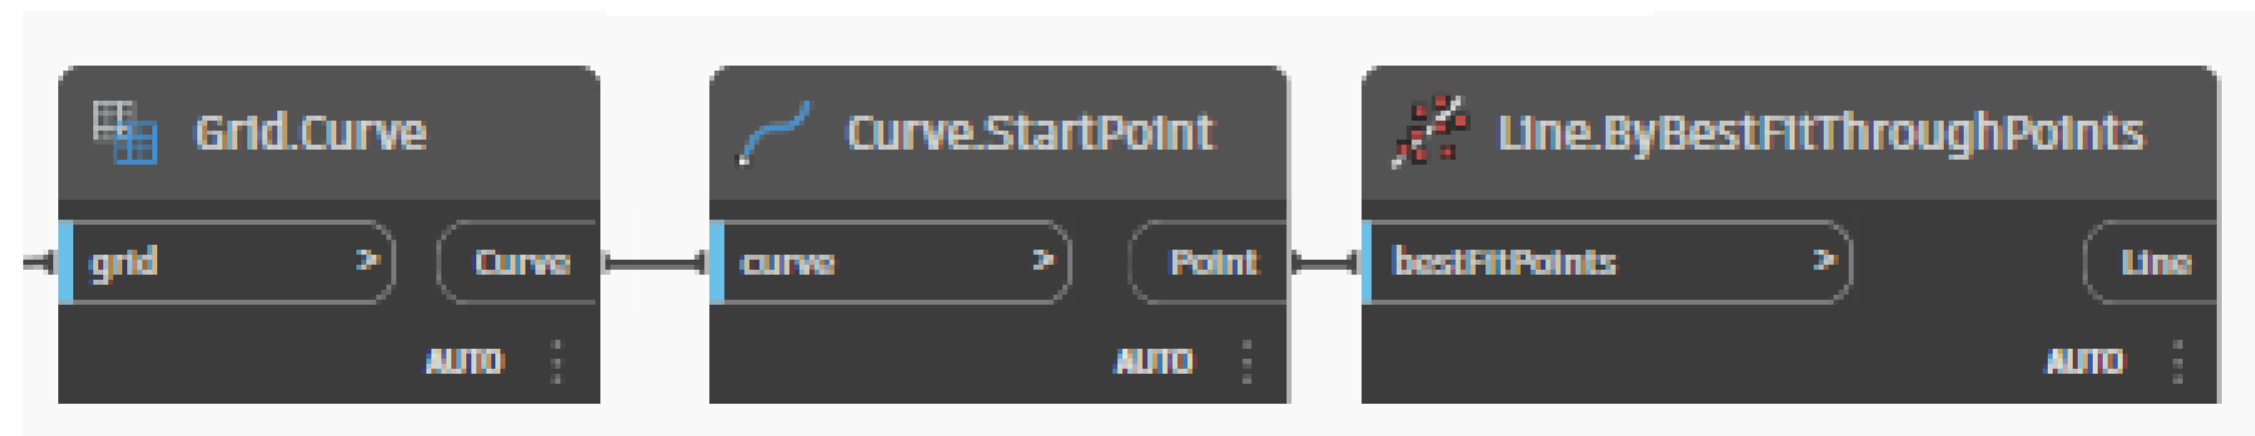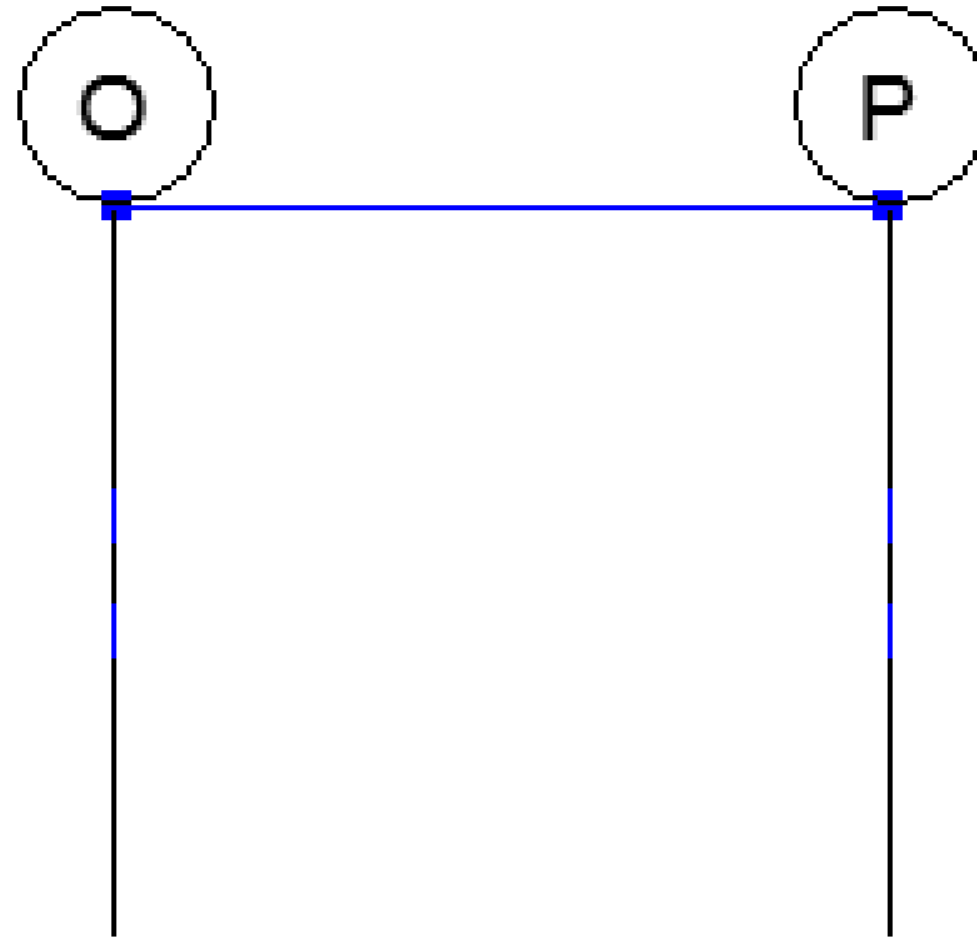  


REVIT PURE LIVE #036
NICOLAS CATELLIER

  GENERATE DIMENSION

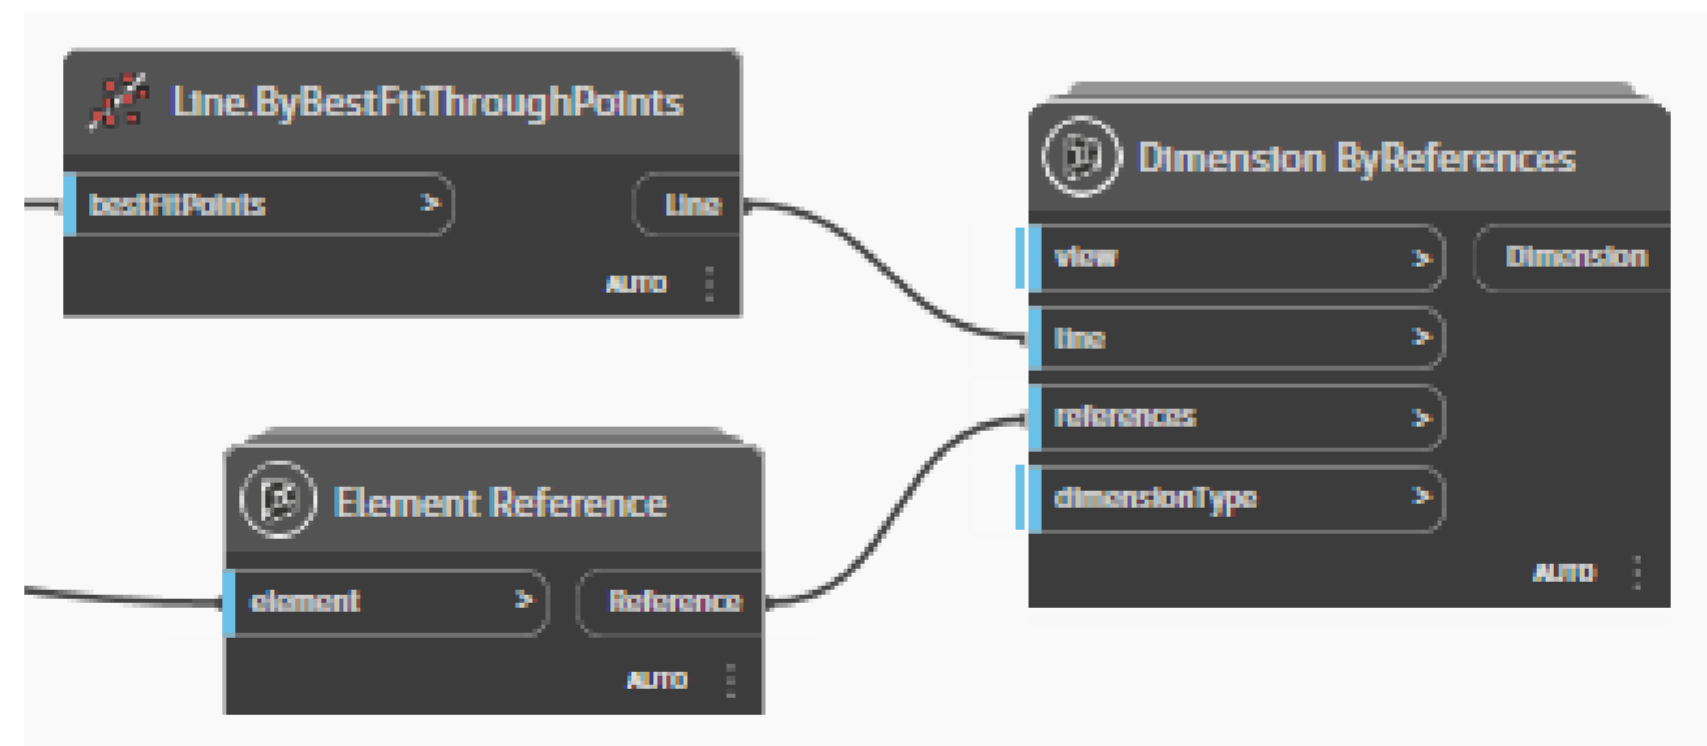
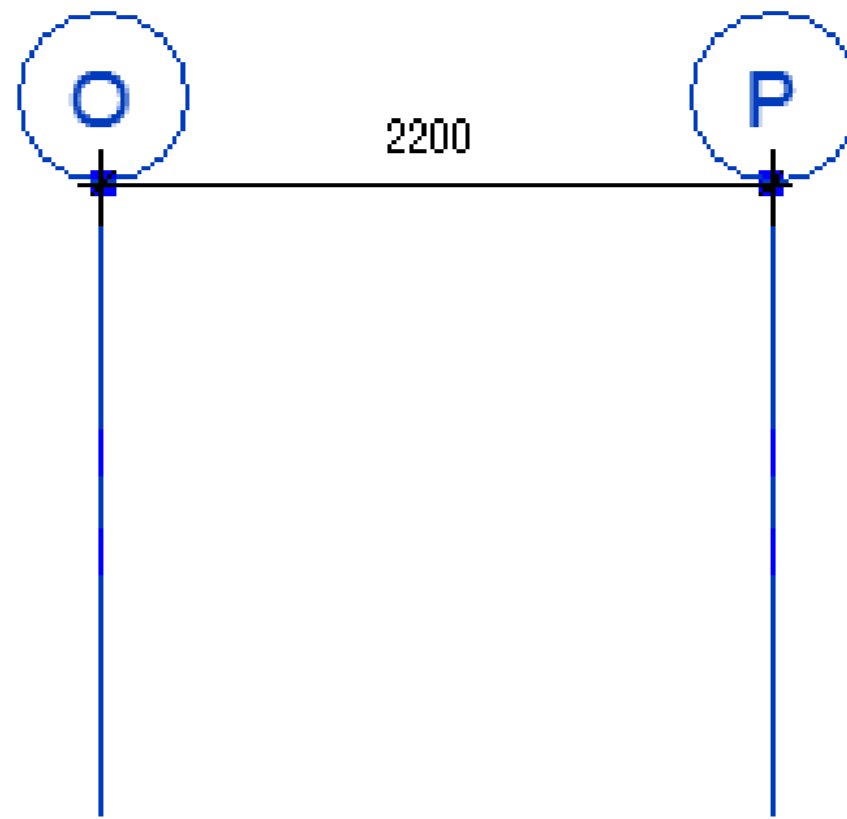


REVIT PURE LIVE #036
NICOLAS CATELLIER

 
DISABLE PREVIEW

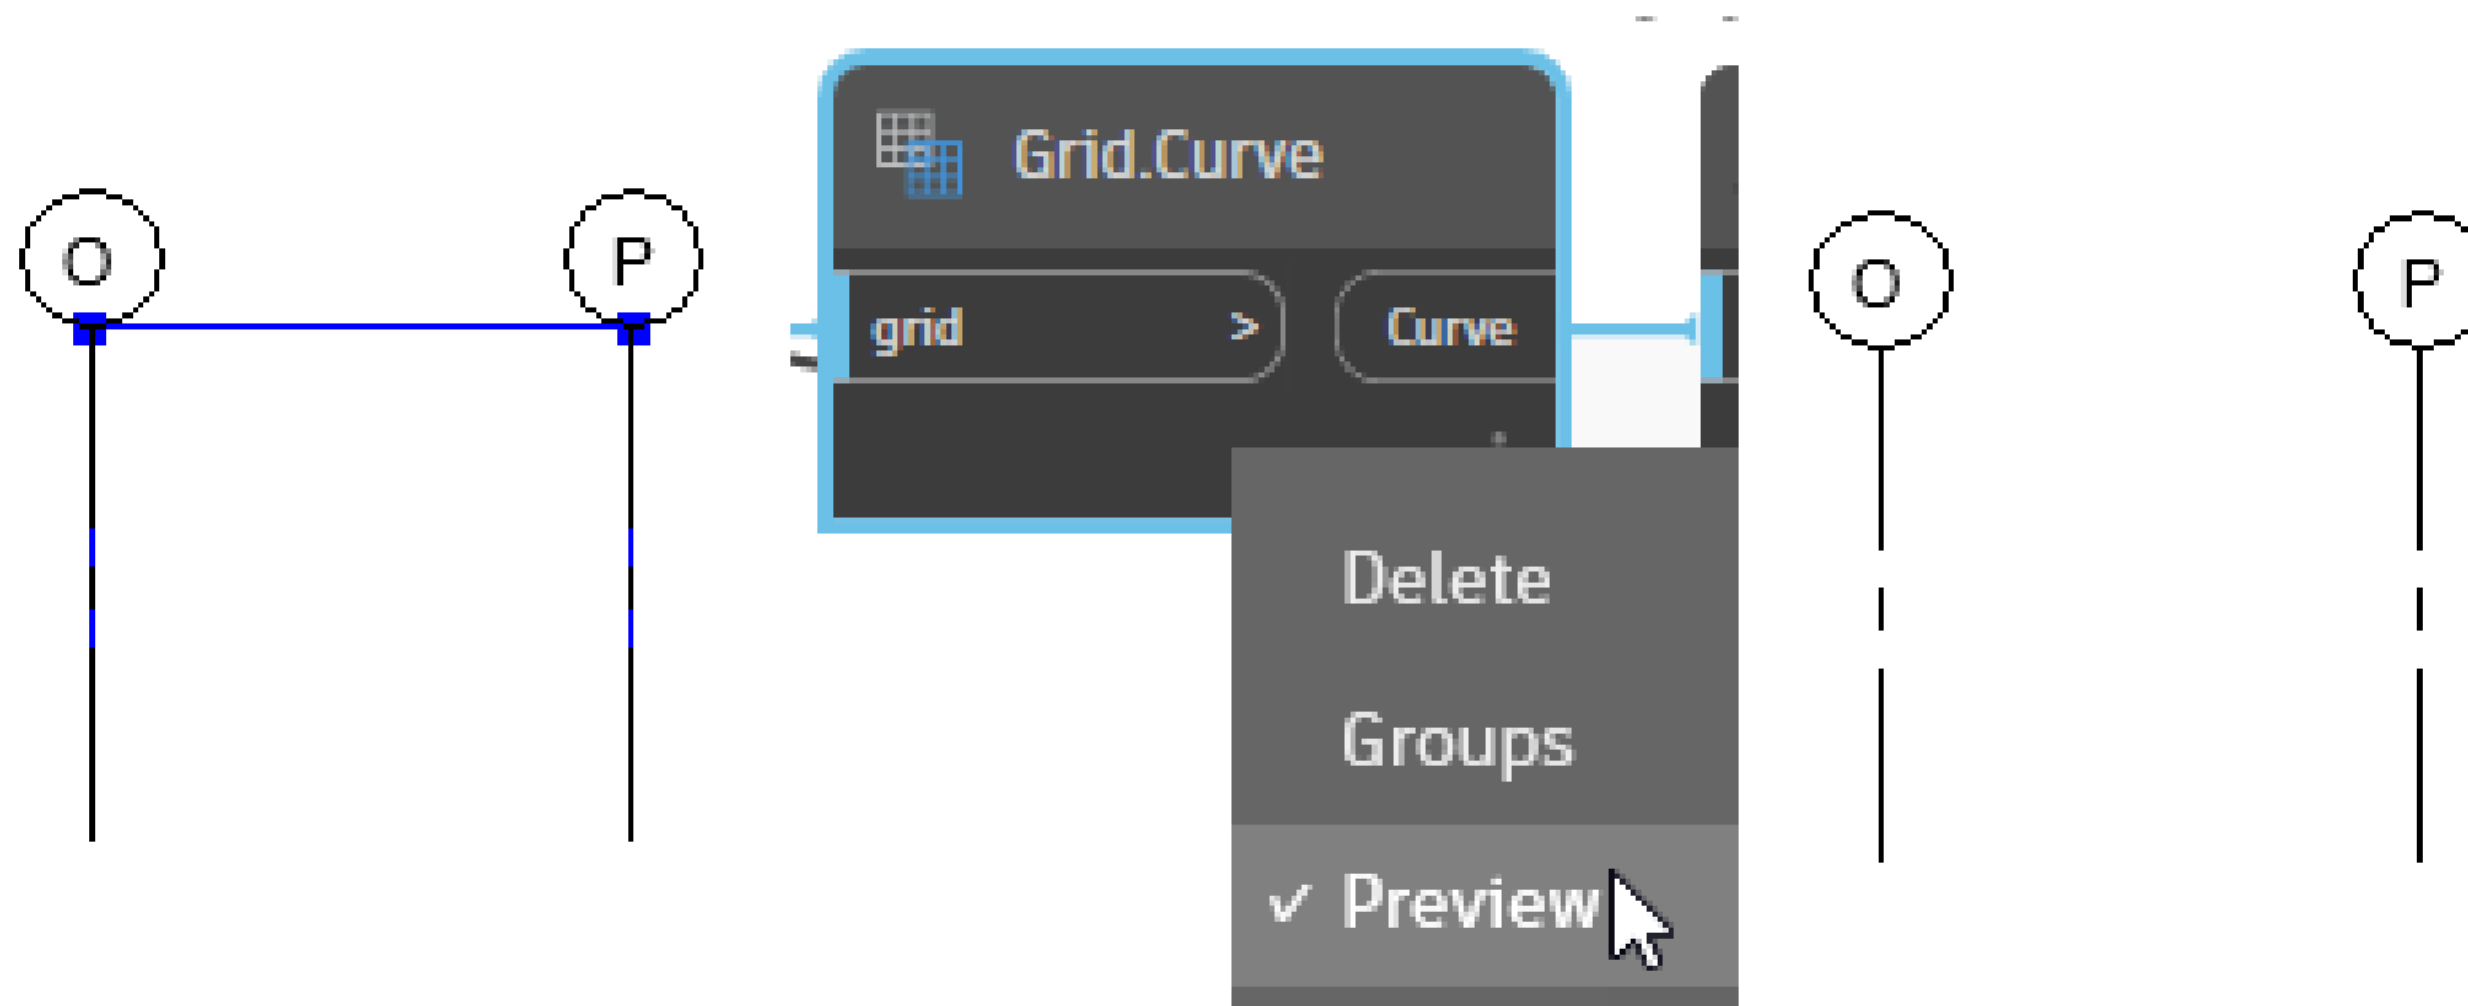

GET DIMENSION TYPE

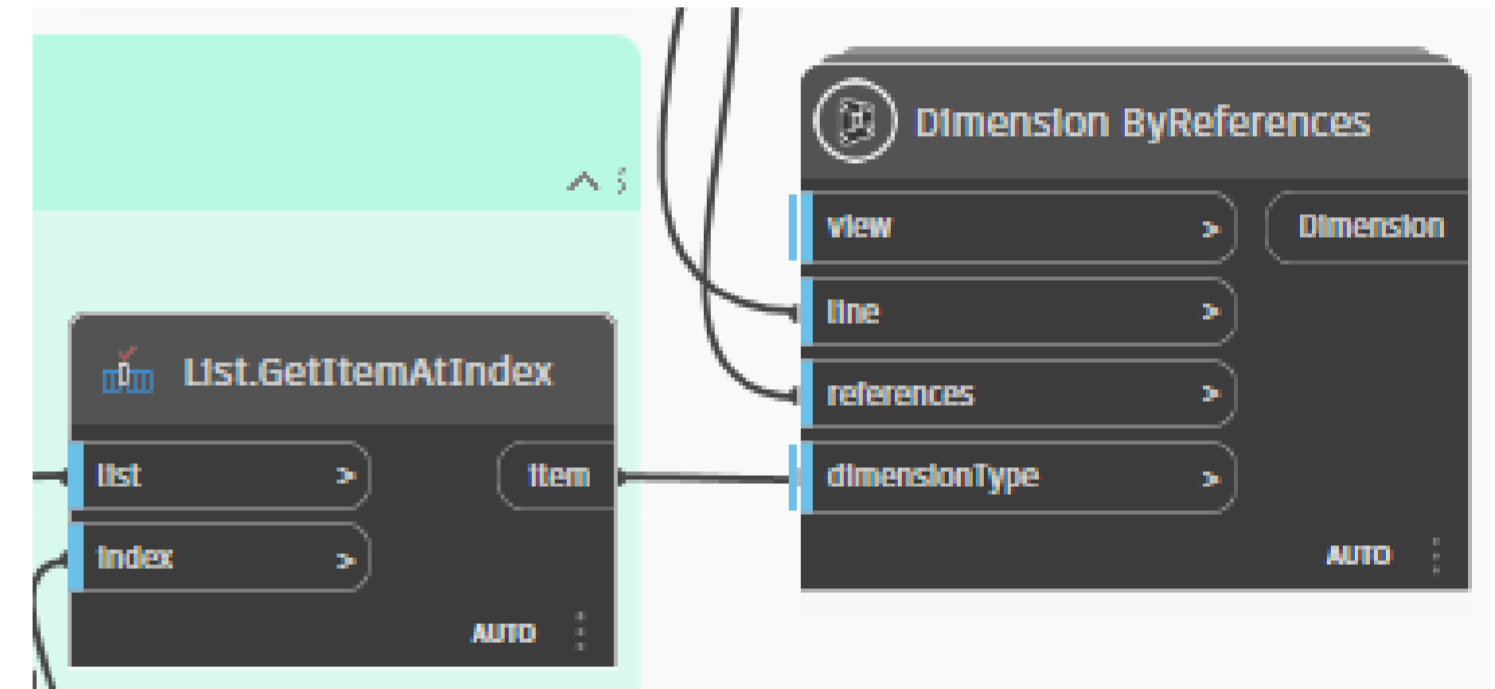 
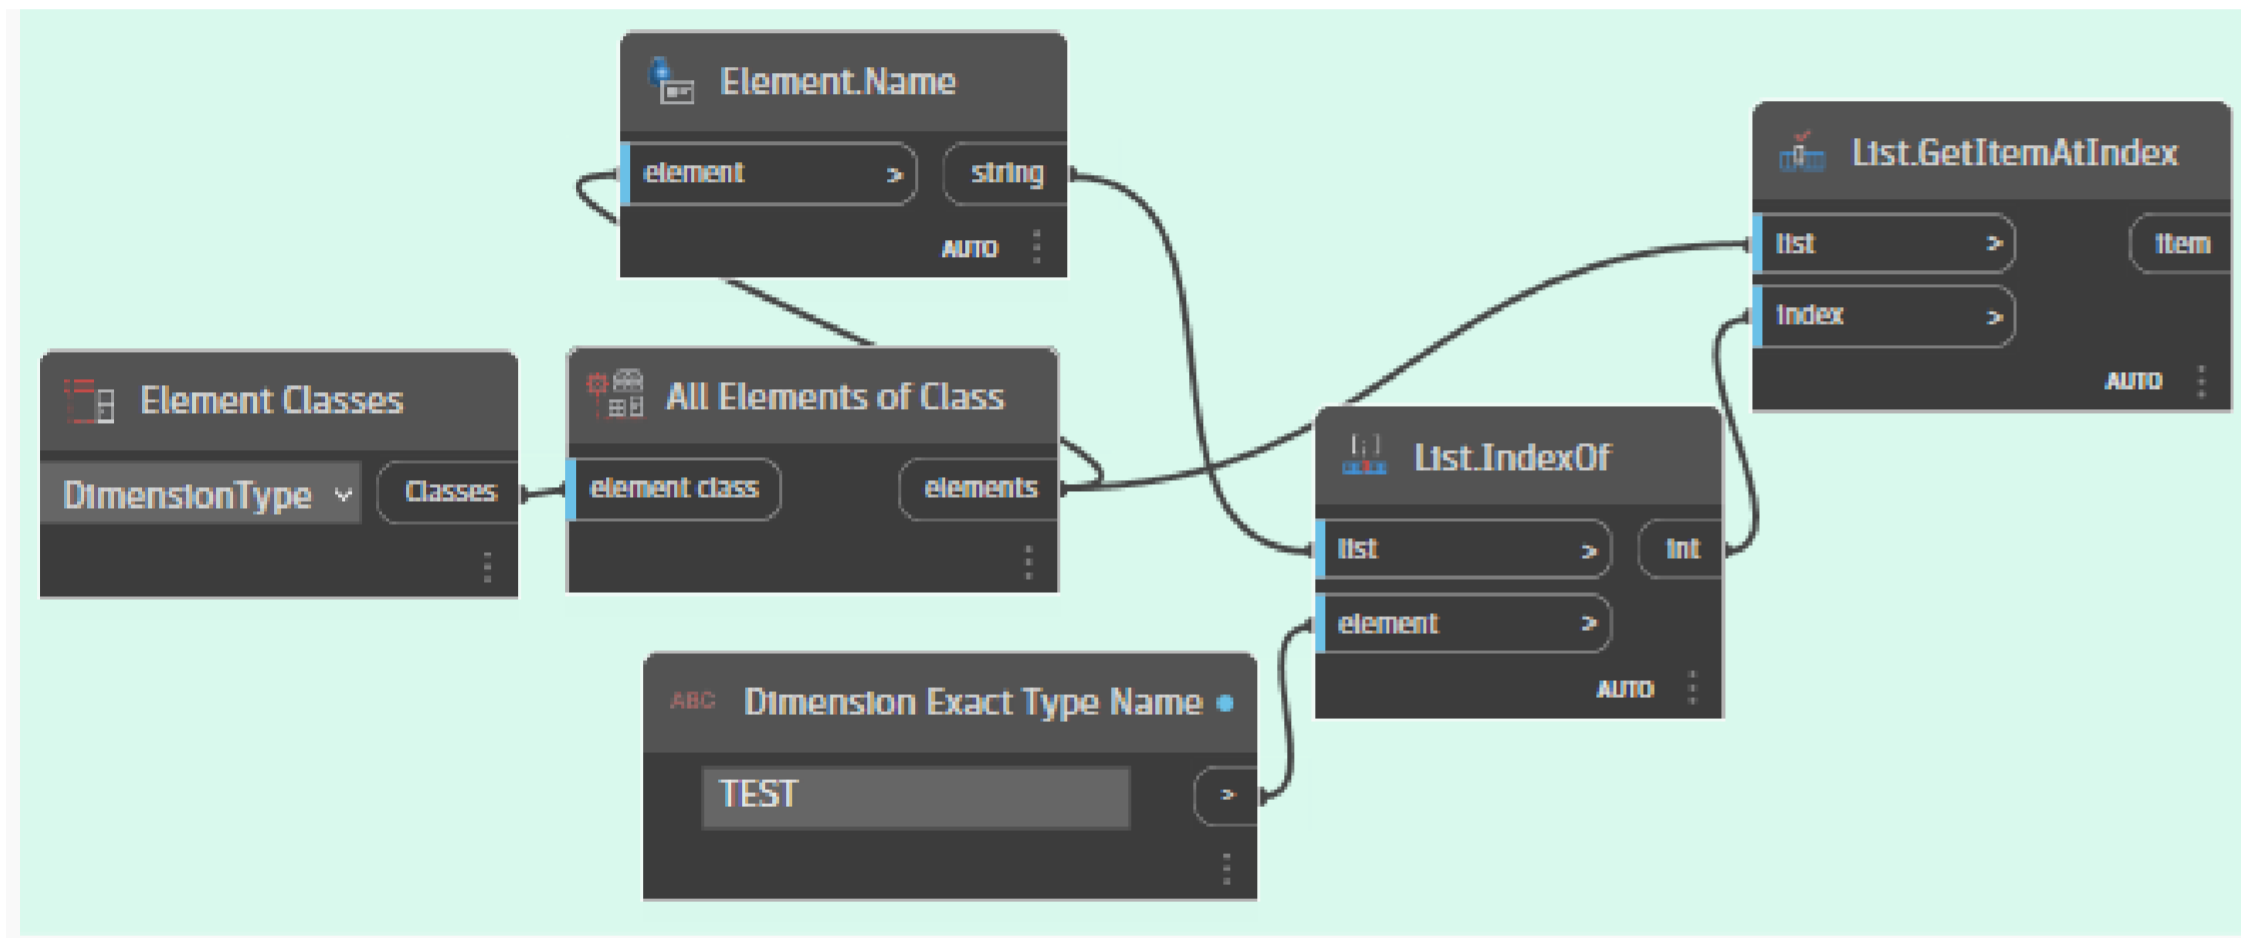 


GET ACTIVE VIEW

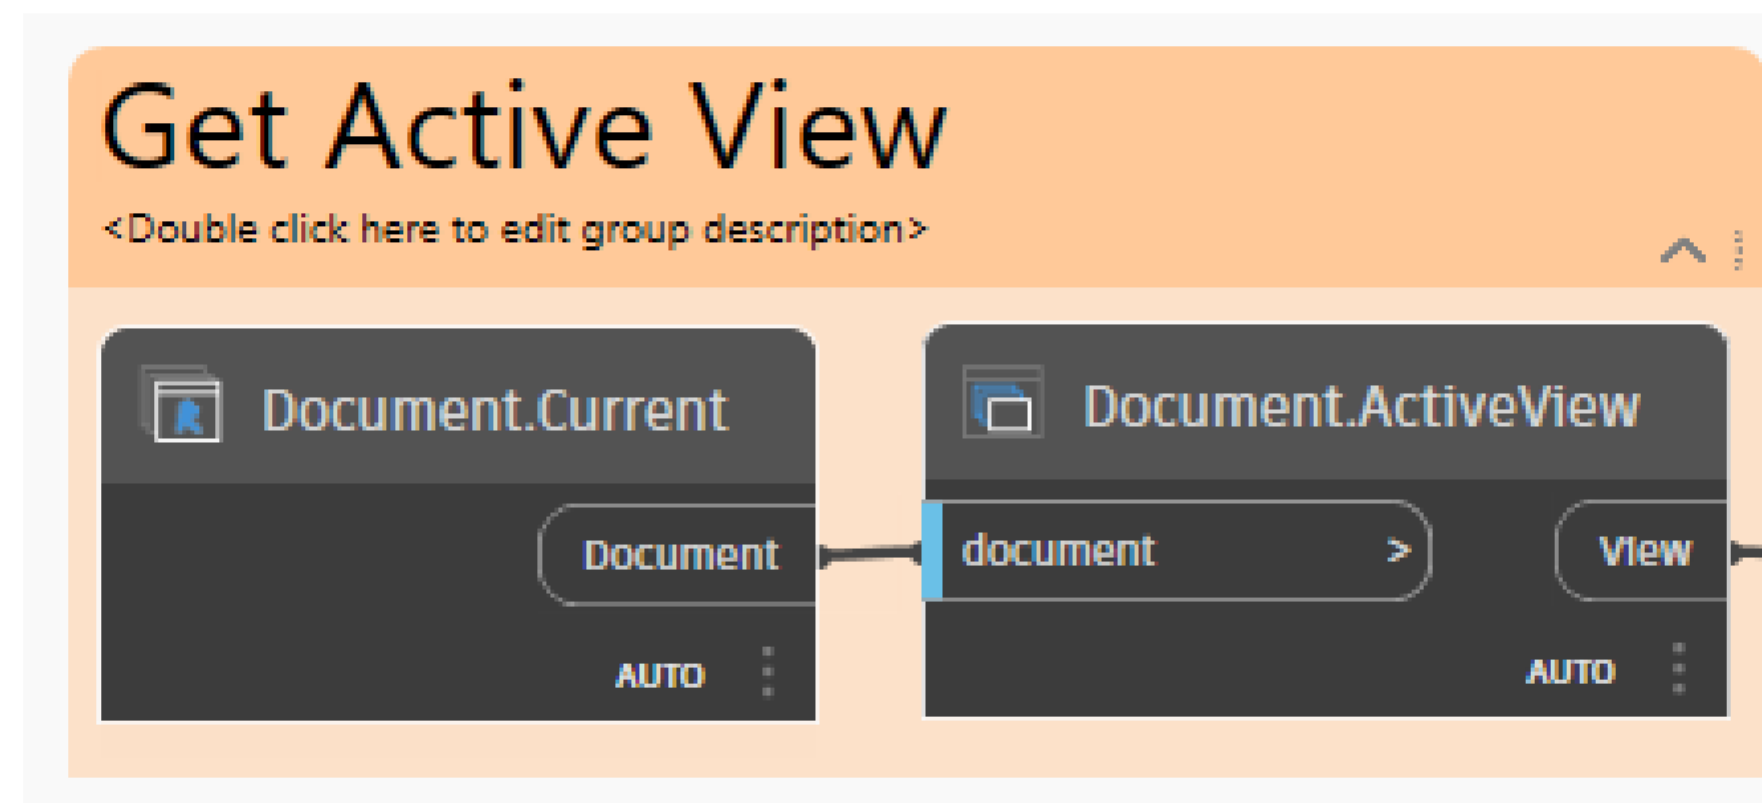 


REVIT PURE LIVE #036
NICOLAS CATELLIER

  
TRANSLATE THE LINE

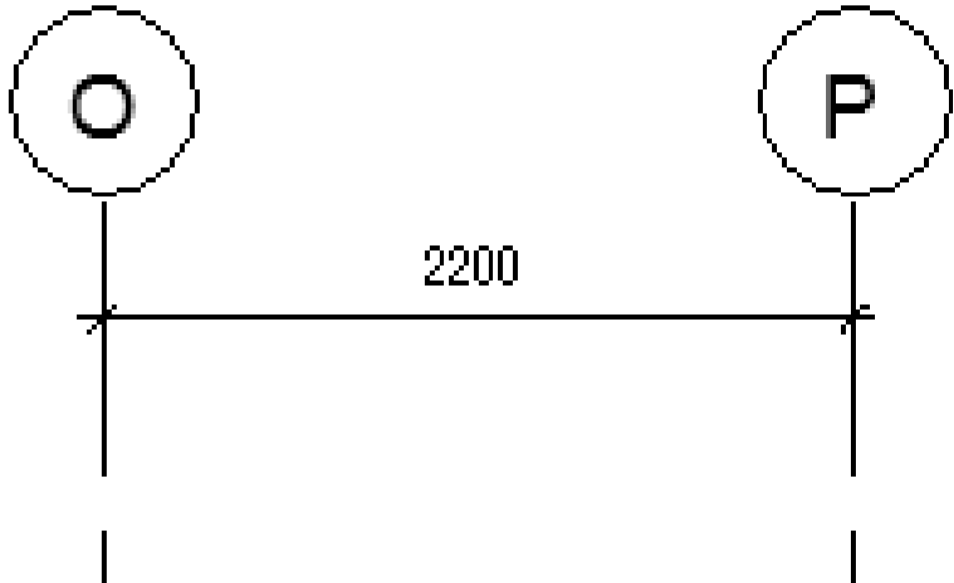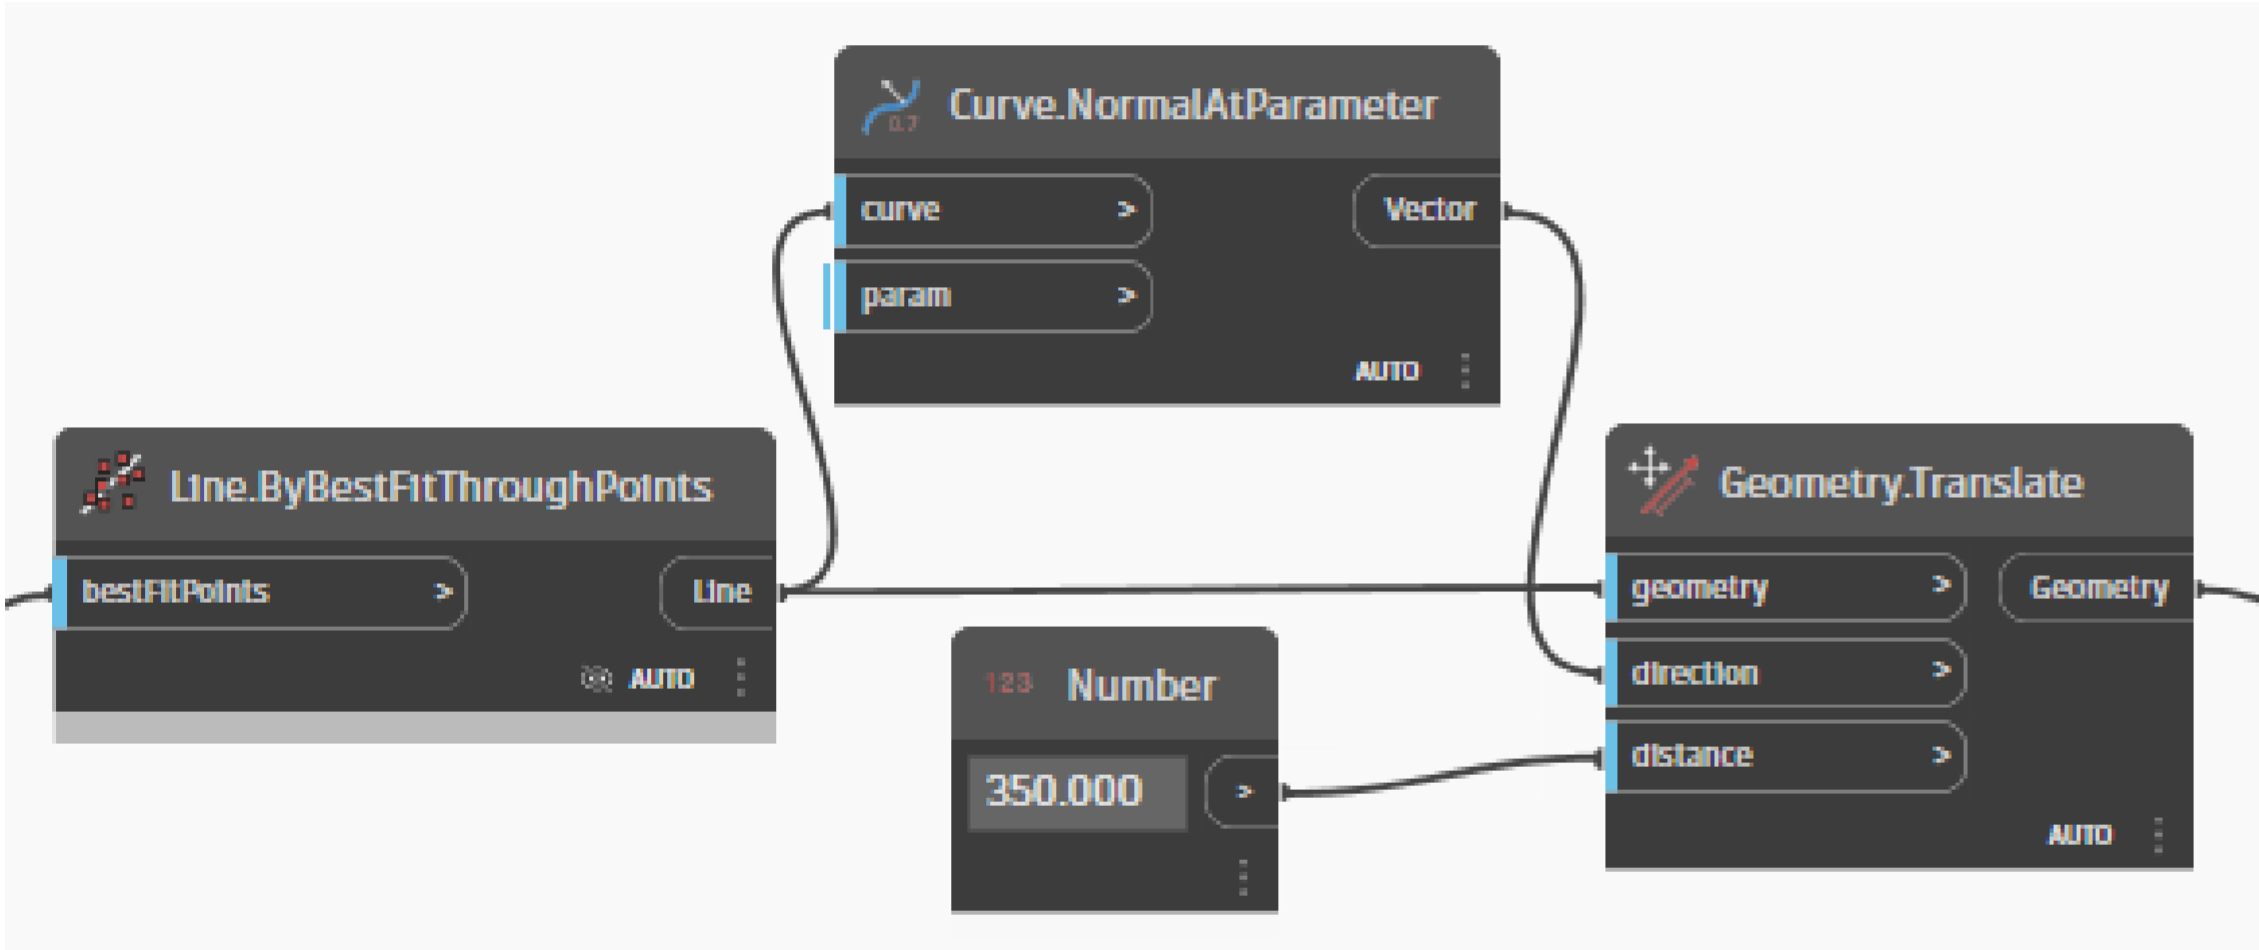

EXPAND THE SCRIPT

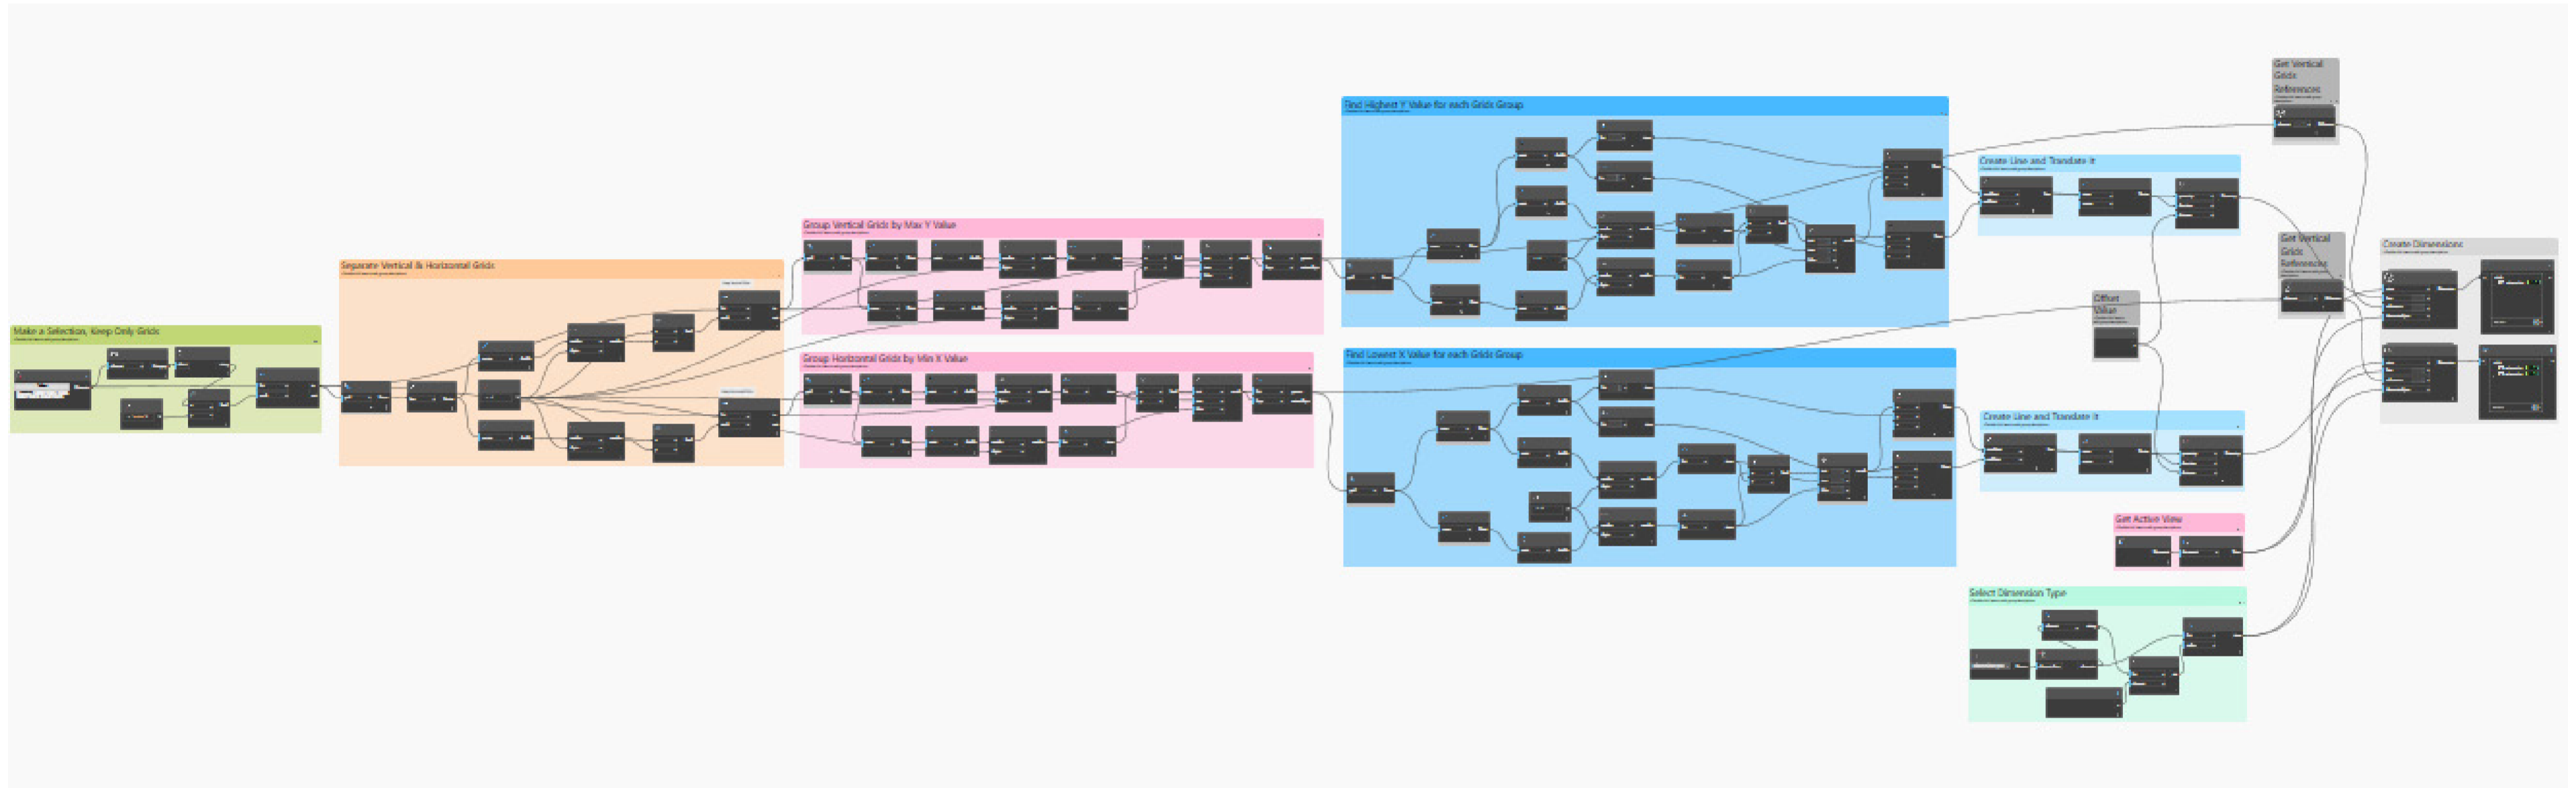 

DIMENSIONING WALLS

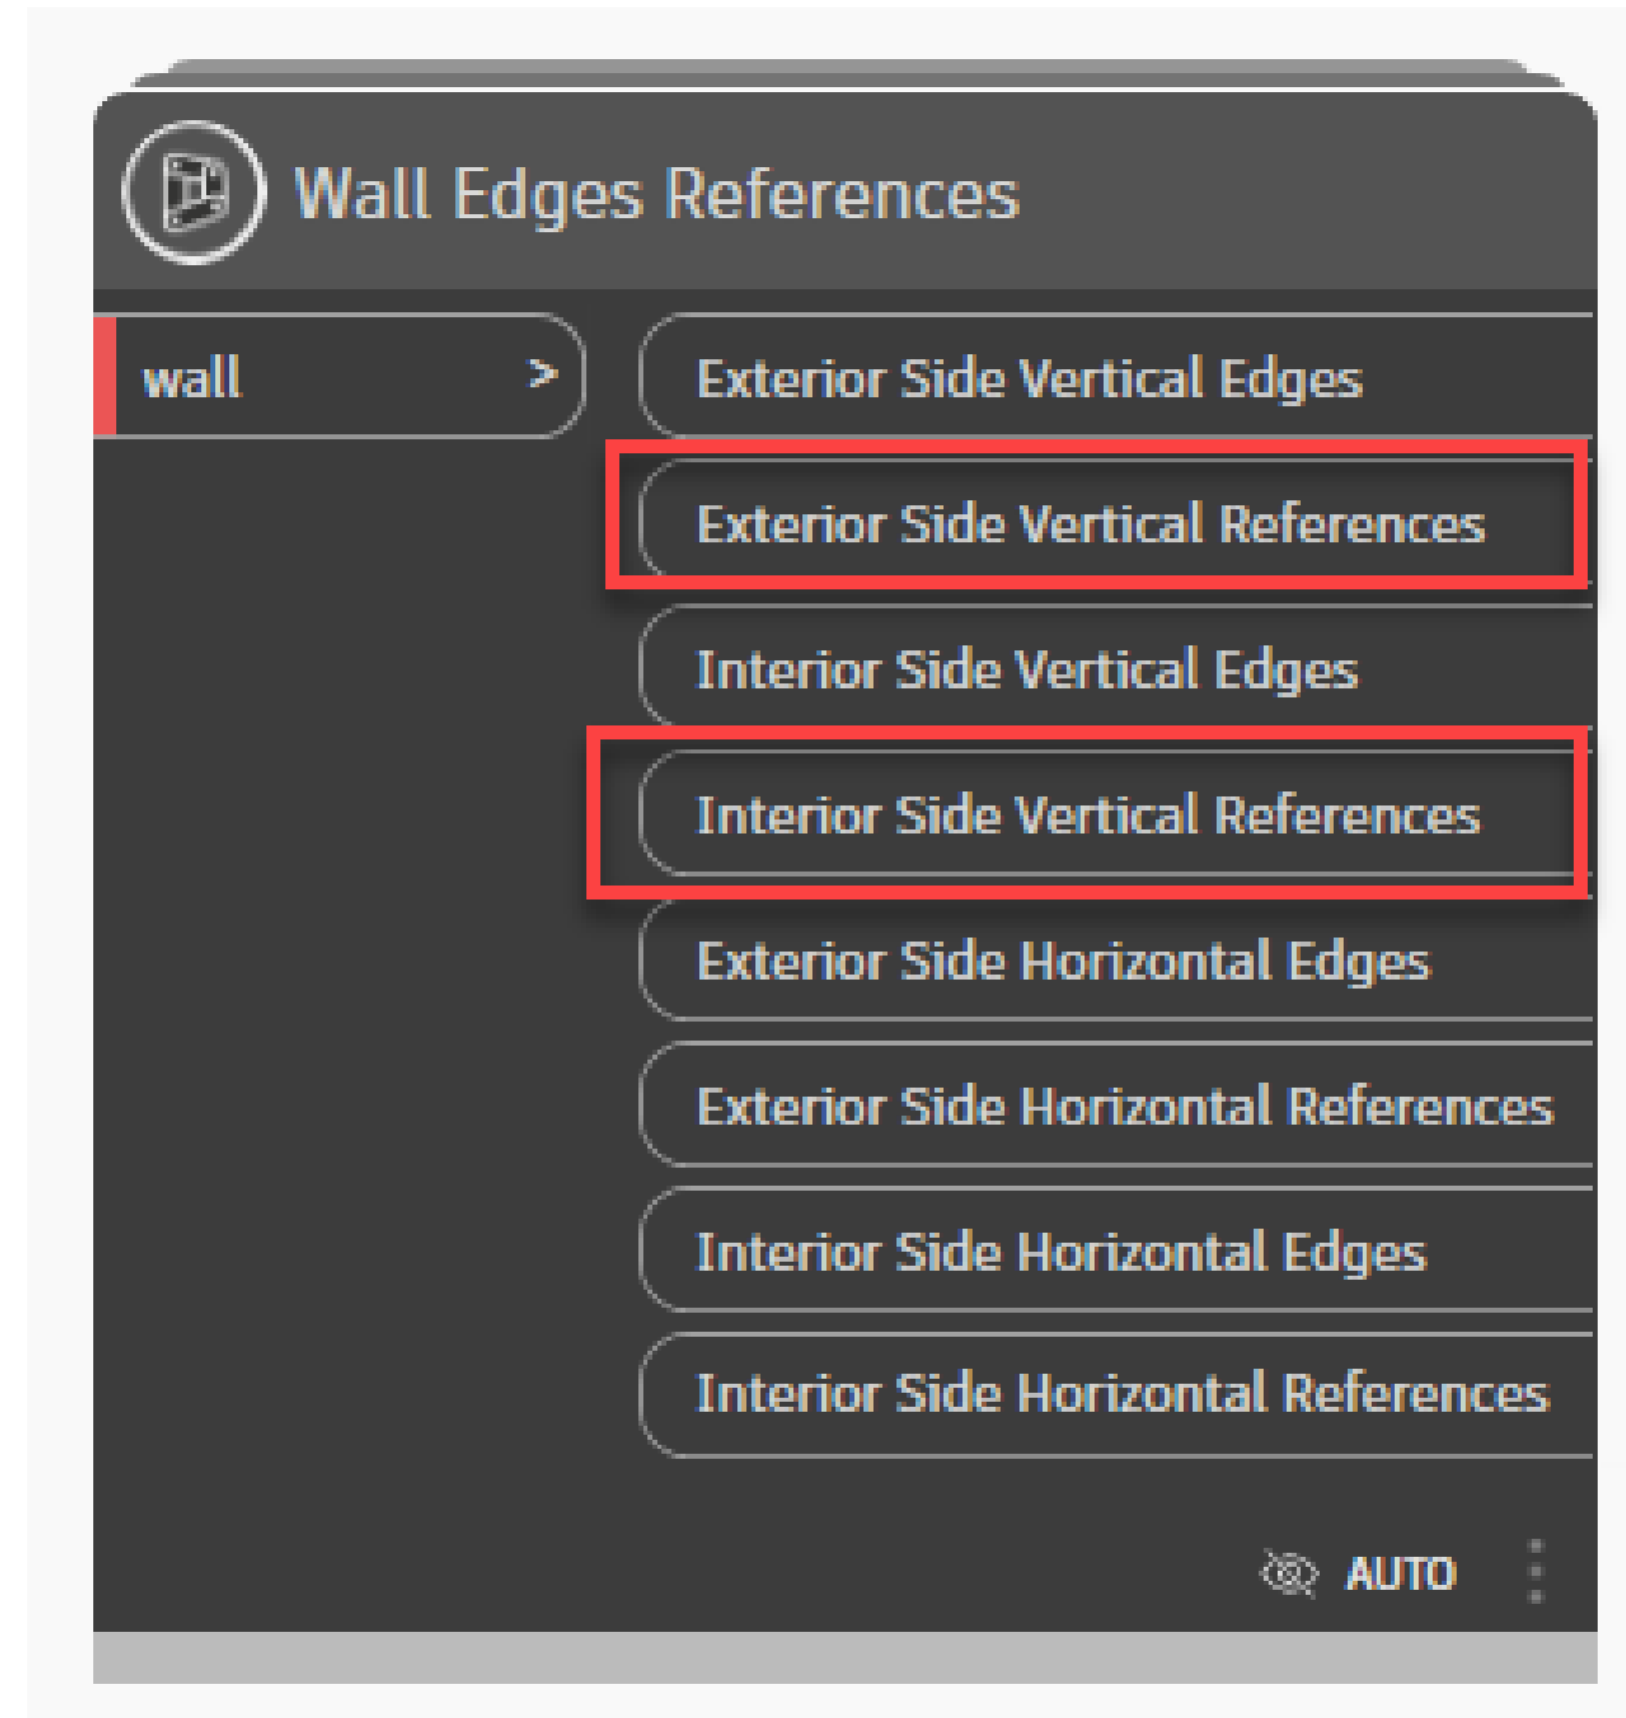 

REVIT PURE LIVE #036
NICOLAS CATELLIER

DYNAMO PLAYER

RP_Auto Dimension Walls ? ⋮

Description : This script automatically creates dimensions for walls in plan and ceiling plan view. You can pick either the interior or exterior extents of the walls. Make sure to type in the exact type name of the dimension you want to use. You need the GeniusLoci and Iron Python packages installed. This works best with wall using the "Miter" junction type.

Author : BIM Pure Productions / Nicolas Catellier

URL : <https://revitpure.com>

Inputs

Dimension Exact Type Name

TEST

Dimension Offset to Element

350

Select Walls

Total Elements: 0

 
Show Elements



Select

TRUE=Interior Extents, FALSE=Exterior Extents

False True

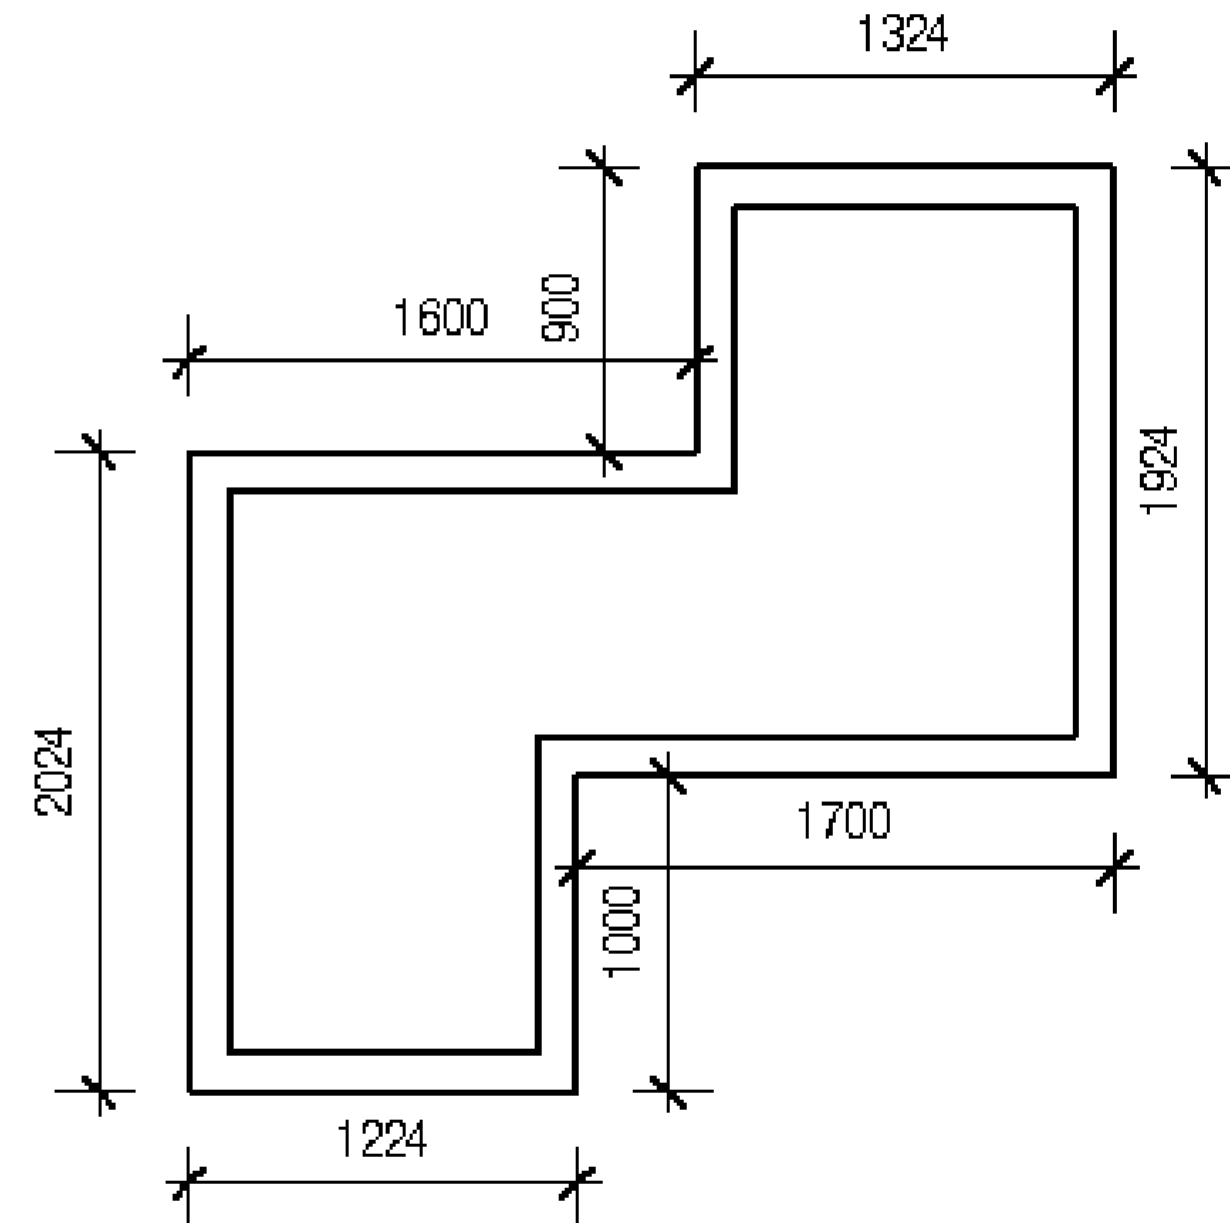

REVIT PURE LIVE #036
NICOLAS CATELLIER

 
DIMENSIONS PACKAGE



DIMENSIONS

3- UNDERSTAND CONTINUOUS VS BASELINE VS ORDINATE

The first parameter that can be modified is **Dimension String Type**. There are 3 options: **Continuous**, **Baseline** and **Ordinate**. In the image below, you can see the difference between the types. In the next pages, we'll focus on the Continuous option, which is the most commonly used. We'll come back to Baseline and Ordinate later.

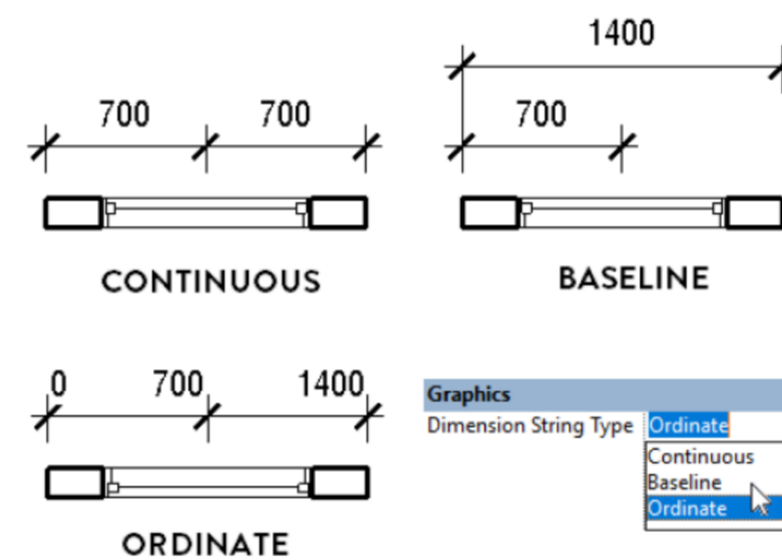


© Copyright 2022 - BIM Pure Productions - revitpure.com

5


DIMENSIONS

4- SET WITNESS & DIMENSION LINES OPTIONS

 Dimension Line Extension refers to extension lines perpendicular to the elements being dimensioned.

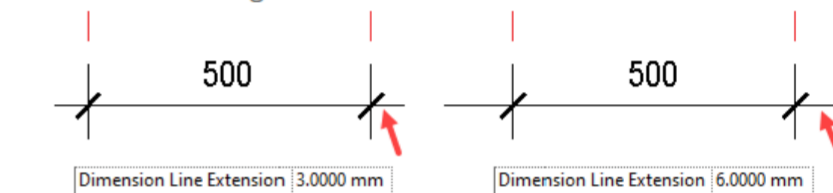

 Witness Line Extension refers to exterior extension lines parallel to the element being dimensioned.

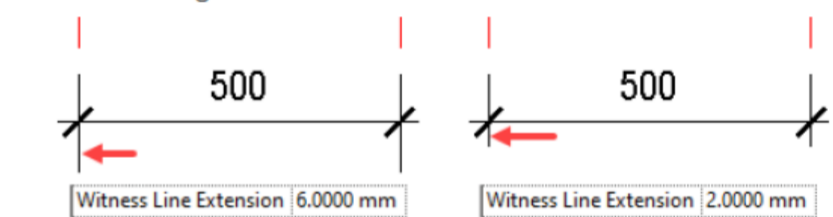

Witness Line Control: There are two options: **Gap to Element** lets you decide the distance between the element and the witness line. **Fixed to Dimension Line** lets you set a specific length for the witness line.



© Copyright 2022 - BIM Pure Productions - revitpure.com

6



 
REVIT PURE LIVE #036
NICOLAS CATELLIER

LEARNING PACKAGES FOR REVIT


25% OFF + BONUS
UNTIL JUNE 6TH




BASICS

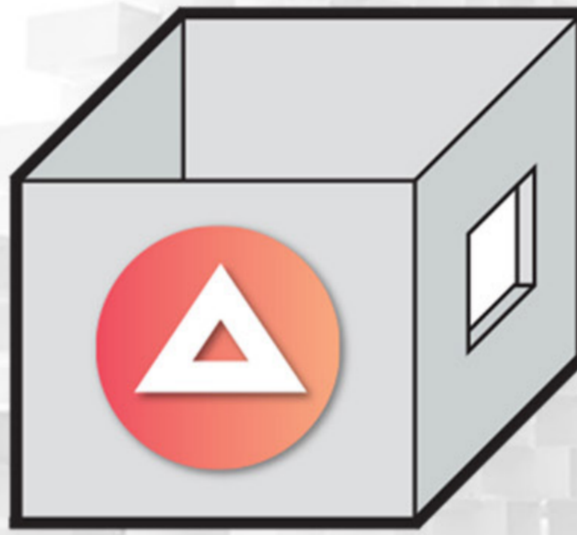

DESIGN

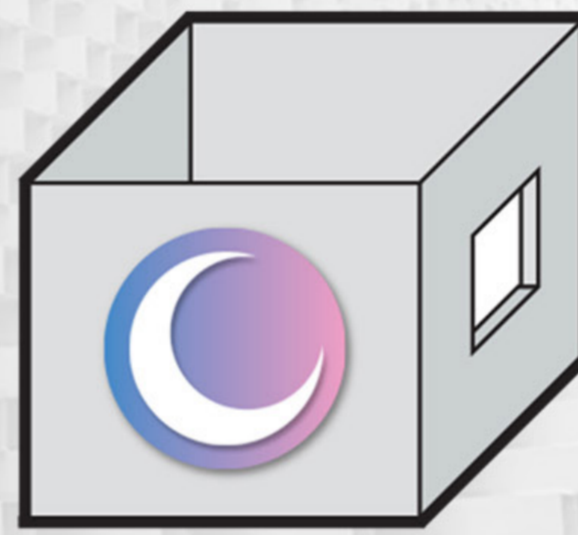 

MANAGE

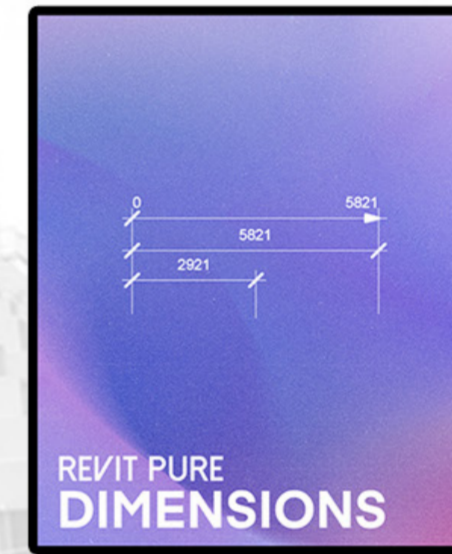 

BONUS:
DIMENSION

revitpure.com/bundle



REVIT PURE LIVE #036
NICOLAS CATELLIER